


1. Select Astra-G engine



2. Select special function



3. Select Program CAN configuration

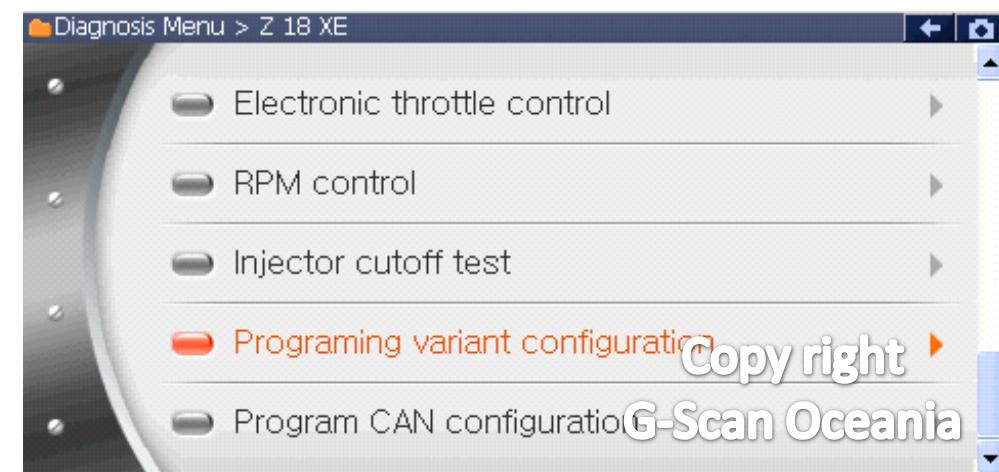

4. Touch the screen if you need to change.