



1. Select diesel engine

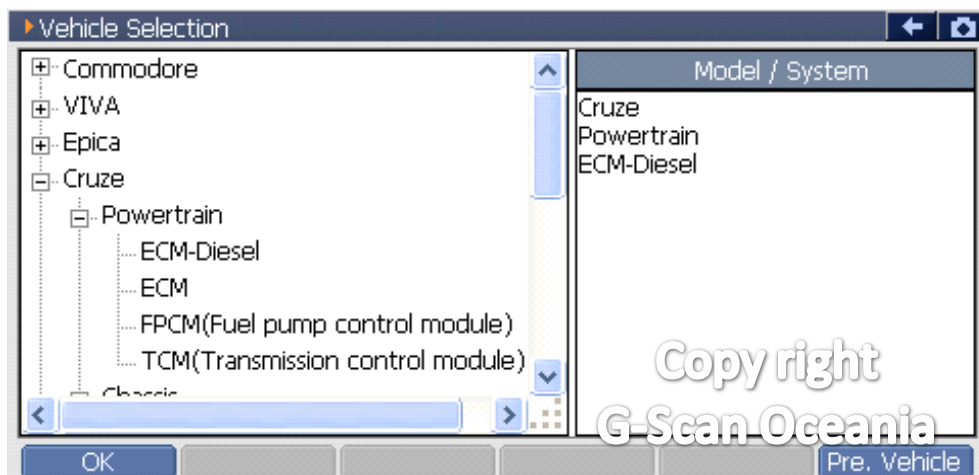


2. Select [Special function]



3. Select [DPF regeneration]

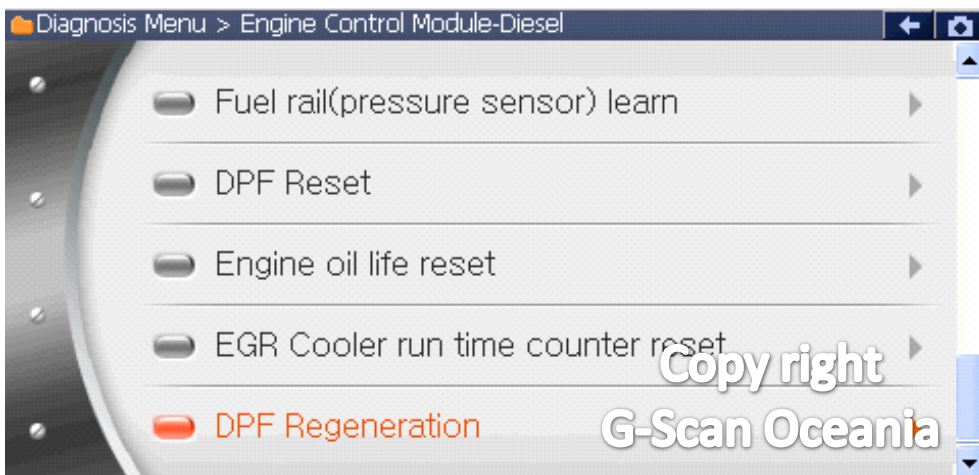

4. Check the precondition.

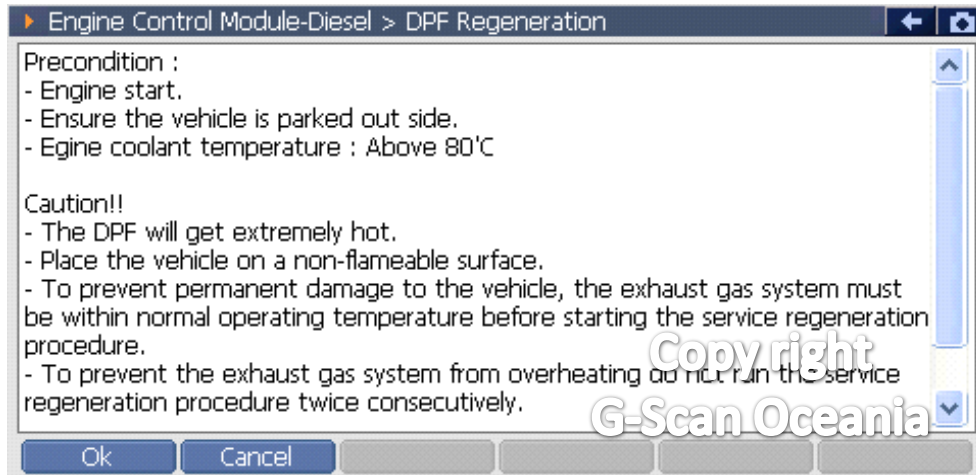

** Engine coolant temperature must be above 80'C!!.. Possible to check in [Data stream]

5. Regeneration start.



- ** If function is work, that will be automatic stop.
- ** Start the regeneration will make engine RPM to 3500 RPM.
- ** It take about above the 20 min.