1. Select [Incode calculator]



2. Select [Special function]



3. Select [Incode calculator]



4. Notice



5. Notice



6. Select incode type



7-1. Single incode

Incode calculator > Incode calculator	KEYBO			٥
Step 4 - Input outcode(6 digit) :	0	1	2	
	3	4	5	
	6	7	8	
	9	А	В	
	opy	ich	Ε	
Ok Cancel Cancel		Dgee	eller	

7-2. Dual incode

Incode calculator > Incode calculator	KEYBO			۵
Step 14 - Input outcode(6 digit) :	0	1	2	
	3	4	5	
	6	7	8	
	9	А	В	
	Cop	703	JĴĈ⊑	
Ok Cancel Cancel	scan	Oce	anie	

8-1. Single incode

Incode calculator > Incode calculator	+	Ō		
Step 5 -		~		
Incode #1:766D				
Incode #2 : 776D				
Note : - If incode #1 does not work, try incode #2. - Do not repeat this continuously or many times if unsuccessful.				
Press [OK] finish.				
Ok Cancel Cancel G-Scan Ocean	ne	ľ		

8-2. Dual incode

Incode calculator > Incode calculator	+ 0		
Step 15 -	~		
Incode #1 : 4823 - 6869			
Incode #2 : 4923 - 6969			
Note : - If incode #1 does not work, try incode #2. - Do not repeat this continuously or many times if unsuccessful.			
Press [OK] finish.	Copy right		
Ok Cancel Cancel	G-Scan Oceania		