




1. Select engine.

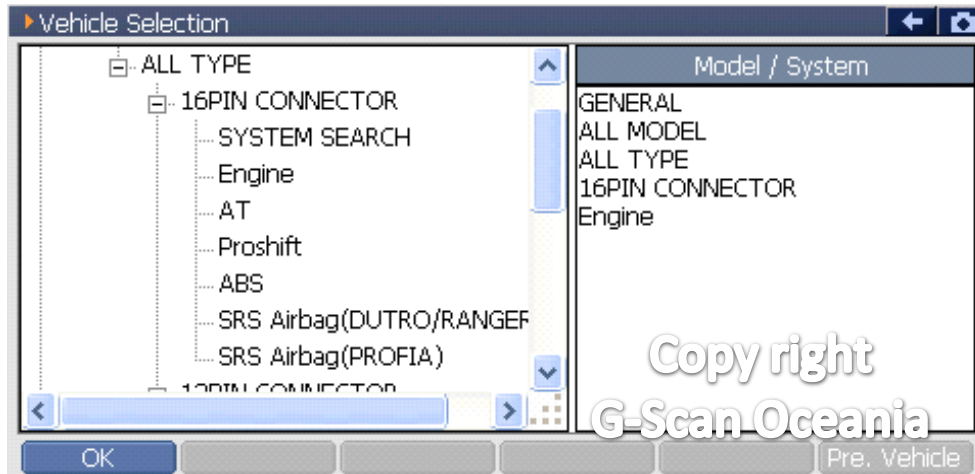

2. Select special function

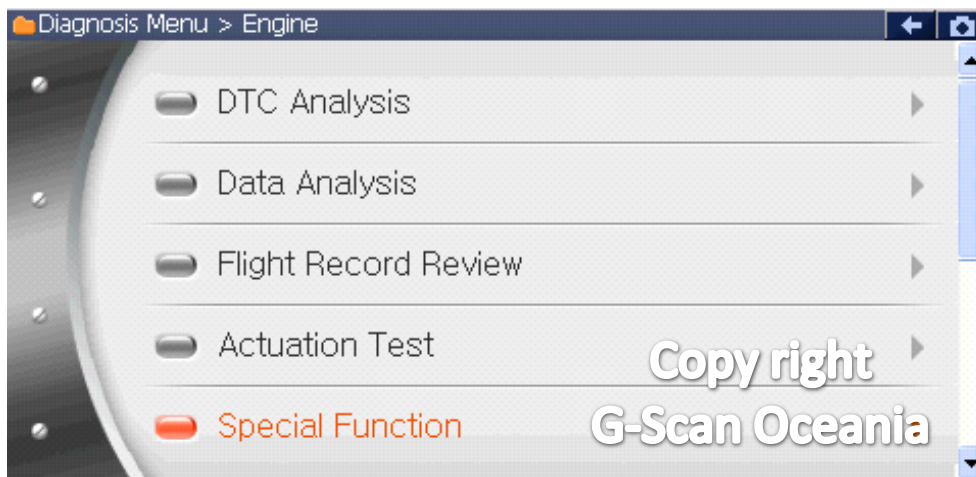

3. Select reset all DPR status

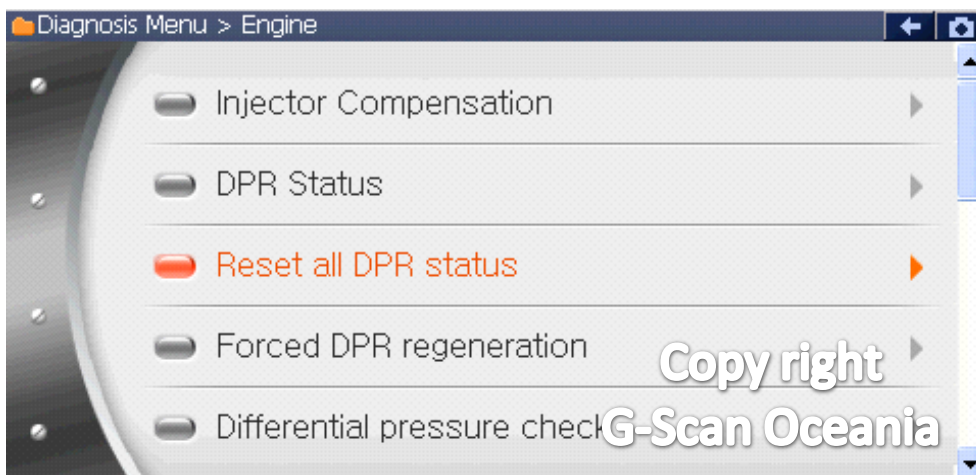

4. Preconditions

