


You have to perform "VSA SENSOR NEUTRAL POSITION MEMORIZATION" Under the following circumstances.

- Disassembly of any sensors
- VSA Unit replacement
- Completing a wheel alignment
- If there is a Stored DTC : 84-1


1. Select International > then Passenger Car > ALL MODEL  
> 16PIN CONNECTOR > ABS > VSA




2. Select special function

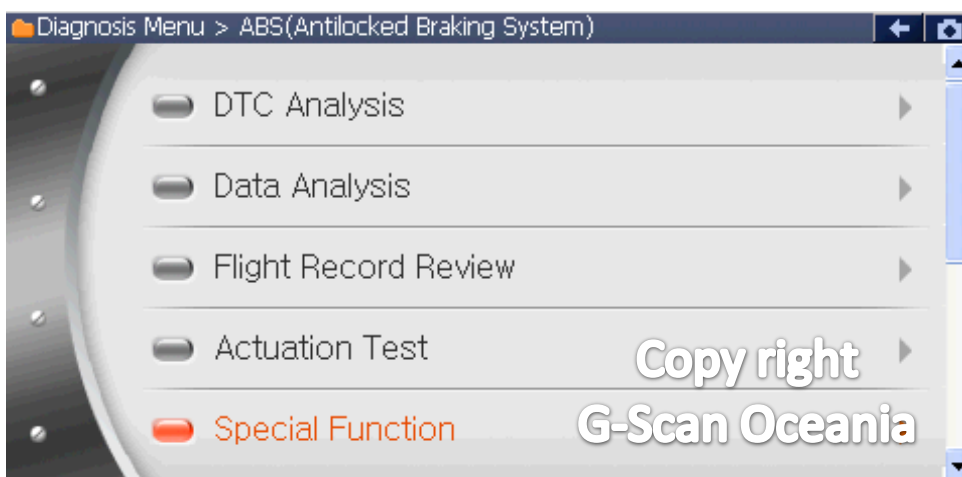


### 3. Select VSA SENSOR NEUTRAL POSITION MEMORIZATION

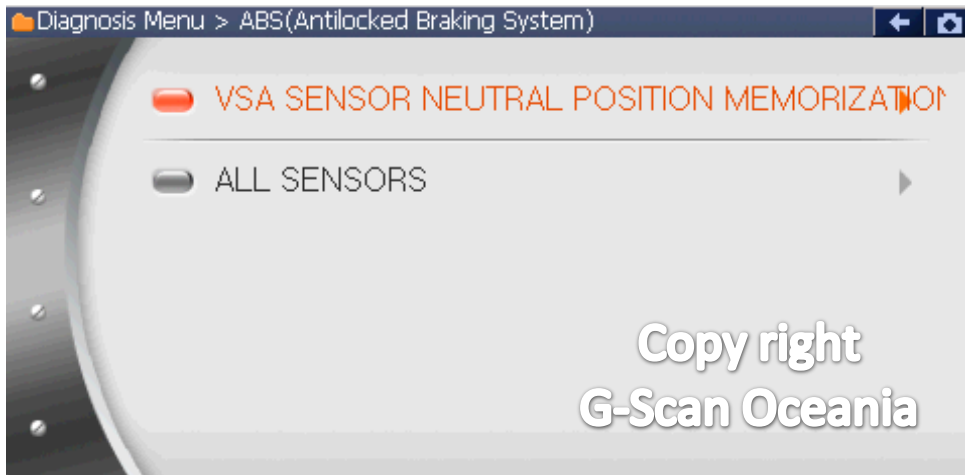


### 4. Info

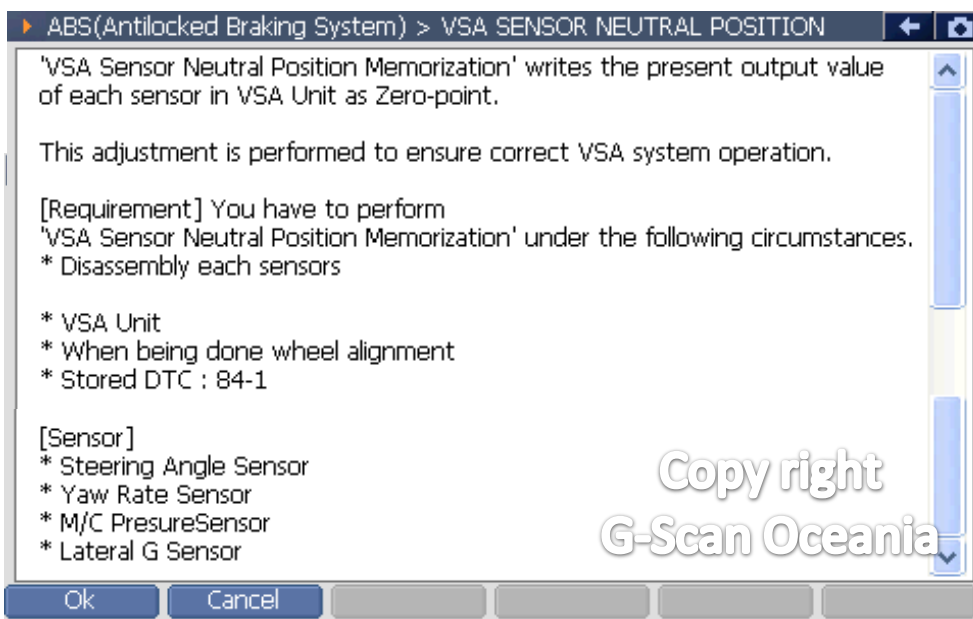

### 5. Test Condition

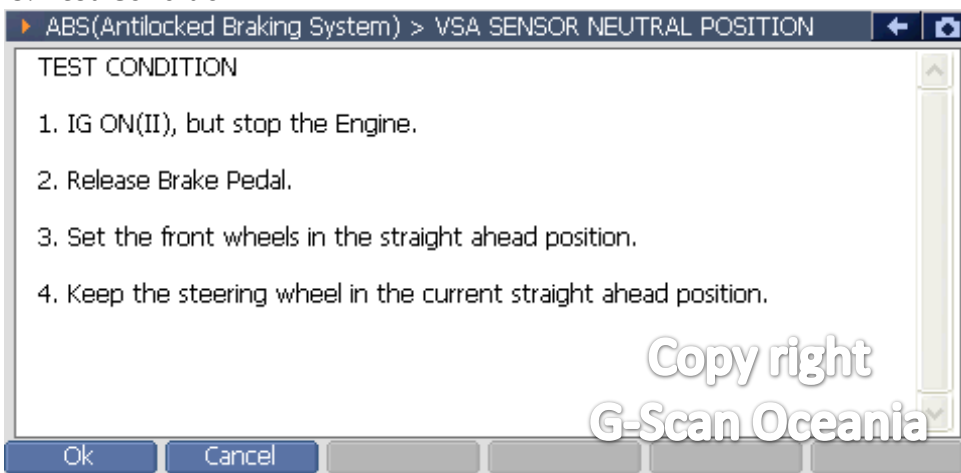

6. Complete

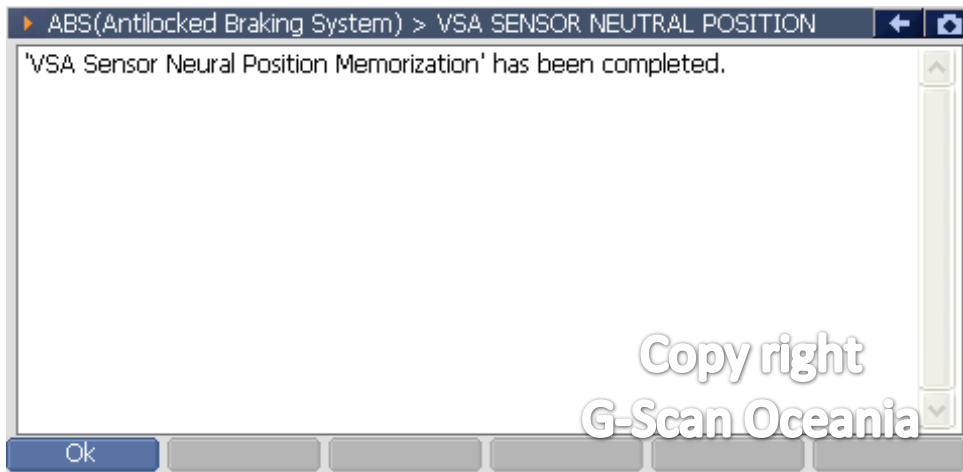

7. After operating this function, IG OFF and IG on

