



1. Select the 4JJ1-TC




2. Select the [Special function]

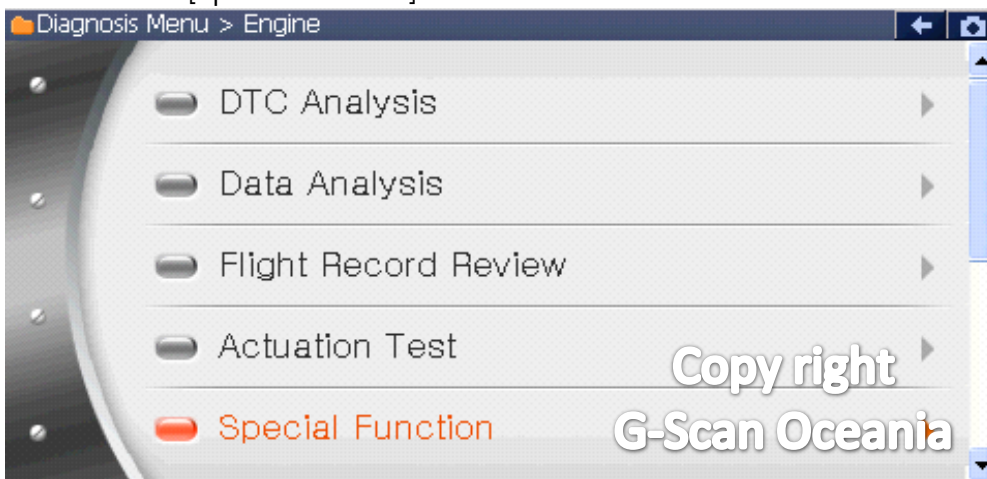

3. Select [DPD slow regeneration control]

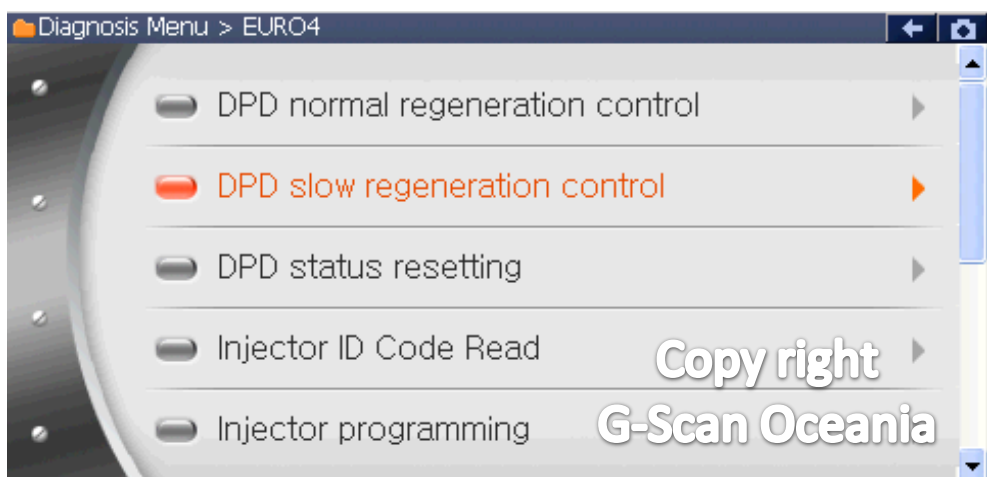


4. Press [OK] to continue

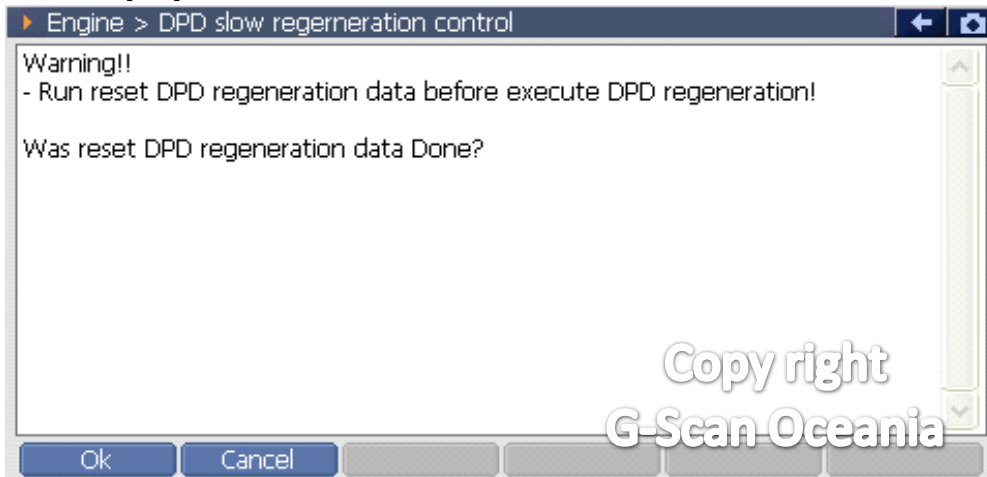


**\*\* Before regeneration can be performed, DPD status resetting must be completed first.**

5. Check the preconditions are met

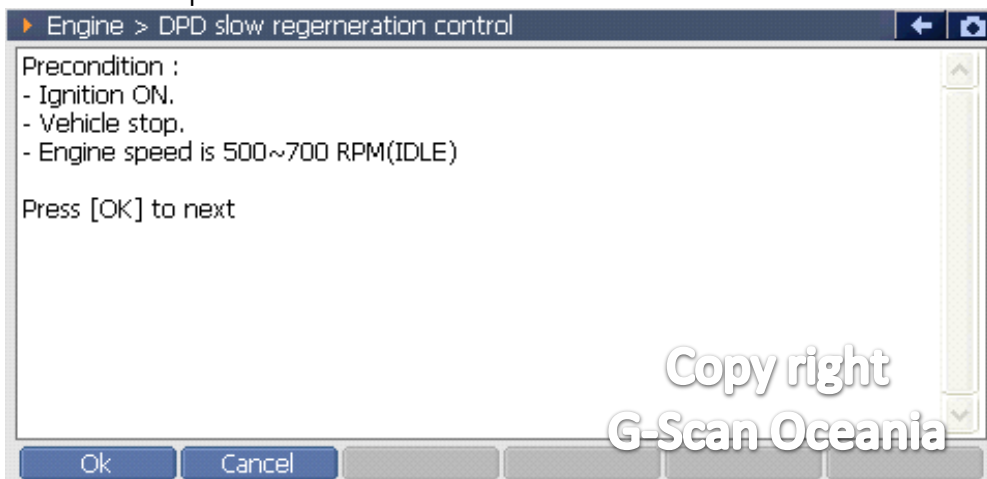


6. Notice

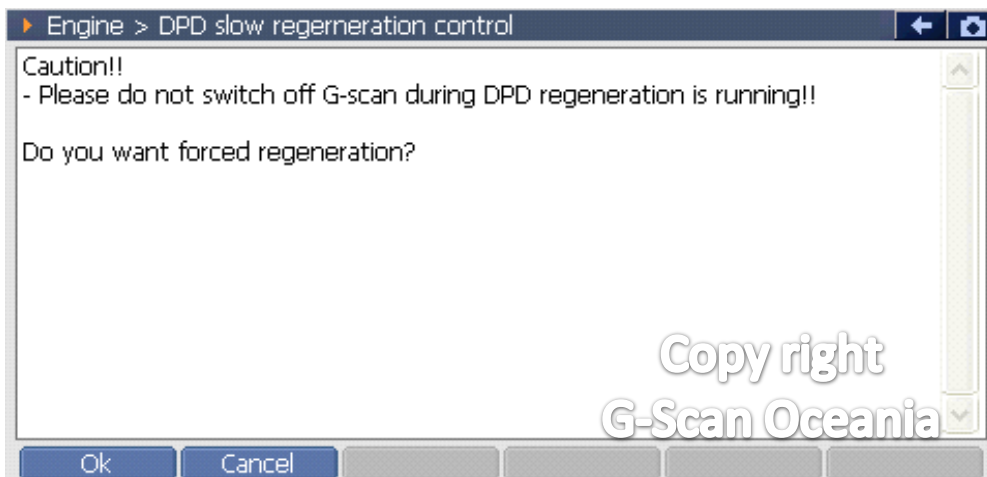

**\*\* During the regeneration, don't turn off the G-scan.**

## 7. Starting the regeneration function.

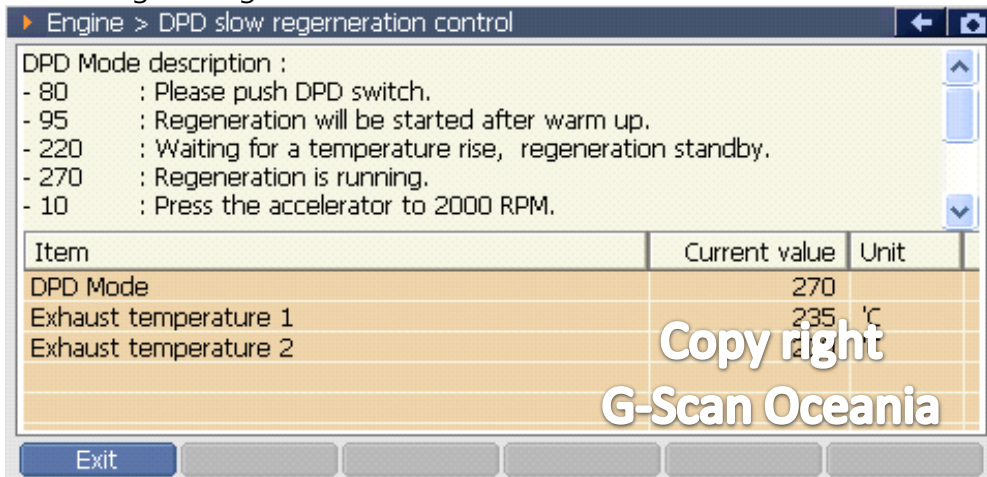

**\*\* Follow the [DPD] mode values description.**

80 Push the DPD switch. -> In the instrument cluster, the DPD lamp will now be flashing.

95 Regeneration will start after warm up. -> Engine speed is faster than idle speed.

220 Waiting for a temperature rise. -> Regeneration is in standby mode.

270 Regeneration running. -> Regeneration start.

10 Regeneration is finished. You now must press the accelerator to increase engine speed above 2000 RPM and release. -> The mode status will become normal.

20 Waiting with engine at idle speed. -> Idle speed and temperature is down.

30 Regeneration is complete. -> Complete, Press [Exit] button.

**\*\* If at any time you want to stop the regeneration, press the accelerator to increase engine speed above 2000RPM and release. The DPD mode will return to [80], after ignition off and on, the status will display normal.**