


1. Select the EURO5




2. Select the [Special function]




3. Select the [Engine oil exchange reset]

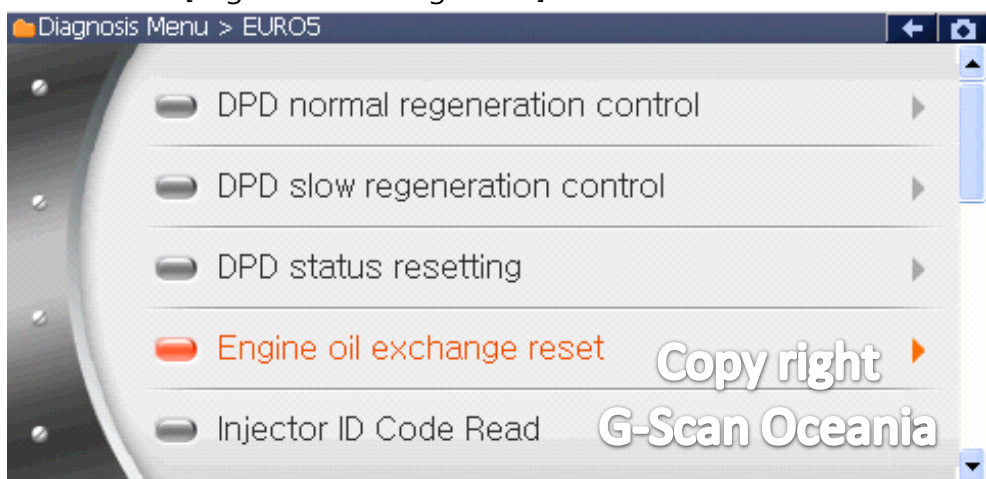

4. Press [OK] to continue

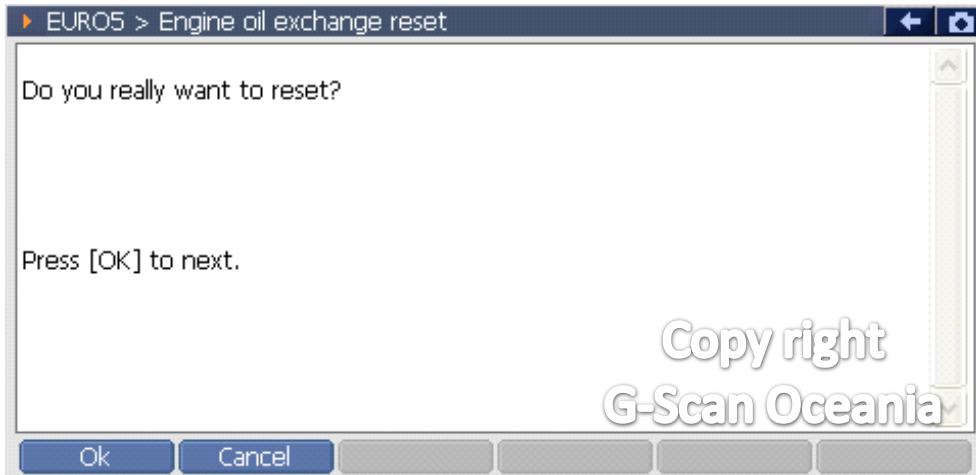


5. Turn ignition off

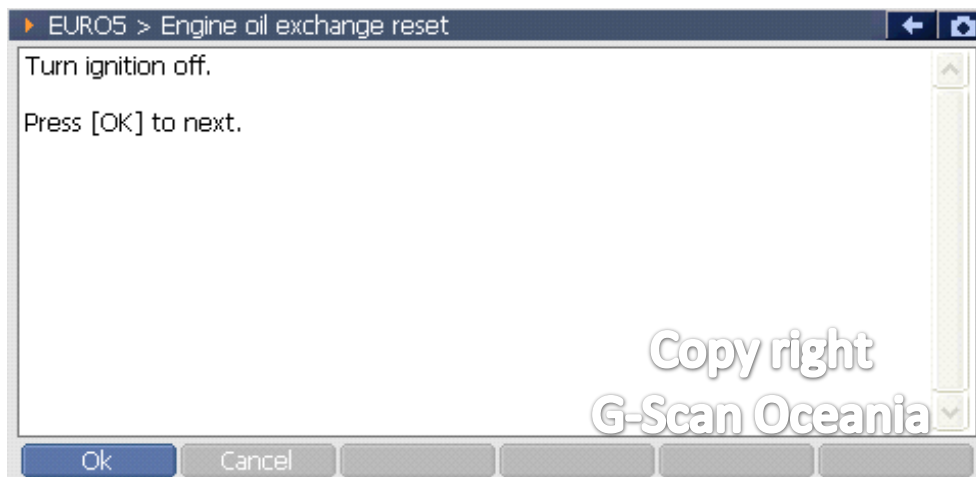

**** After pressing the [OK] button, wait about 5 seconds for resetting to complete.**

6. Turn ignition on

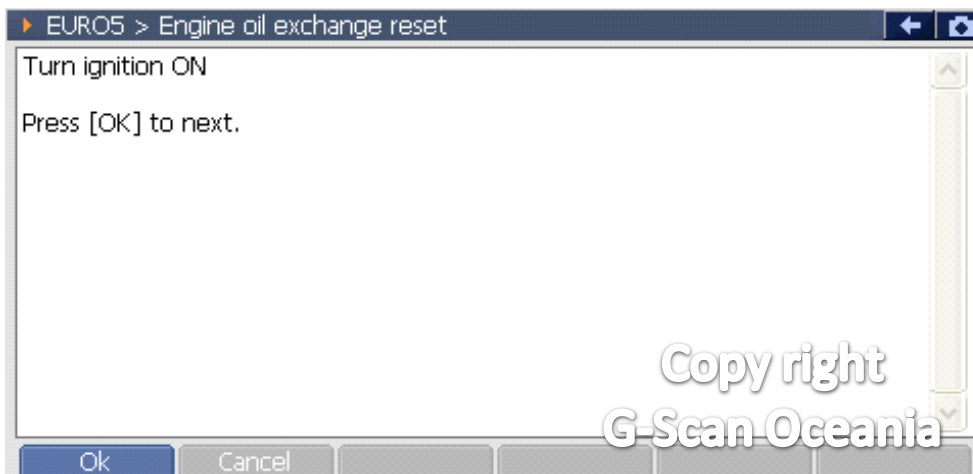

7. Complete.