1. Select the EURO5



## 2. Select the [Special function]



## 3. Select the function [Injector programming]



#### 4. Press [OK] to continue



#### 5. Check the current Injector code



### \*\* Select the injector number that you want to modify.

#### 6. Enter the new Injector code

EURO5 > Injector programming	KEYBOARD					
Input ID code :	0	1	2	3	4	
	5	6	7	8	9	
	А	В	С	D	E	
	F	G	н	Ι	J	
	К	L	М	N	0	
	Р	8	R	S	Т	
	U	99		Ru	Y	
Ok Cancel F3 F	9	SCE	nC	CE	JUE	5

# 7. Confirm the Injector code



8. Complete.