


1. Select the EURO5




2. Select the [Special function]



3. Select the function [Supply pump initialization]

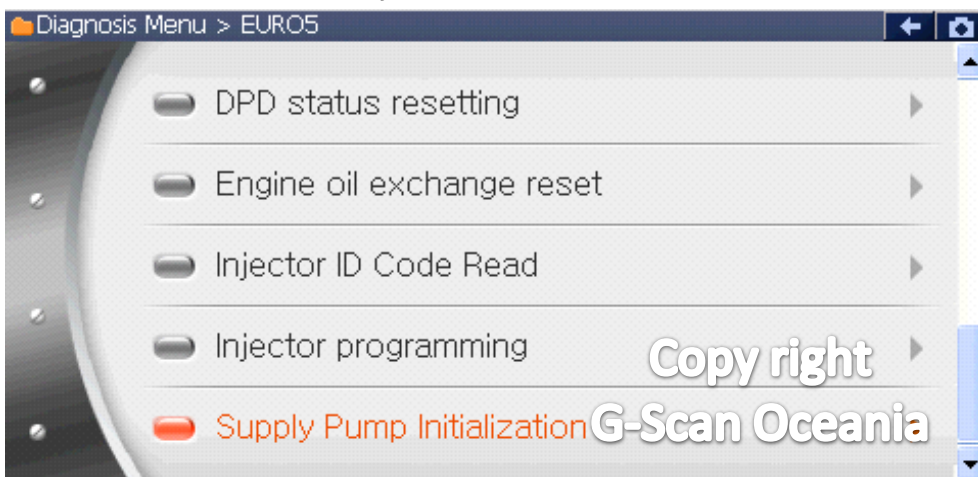

4. Press [OK] to continue

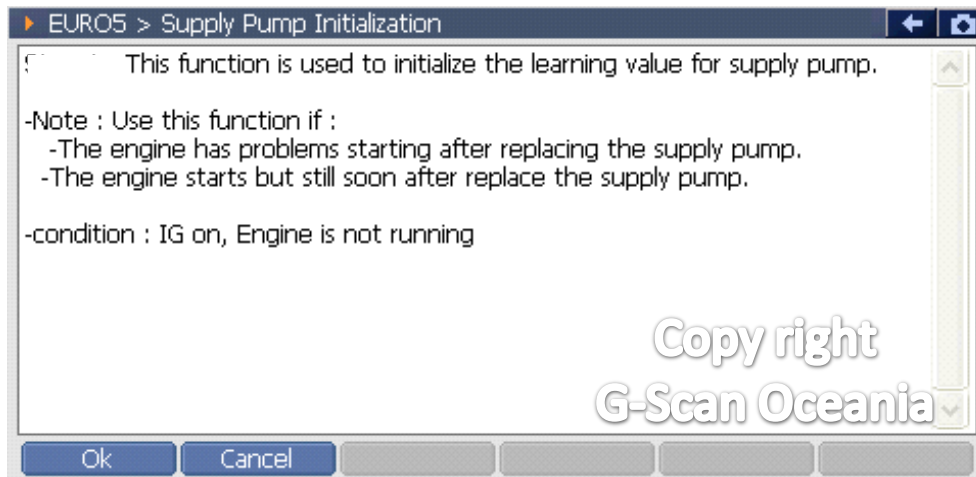

7. Complete.