



1. Select [Steering angle sensor]

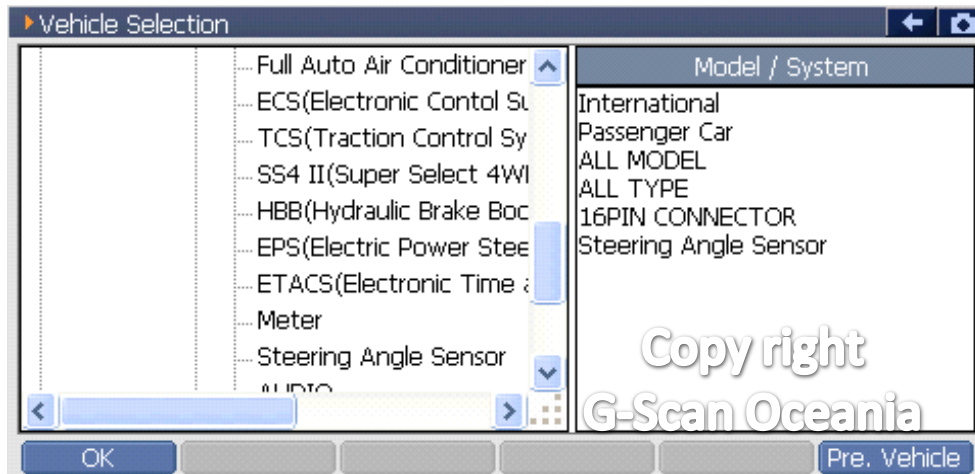


2. Select [Special function]

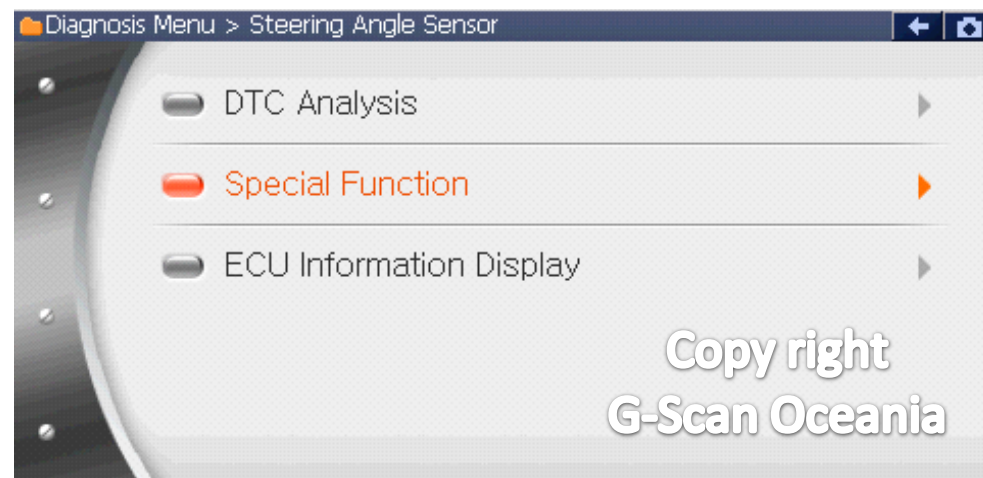

3. Select [Steering angle sensor initialization]



4. Confirm the replacement is complete

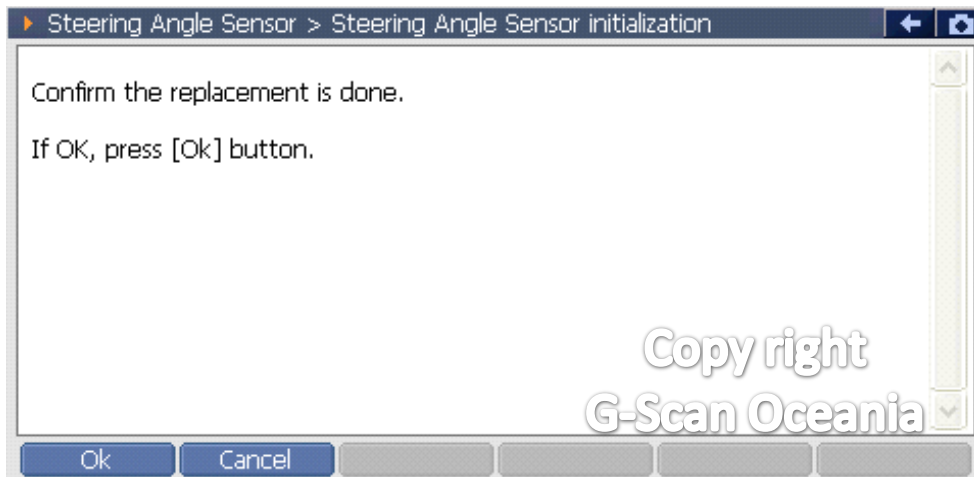

**** This procedure takes about 10 sec.**

5. The function is successful.



6. After initialization, Turn IG OFF and wait 30 sec, IG ON. The function will be finished.



