



1. Select [International] > [Passenger car] > [ALL MODEL] > [ALL TYPE]  
> [16PIN CONNECTOR] > [Steering angle sensor]

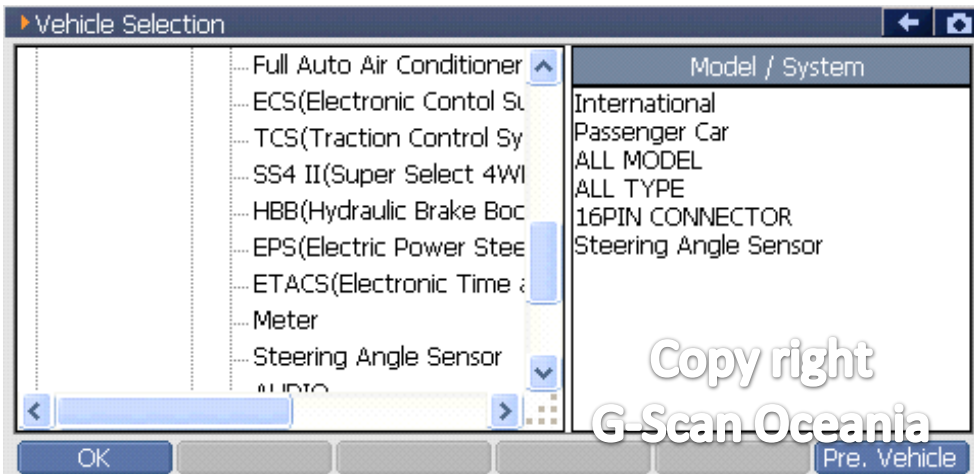


2. Select [Special function]

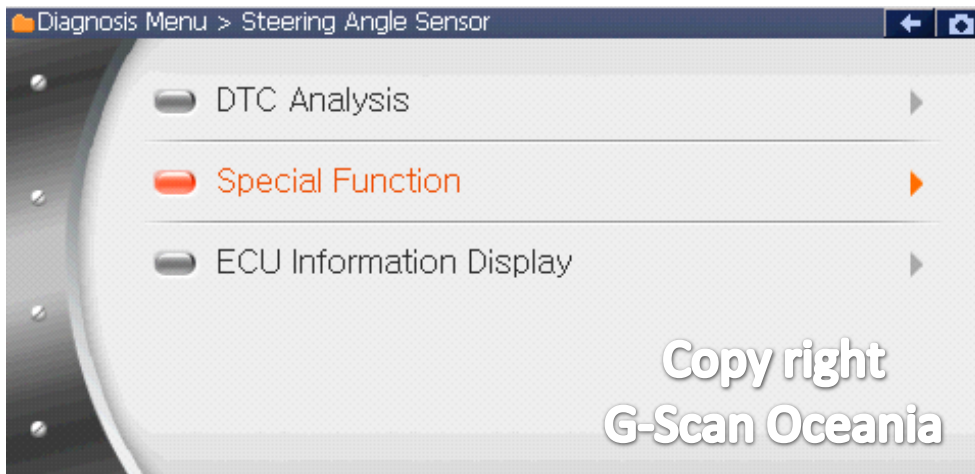

3. Select [Steering angle sensor initialization]




4. Confirm the work is completed and initialisation is required.

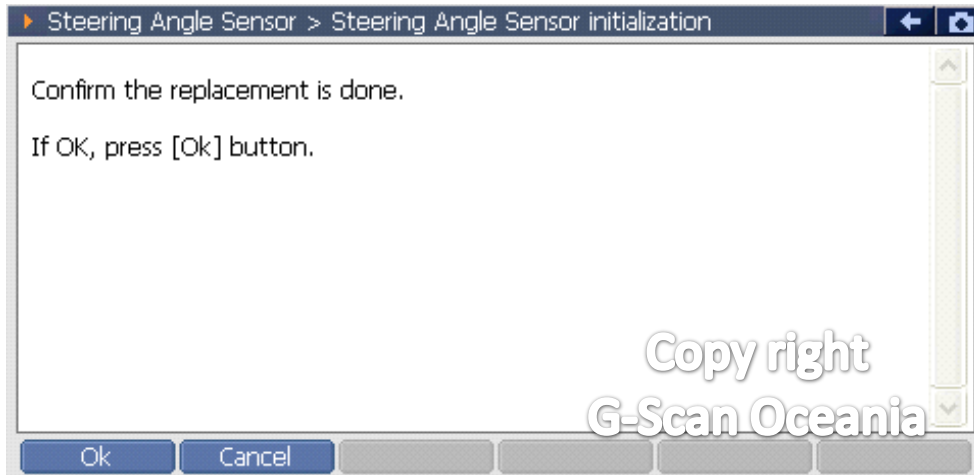

**\*\* This procedure takes about 10 sec.**

5. The function has been successful.

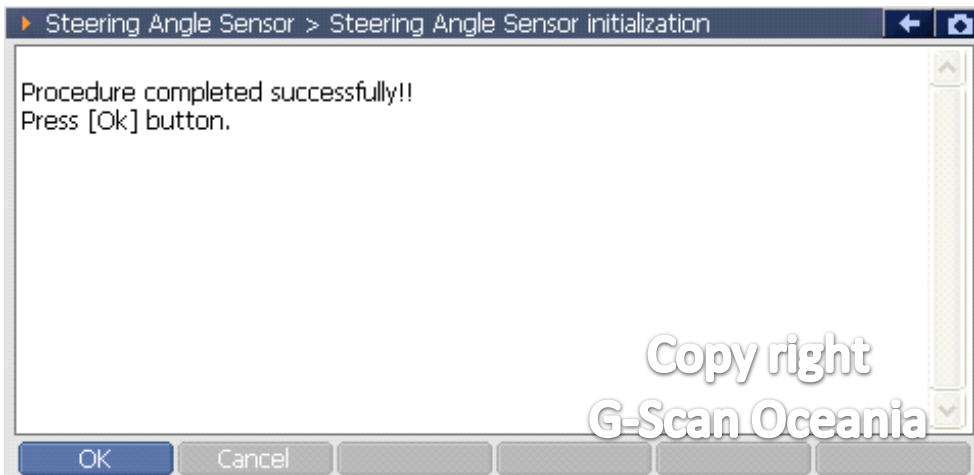

6. After initialization, Turn IGN OFF and wait 30 sec, turn IGN ON.  
The function will be completed.

