




1. Select [International] > [Passenger car] > [ALL MODEL] > [ALL TYPE]
> [16PIN CONNECTOR] > [Steering angle sensor]

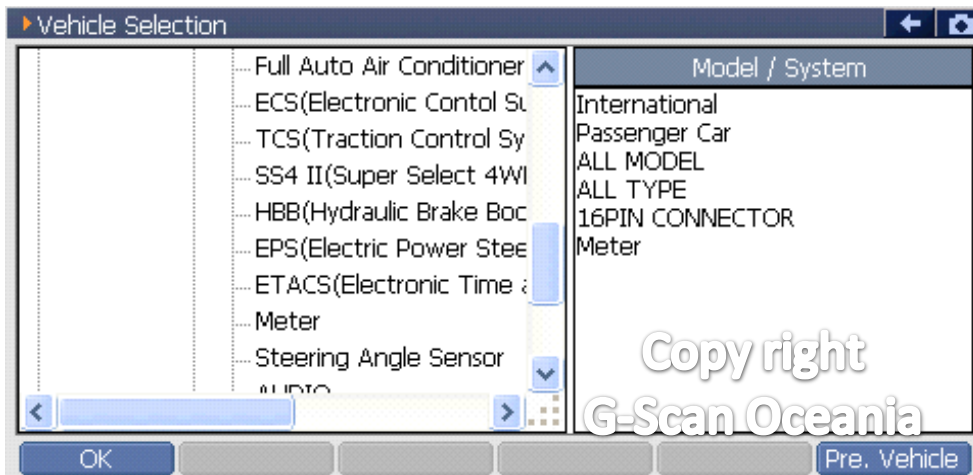

2. Select [Special function]

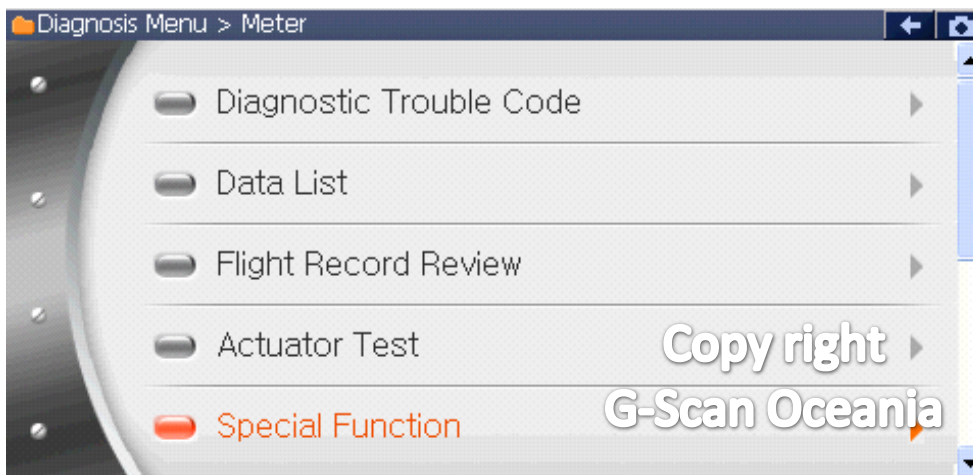


3. Select [Reminder reset(Indicator off)]

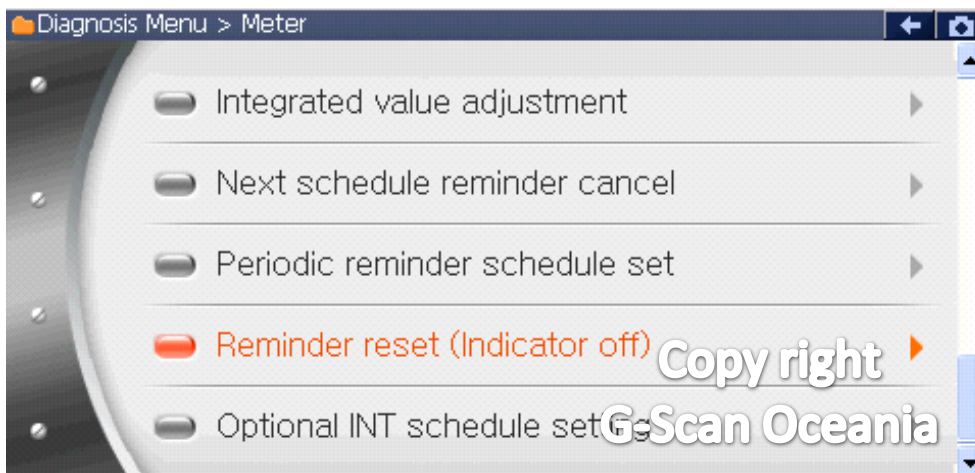

4. G-scan shows the current service reminder values.



5. Notice about the function.

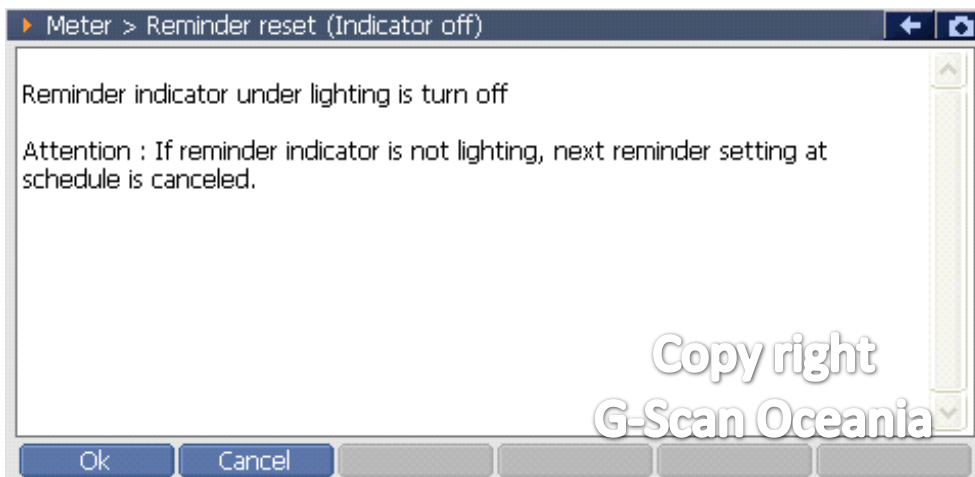

6. Complete.

