


1. Select [Special function]




2. Select [Calibration after parts removal or replacement]




3. Notice.

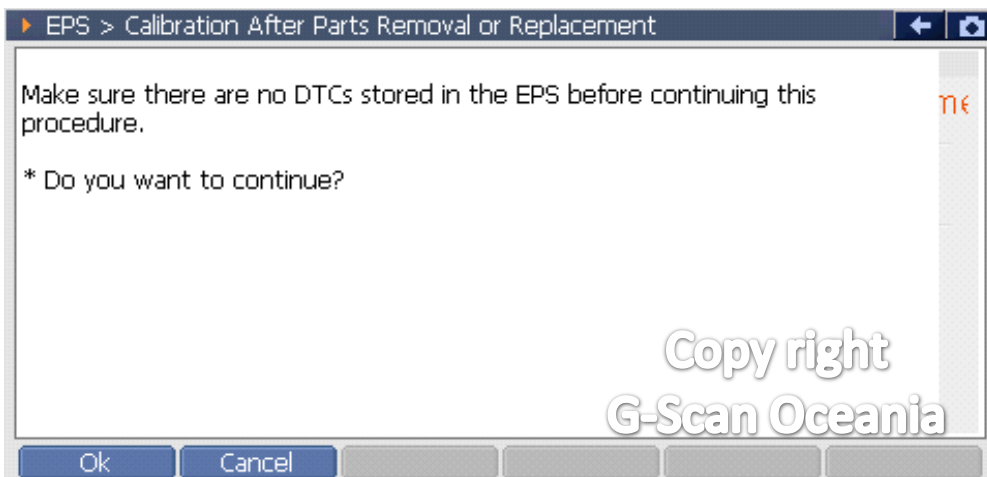

4. Start the engine

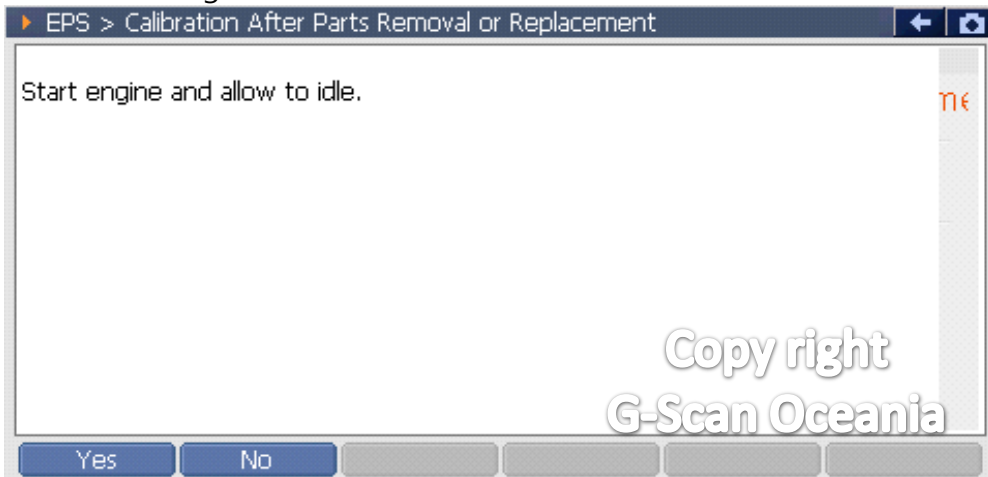


5. EPS Warning lamp Blinking

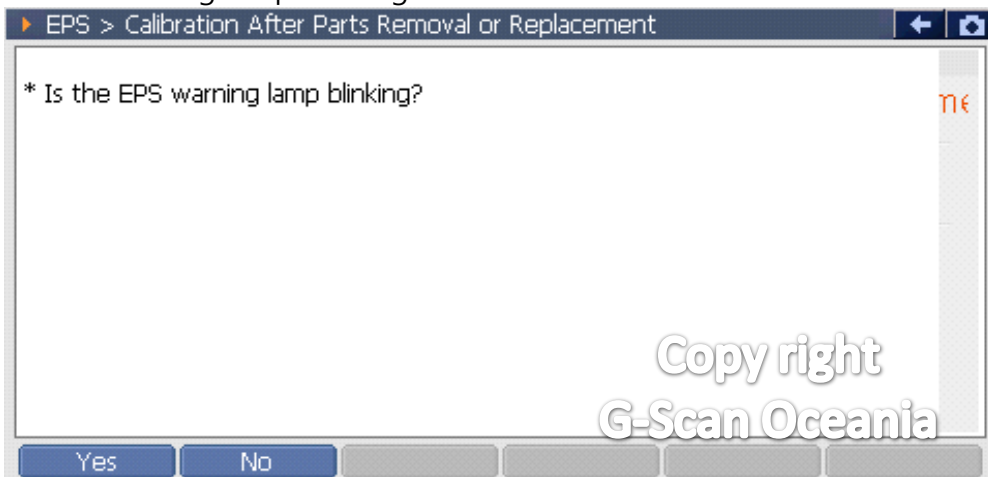

** EPS lamp will be flashing, located near the tachometer as in the picture.




6. Turn the steering wheel .

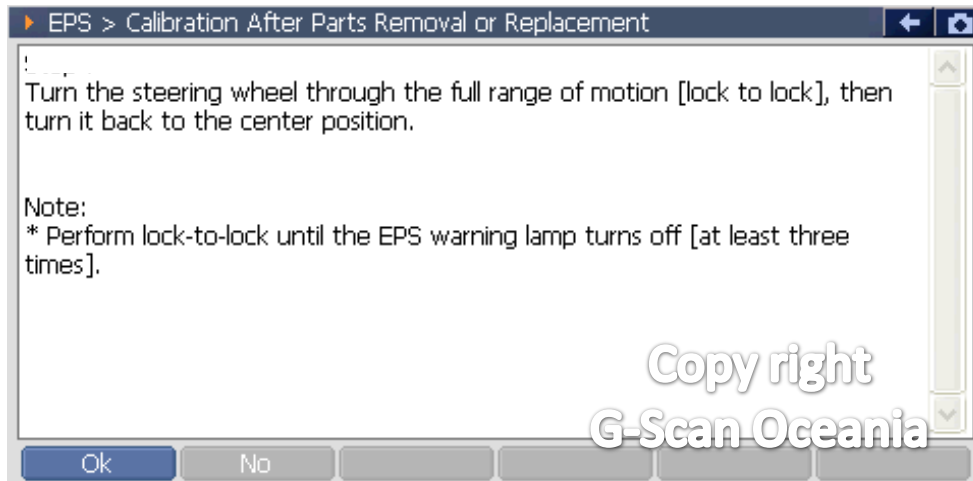


**** If you turn the steering wheel to the right end then to left end, the lamp will stop flashing.**

7. Notice.

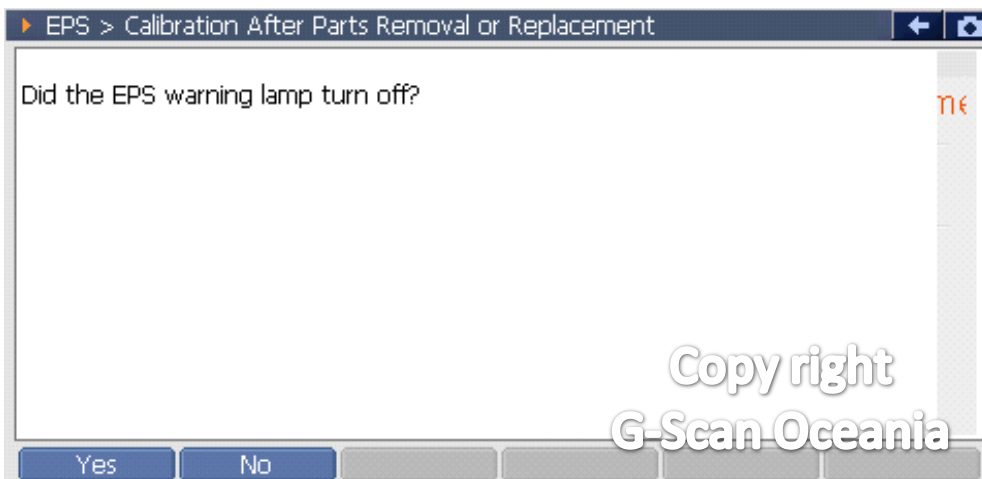


**** In some cars the lamp will not turn off, just check it has now stopped flashing.**

8. Ignition off

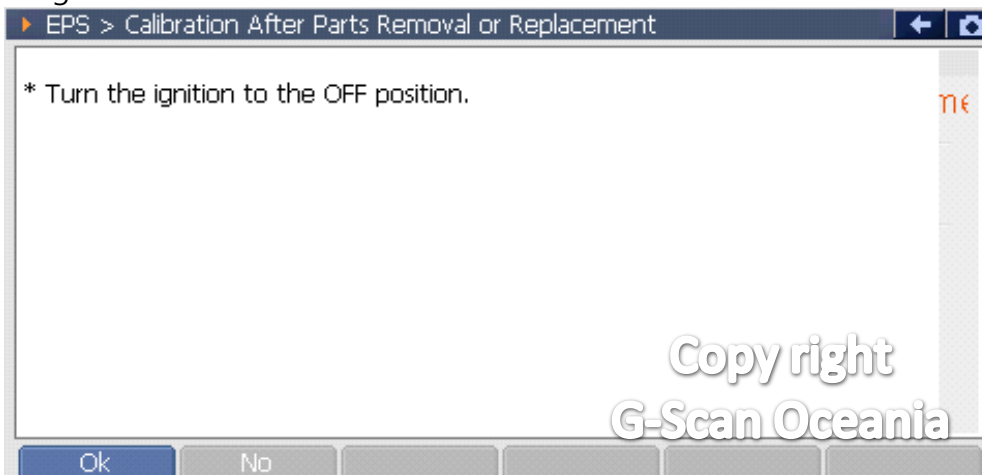

9. Ignition on.

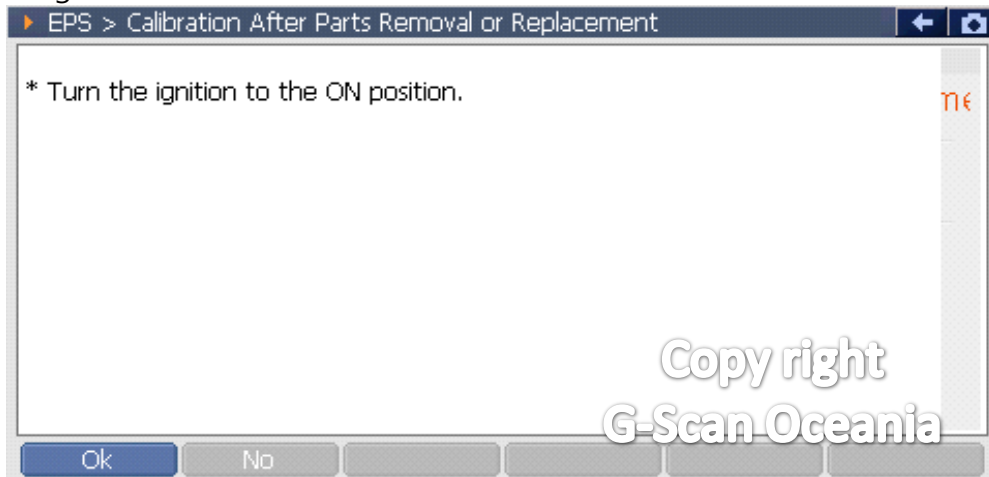

10. Complete.



**** After this function has completed, the EPS lamp is will now be turned off.**