

Mazda Electronic Parking Brake

Maintenance Mode

Enter Maintenance Mode

1. Switch the ignition ON (engine off). (i.e. press the start button TWICE)
 2. Release the electric parking brake. (to release the parking brake, you have to have your foot on the brake pedal, then press down on EPB switch to release it, you will hear the motor releasing and the light on the EPB switch light goes off)
- after step 2, release foot from brake pedal, and press accelerator pedal down fully and press down on the EPB switch at the same time and hold, then press the start button 3 times quickly, you will hear the park brake motor moving and the yellow parking brake with exclamation point light up, you are now in maintenance mode.

IMPORTANT NOTE: If the piston is pushed into the caliper while rotating the piston, the caliper internal components could be damaged. Be careful not to rotate the piston when pushing the piston into the caliper. Use special disc brake expander tool Part # 49 0221 600C

End Maintenance Mode

1. Switch the ignition ON (engine off). i.e. press the start button TWICE
- press accelerator pedal down fully and pull up on the EPB switch at the same time and hold, then press the start button 3 times quickly, you will hear the motor moving back and the yellow parking brake with exclamation point goes off.

Now to test, you can press on the brake pedal and pull up the EPB switch, you will see the normal red brake light appear as normal.