


1. Select 2.8L Diesel(LWH)

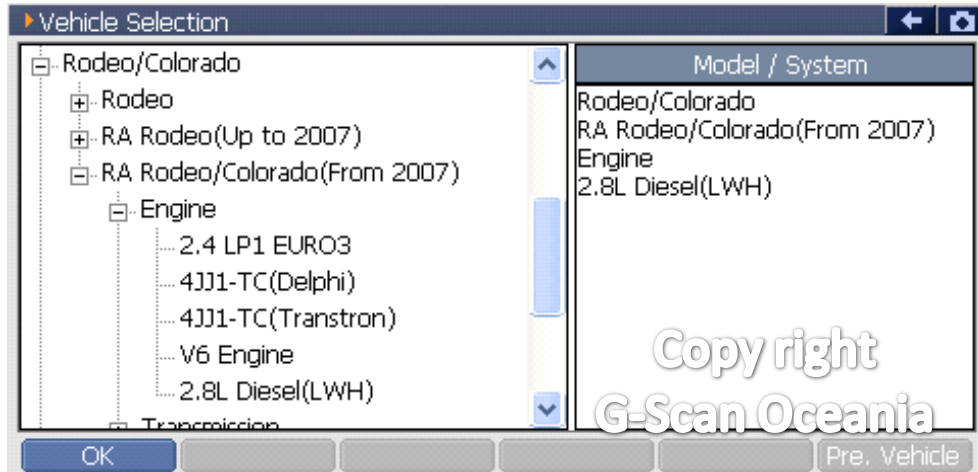


2. Select special function



3. Select Fuel rail pressure sensor(Fuel rail) learn



4. Preconditions

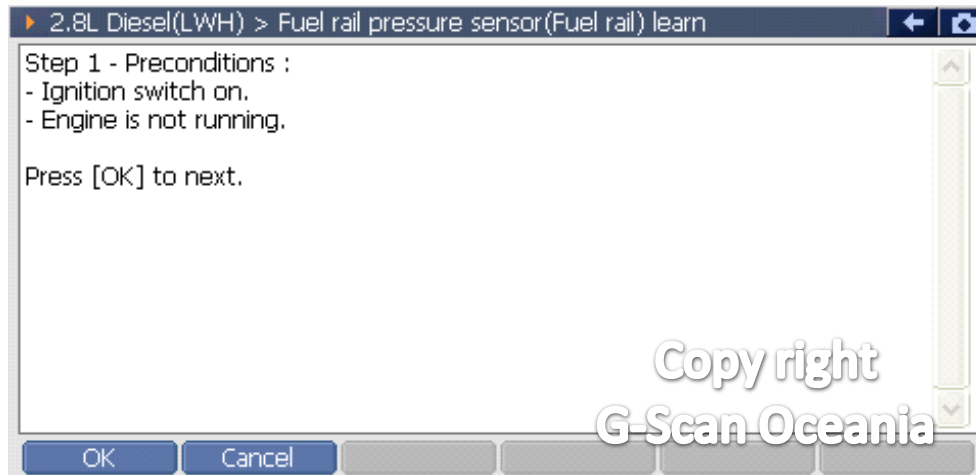

5. Turn IG. Off



6. Turn IG. On

