


1. Select [Intelligent key ID Register]

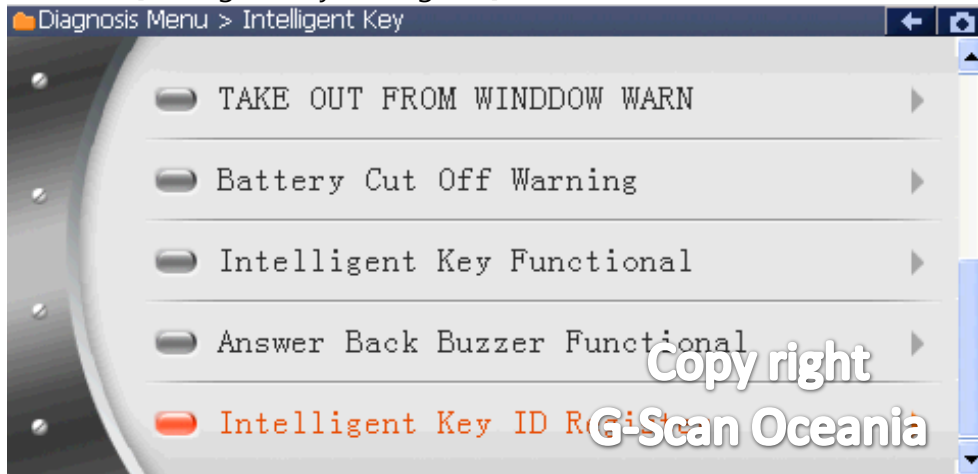

2. Notice



** During the next step, you should push a button of the intelligent key to be registered.

3. Complete



** You can register a maximum of 4 keys.

** There is no "Erase keys" function.