


1. Select [BCM(Body control module)]



2. Select subsystem [BCM]



3. Select [ECU Information Display]

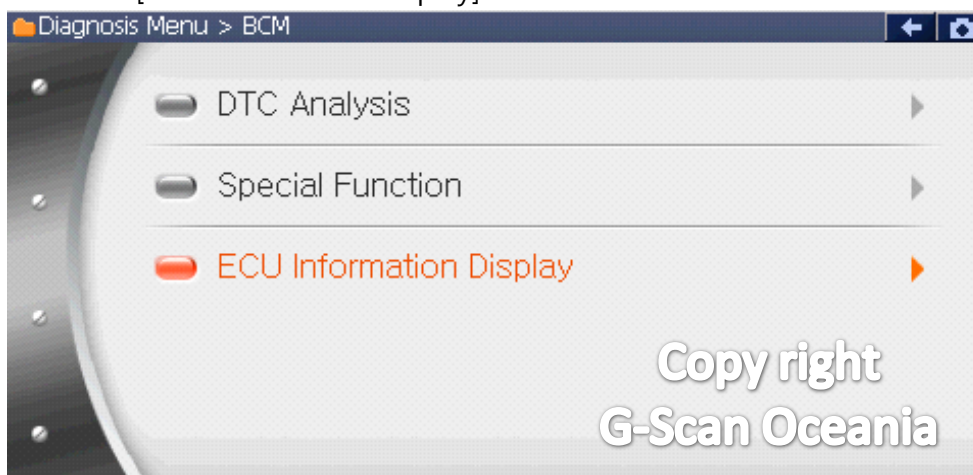

4. Confirm [PIN Code Read]

