

1. Select [BCM(Body control module)]




2. Select subsystem [BCM\_Keyless Entry]




\*\* Depending on the vehicle's options, it is possible there is a subsystem "Intelligent key".


3. Select [Special Function]

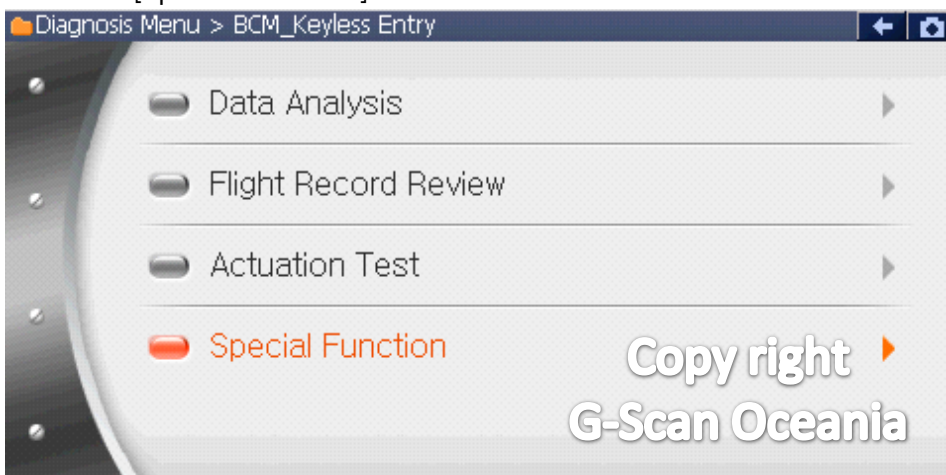

4. Select [REMO CONT ID Erasur]

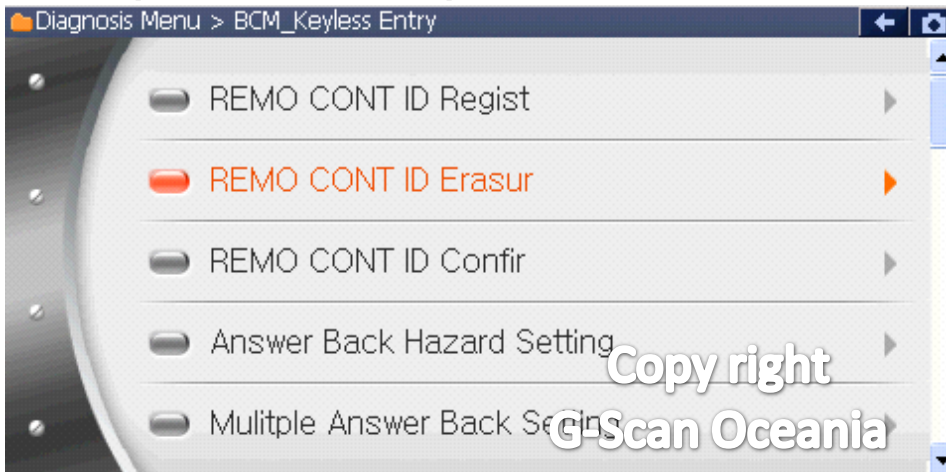

5. Confirm registered remote ID.

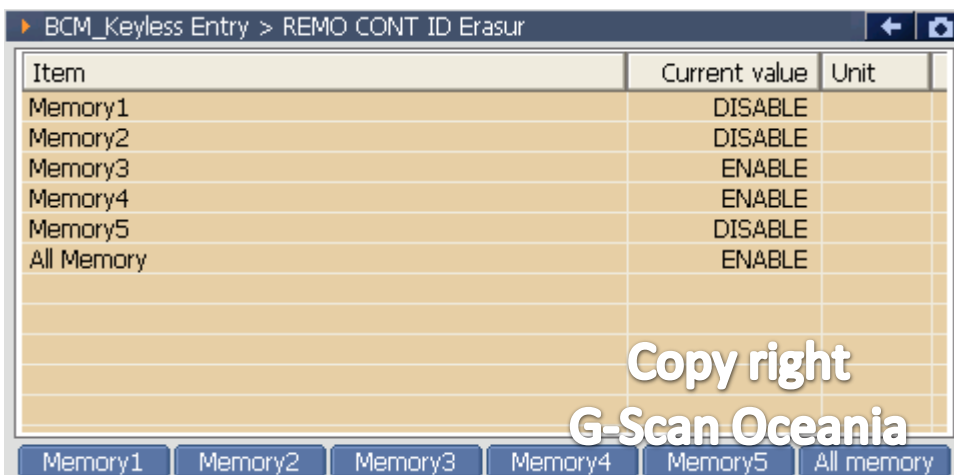

6. Choose Remote number.

