


1. Select [BCM(Body control module)]




2. Select subsystem [BCM_Keyless Entry]

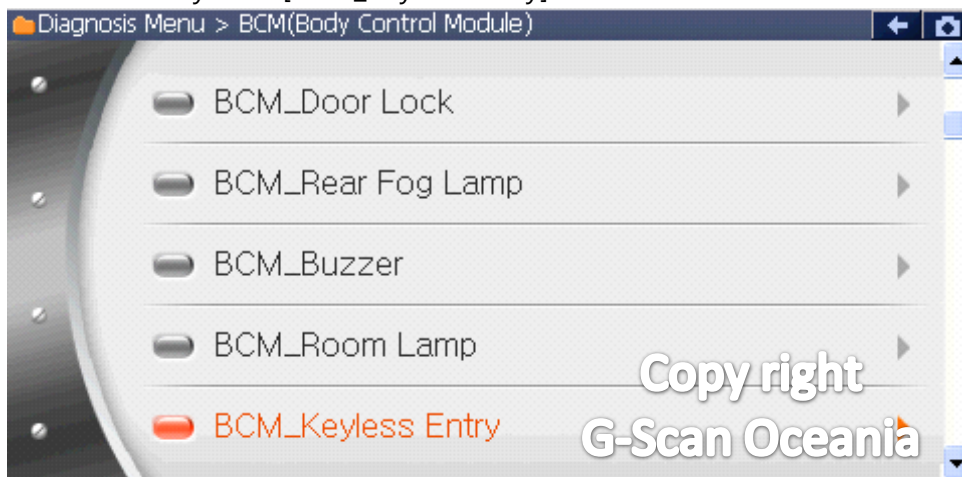


** Depending on the vehicle's options, it is possible there is a subsystem "Intelligent key".


3. Select [Special Function]

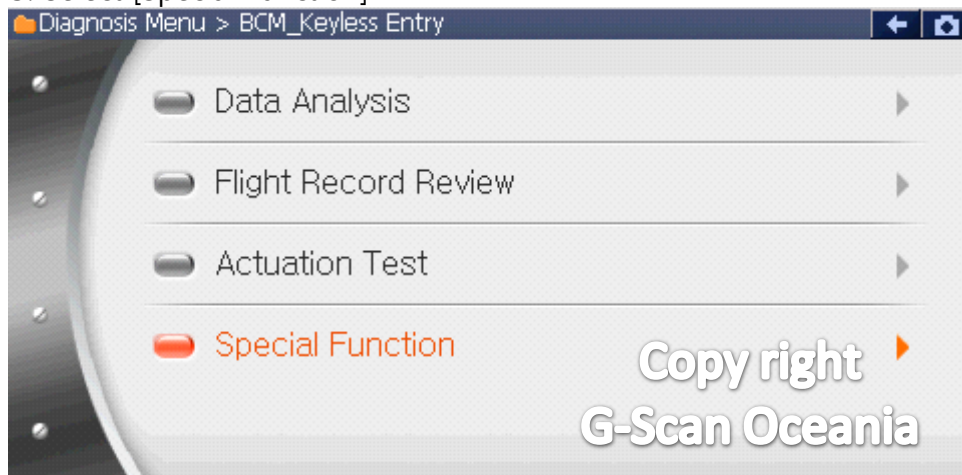

4. Select [REMO CONT ID Regist]

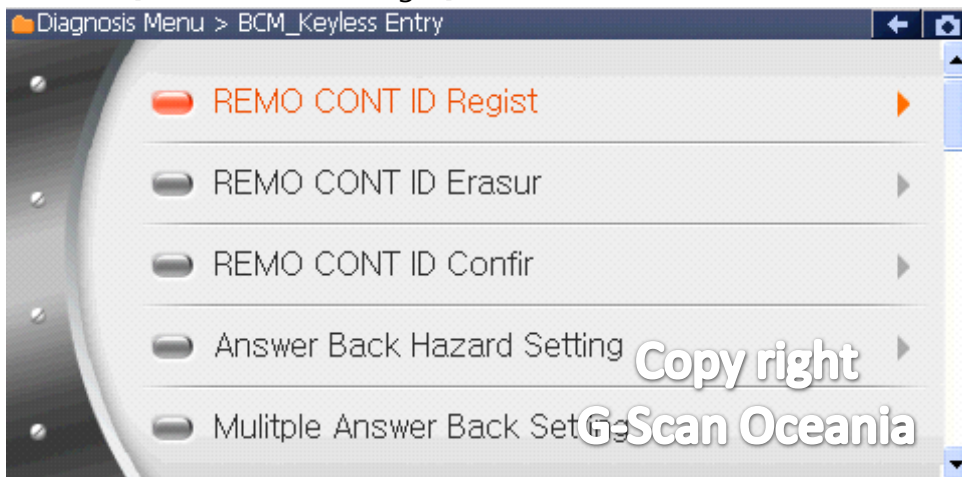

5. Notice

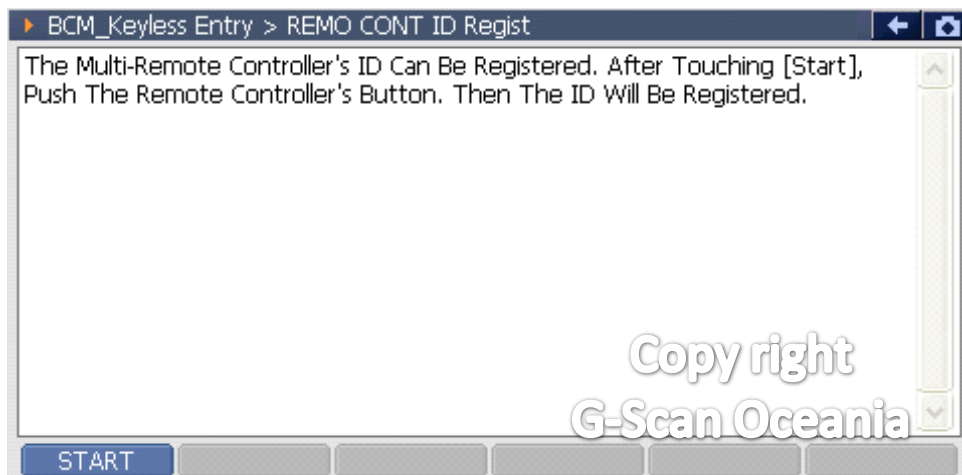

6. Push remote button.

