




1. Select General>ALL>16 pin connector>00->Engine

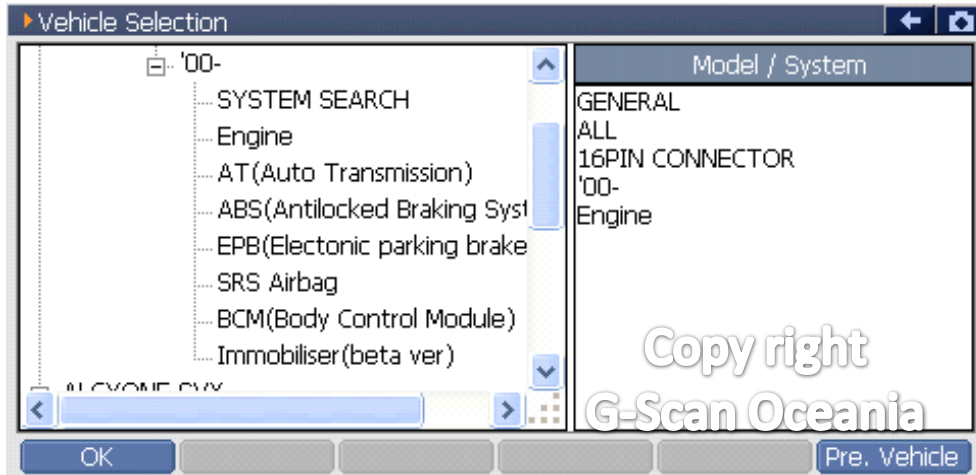


2. Select [Special function]

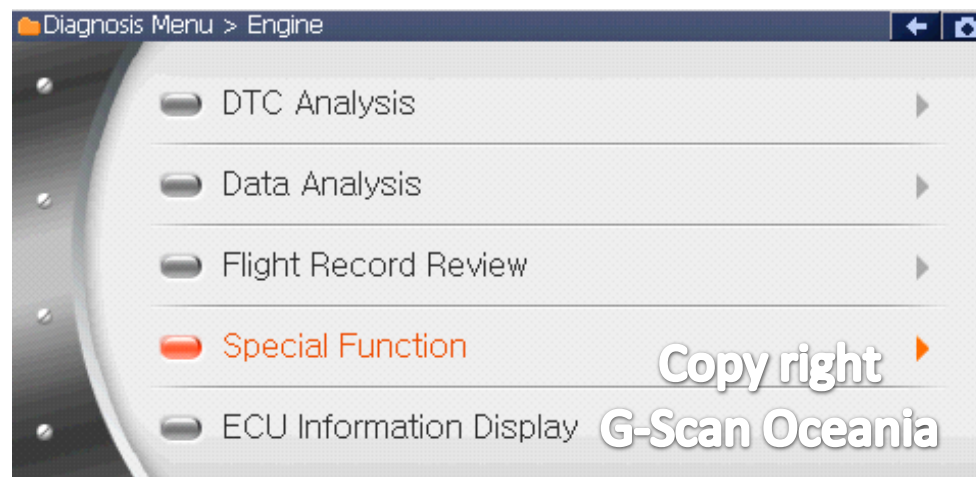

3. Select [Dealer check mode procedure]

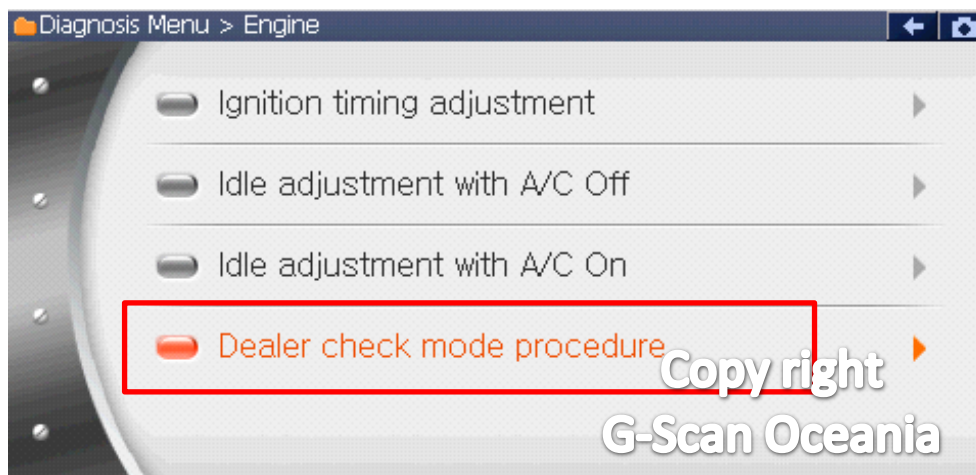

#### 4. Notice

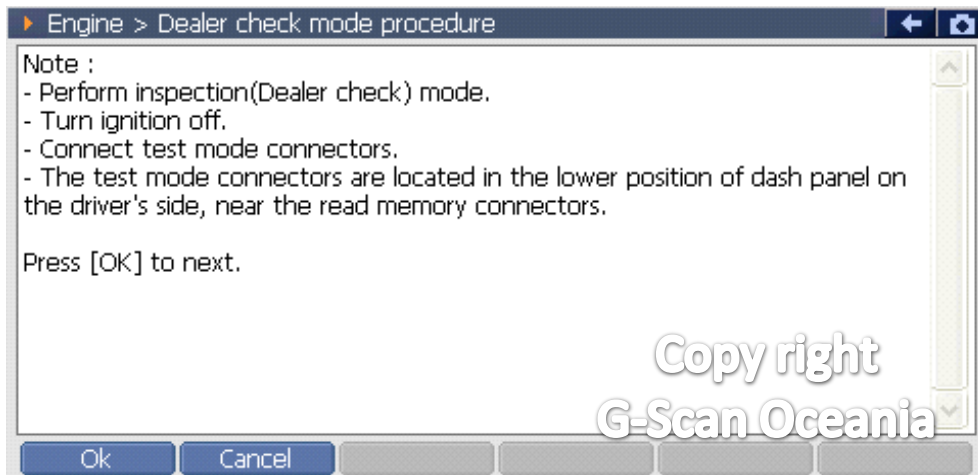


- The vehicle's [Test mode connectors] or [Test mode fuse] must be connected to complete this function successfully!!


#### 5. Preconditions




#### 6. Flashing check

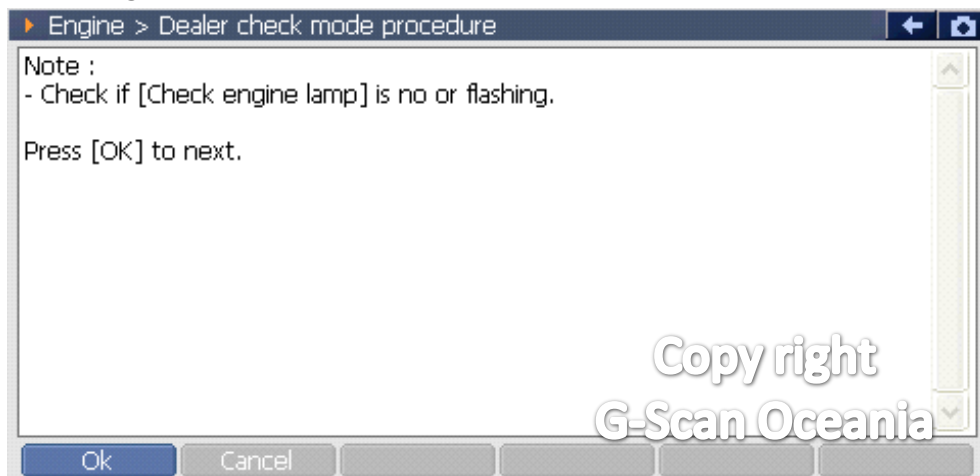


7. Solenoid check

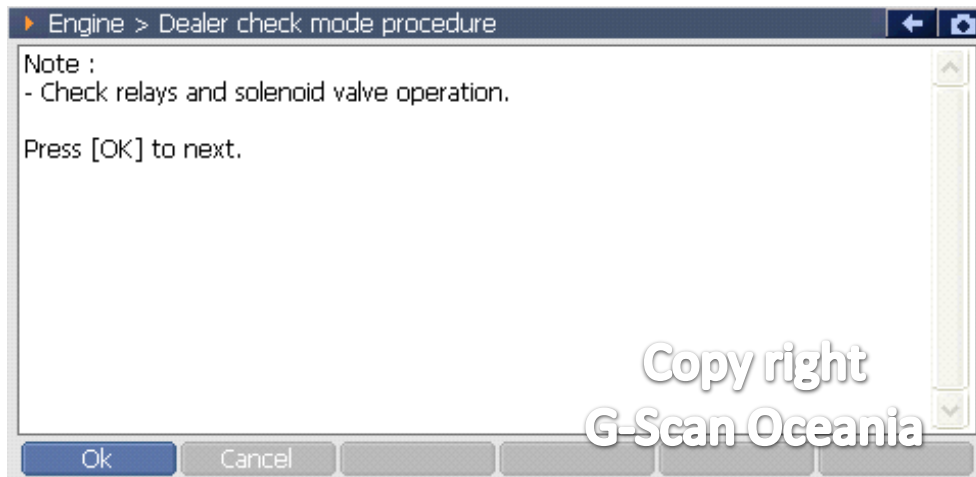


8. Accelerator Pedal Position sensor check

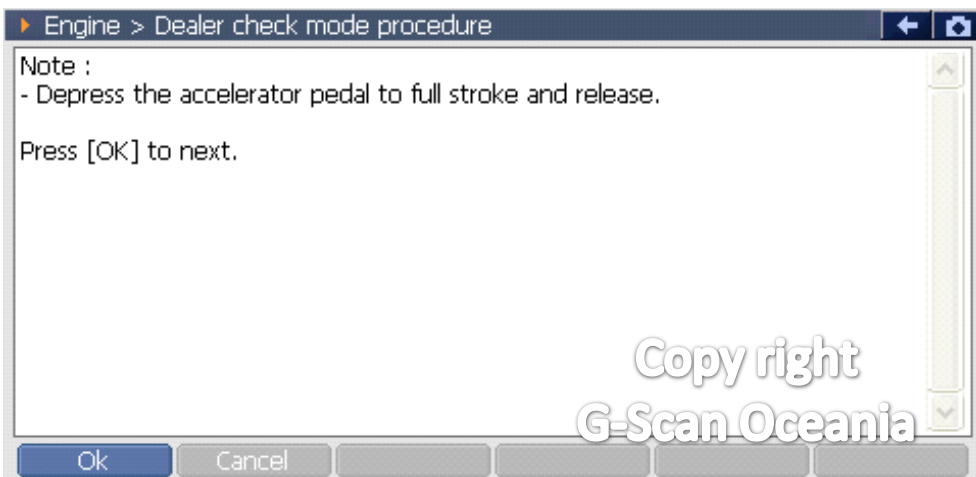


9. Start the engine

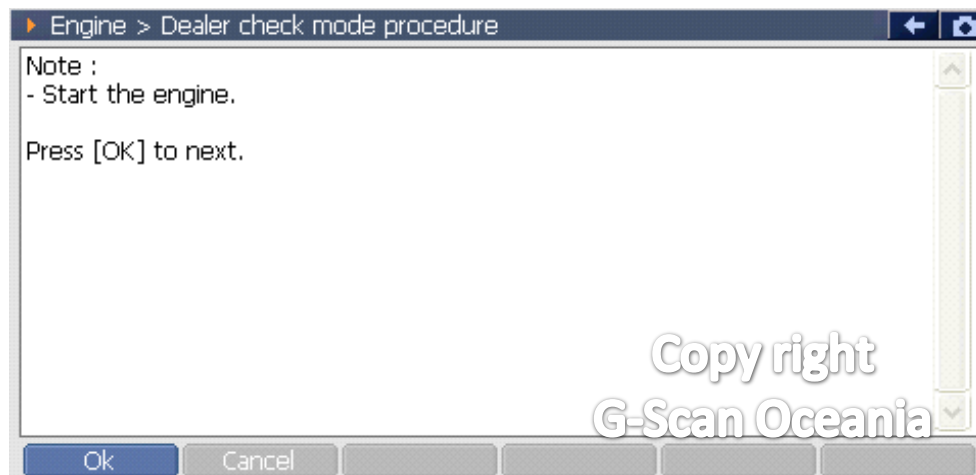


## 10. Driving test

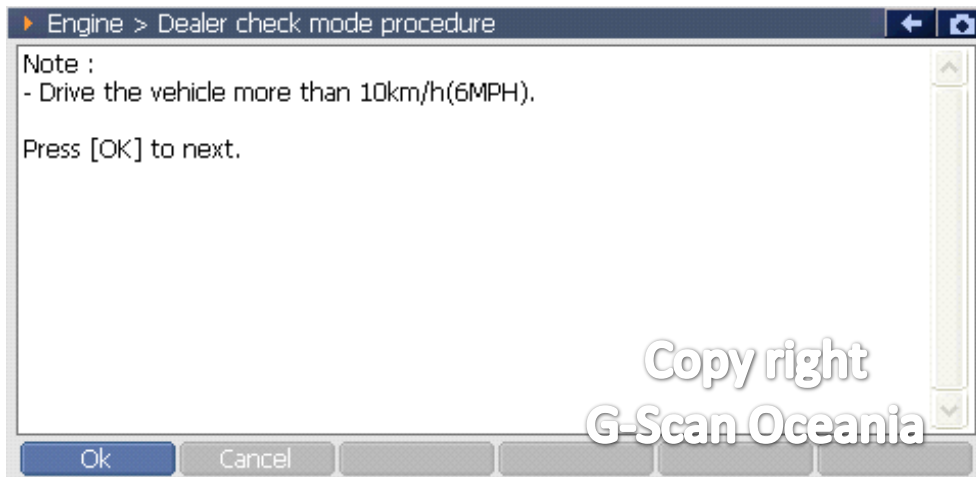

## 11. Engine running test

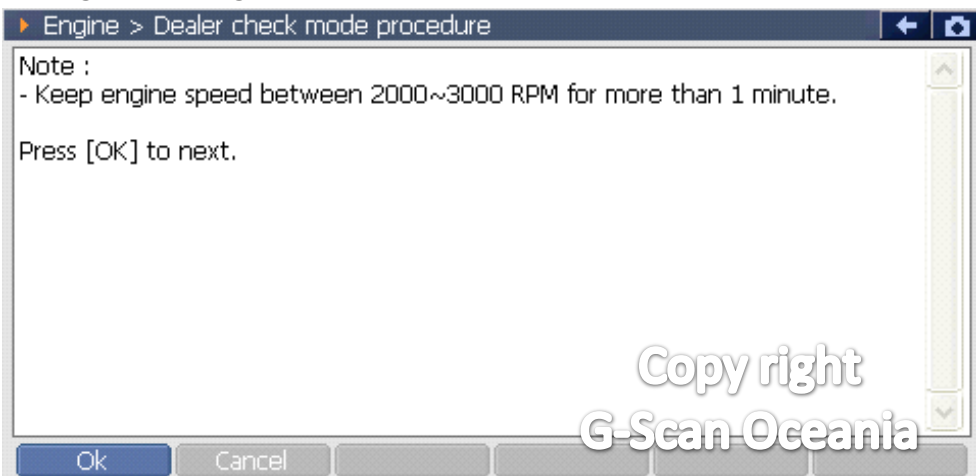

## 12. End of test

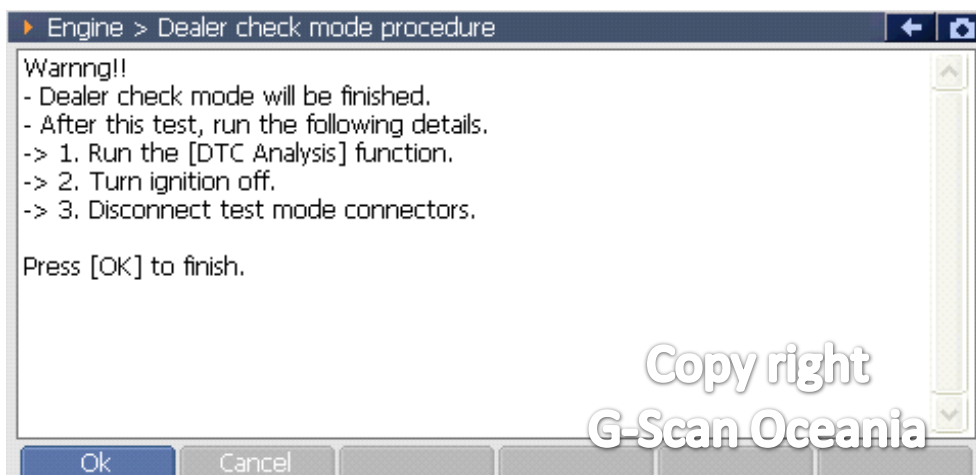

- After this test is completed, the vehicle must have the [Test mode connectors] or [Test mode fuse] disconnected