




1. Select General>ALL>16 pin connector>00->Engine

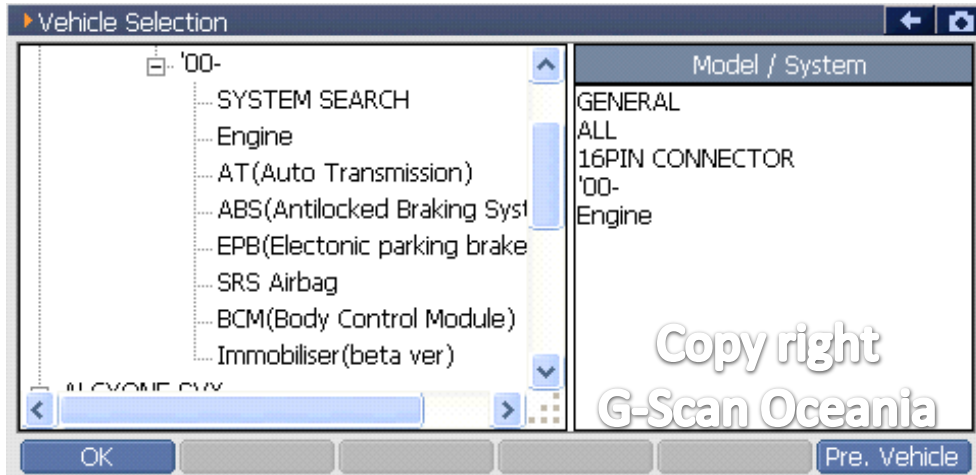


2. Select [Special function]

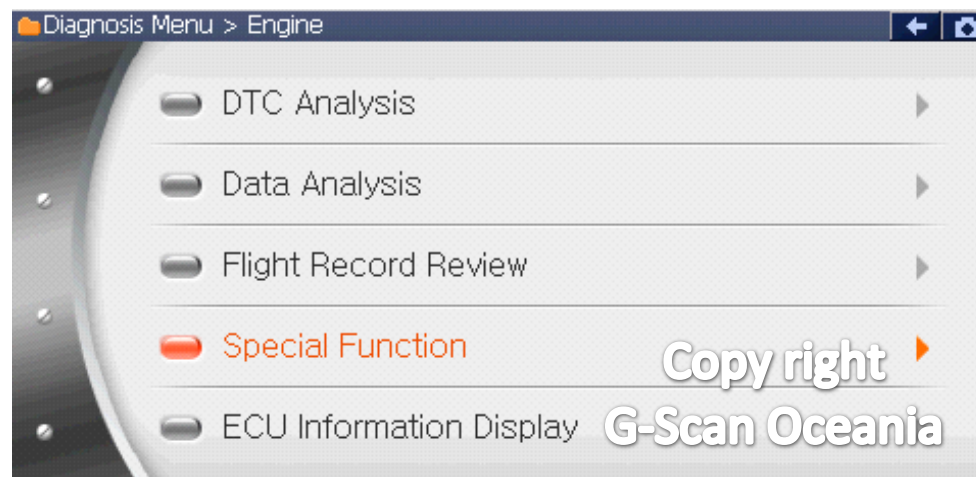

3. Select [Ignition timing adjustment]

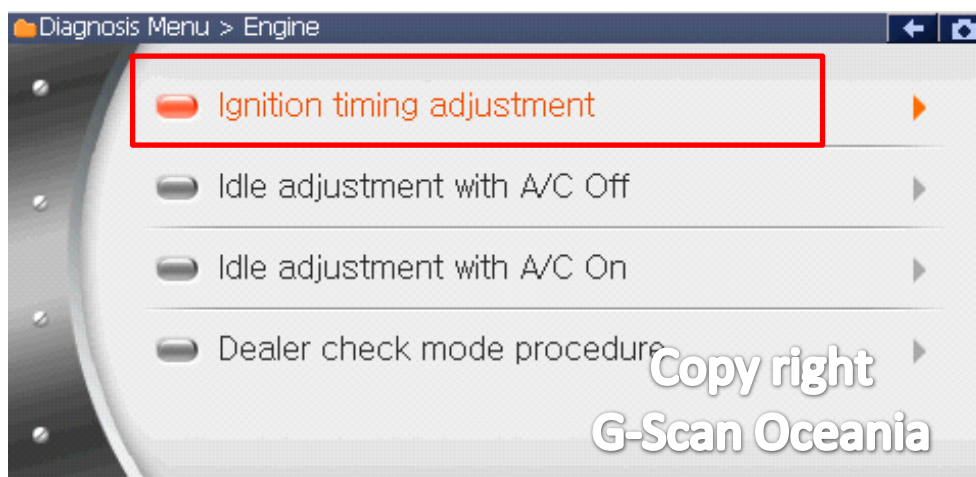

4. Warning message

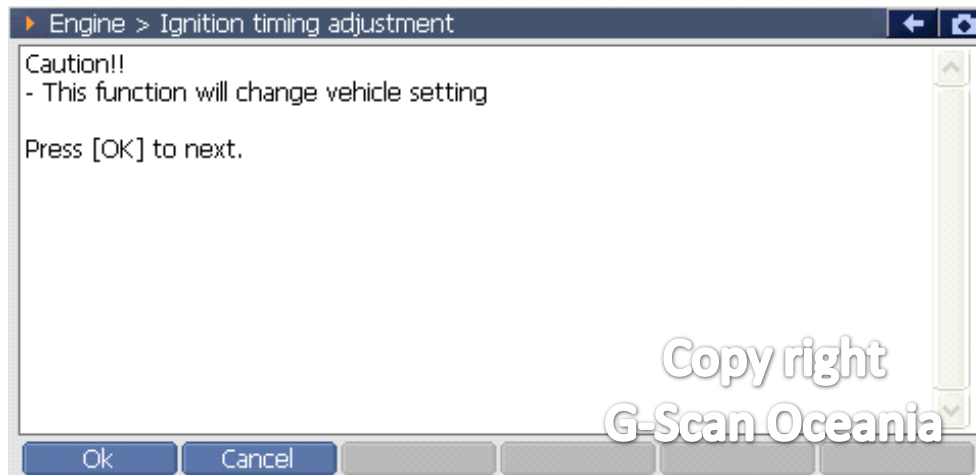

- G-scan will show the setting value already programmed.

5. Setting value#1



6. Setting value#2

