



Select the function 'Injector Compensation'




The following screen will explain the purpose of the function.

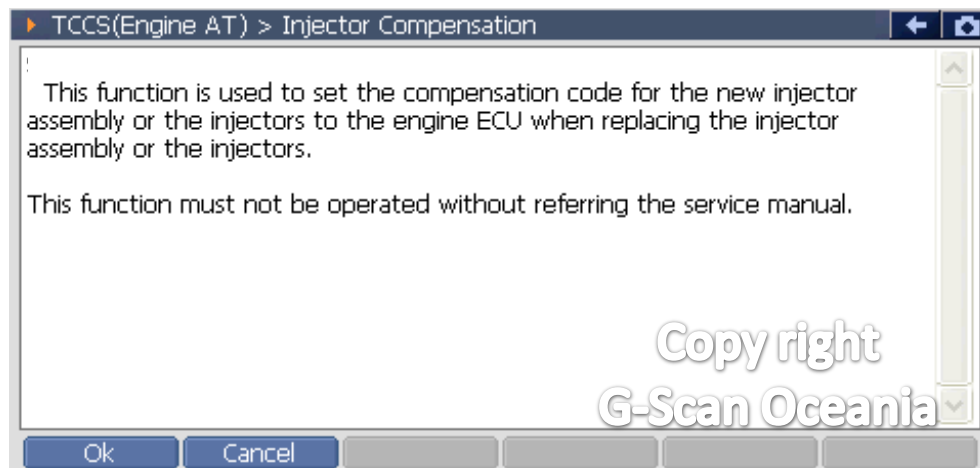

The next screen will display the current injector number coded.

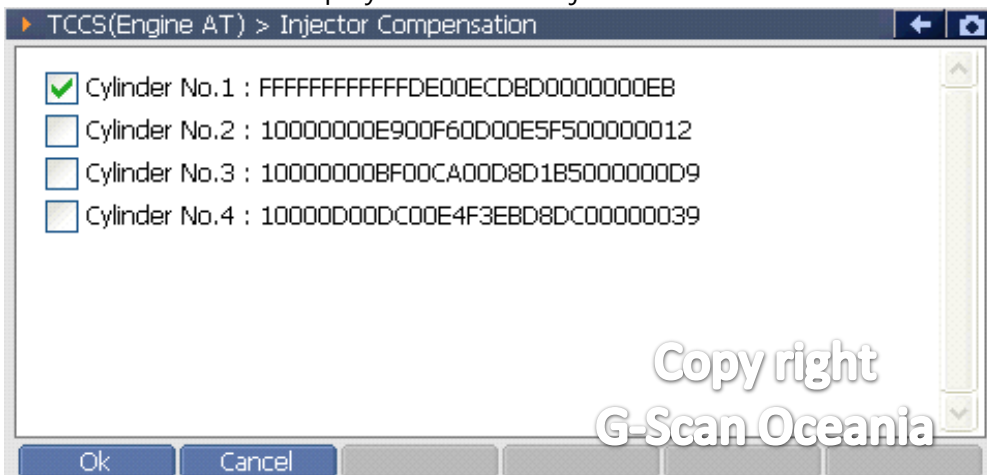


Input the new injector number(This is printed on each injector)

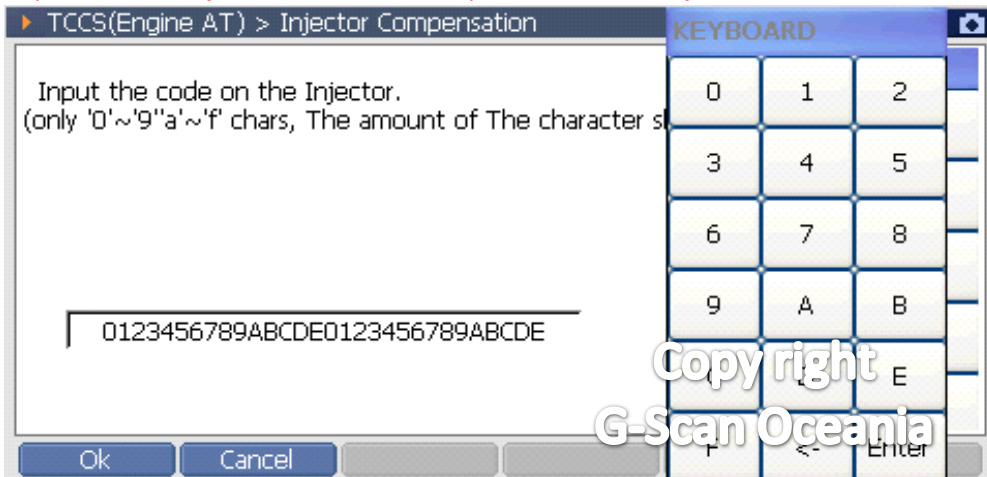

**** It is very important to input the correct number. If the number is entered incorrectly, you cannot continue on to the next step. This example has [30] digits.**

Confirm the code is correct.

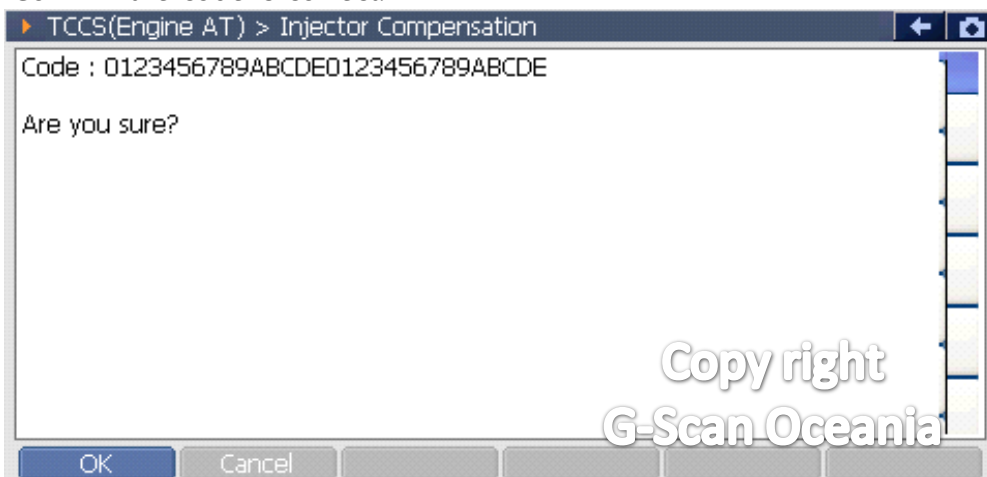

If the number is accepted, the G scan will display it has been successful.

