

\*\* Caution!! This function will erase every programmed keys.


\*\* Before the this function, All doors must be closed.

1. Select the Body > Immobilizer


2. Select the [Special function]



3. Select the [Key programming]

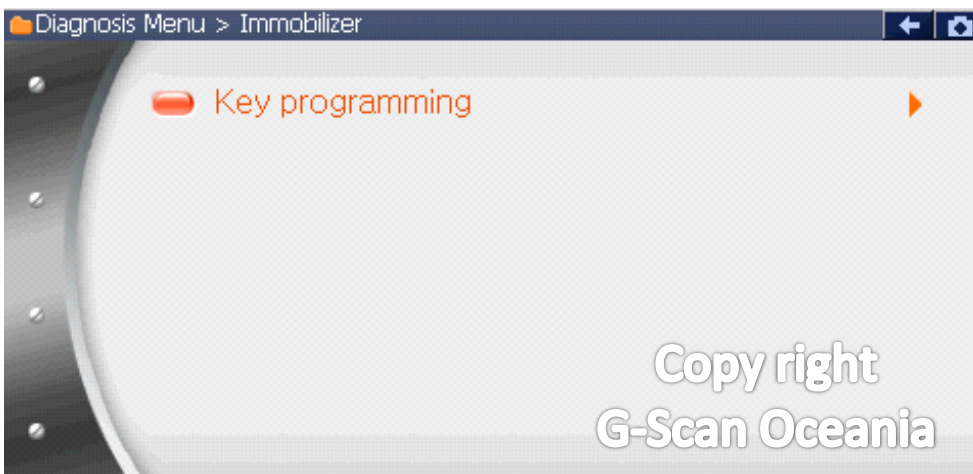


4. Notice.

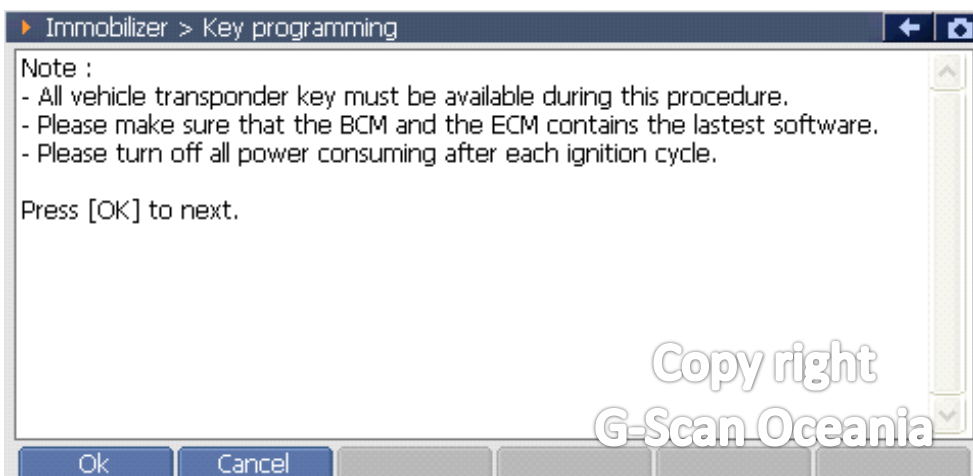

\*\* After this step, G-scan will show [PIN] enter screen.

\*\* If you want to program keys, need a correct 4 digit PIN number.

7. Notice

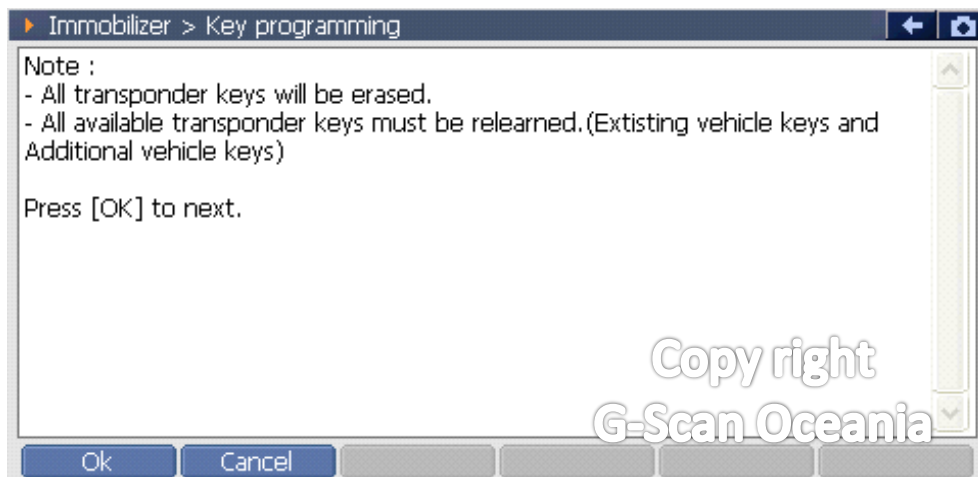


8. Notice




\*\* After this step, please follow G-scan procedure.  
G-scan will remove the keys from the key ring.

9. Open and close the door.

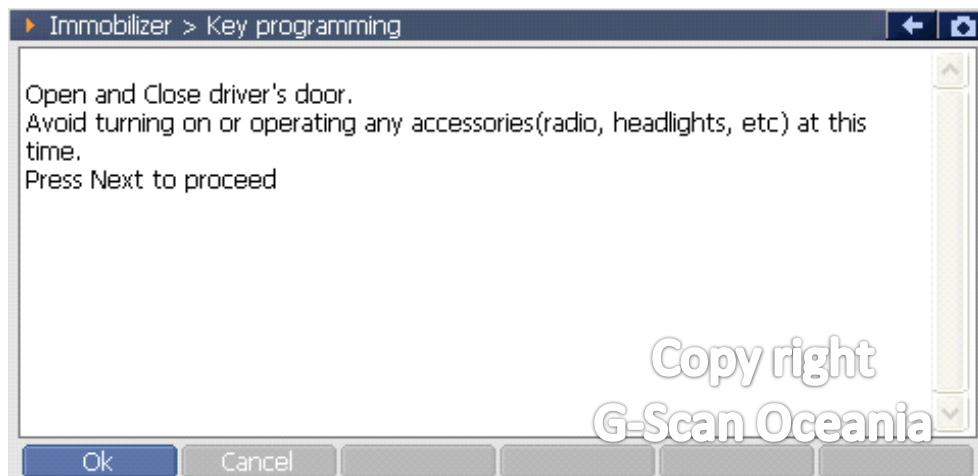

\*\* After this step. Please follow G-scan procedure.  
G-scan will show message "Insert key" to key ring.


10. Complete.

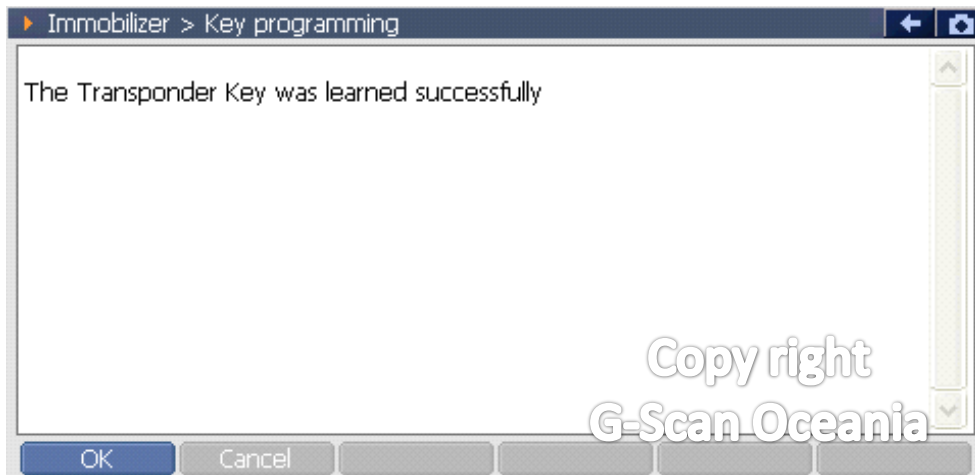

11. Learn more keys question.



12. Open and close the door.

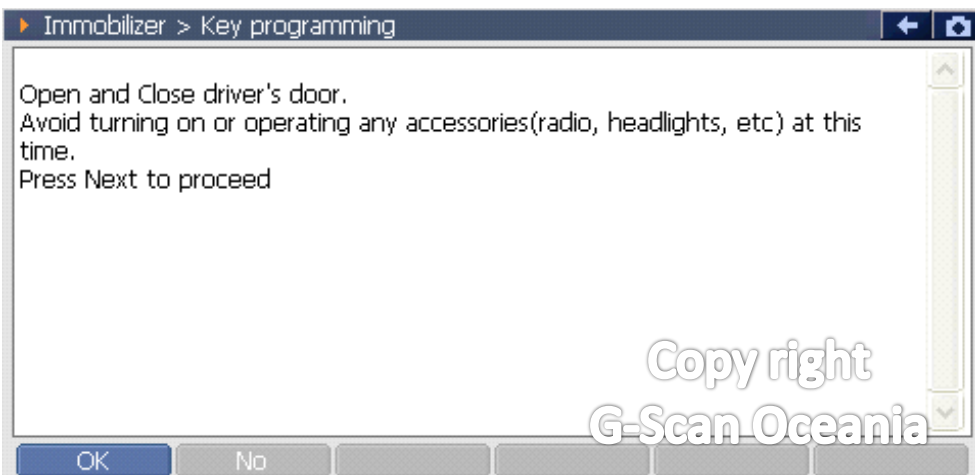

13. All procedure complete.

