




1. Select correct system

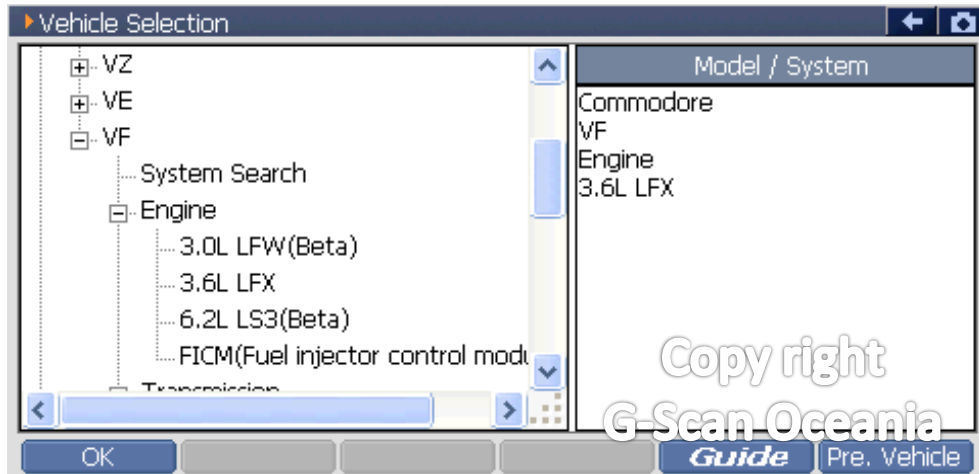


2. Select [Special function].

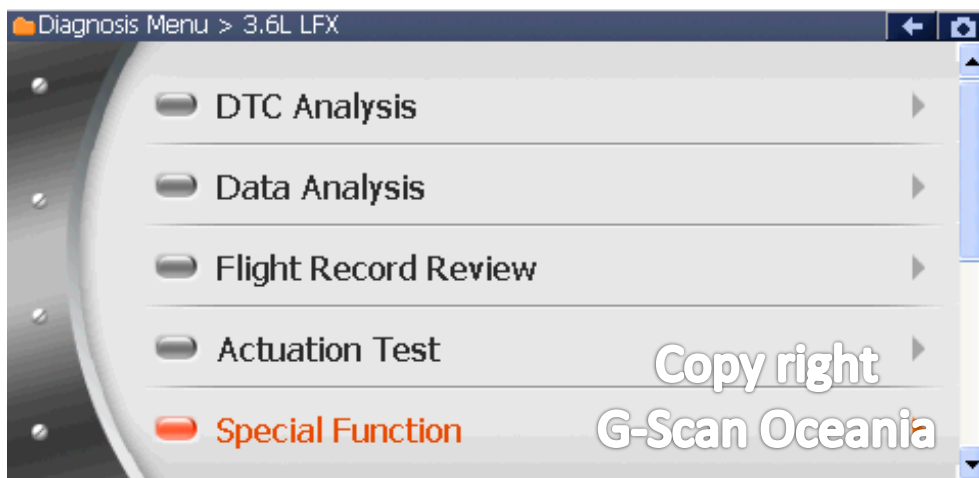


3. Select [Crankshaft position variation learn].

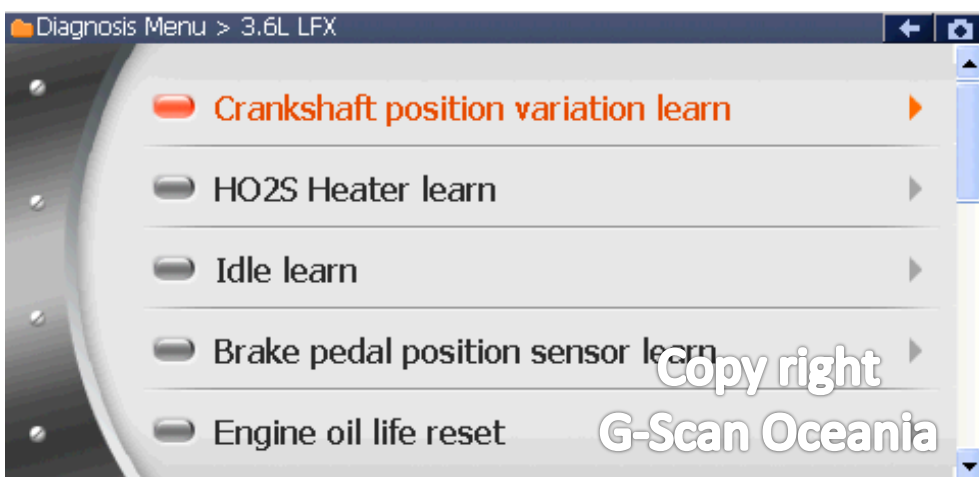

4. Note.

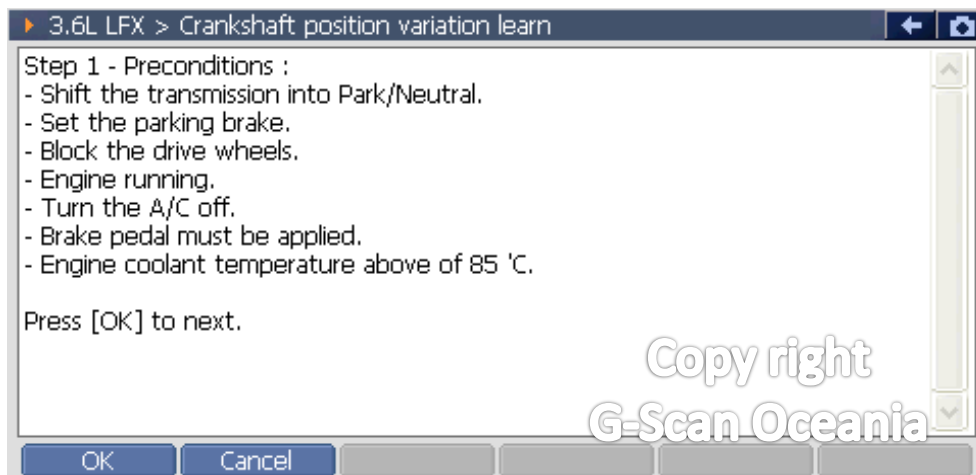

5. Note.

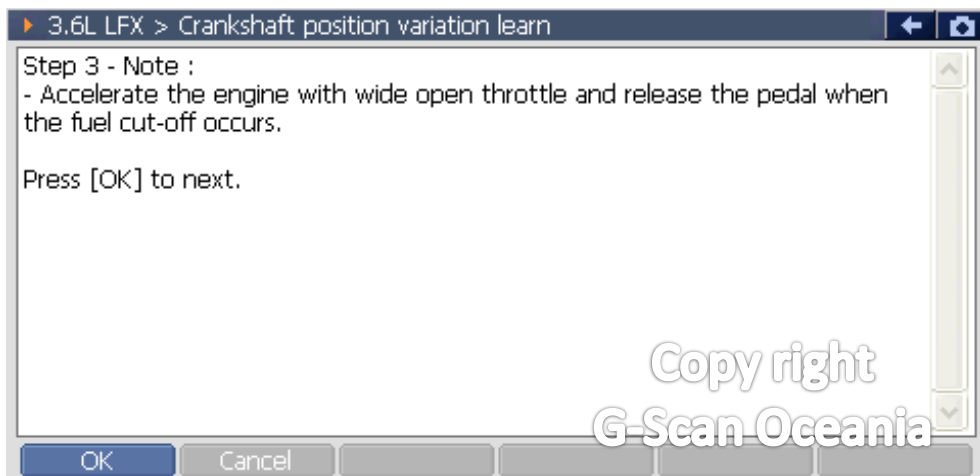

6. Complete.

