




1. Select [Commodore]>[VZ]>[V6]

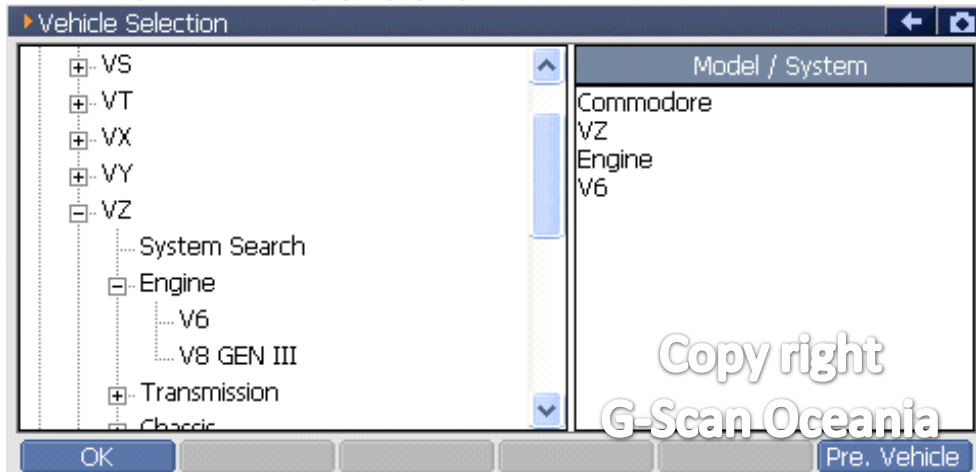


2. Select [Special function]

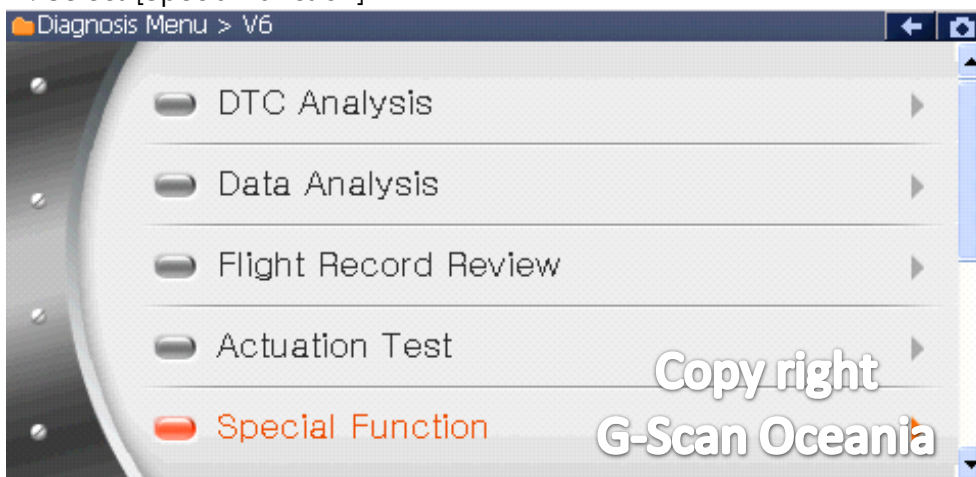

3. Select [Reset ECM]

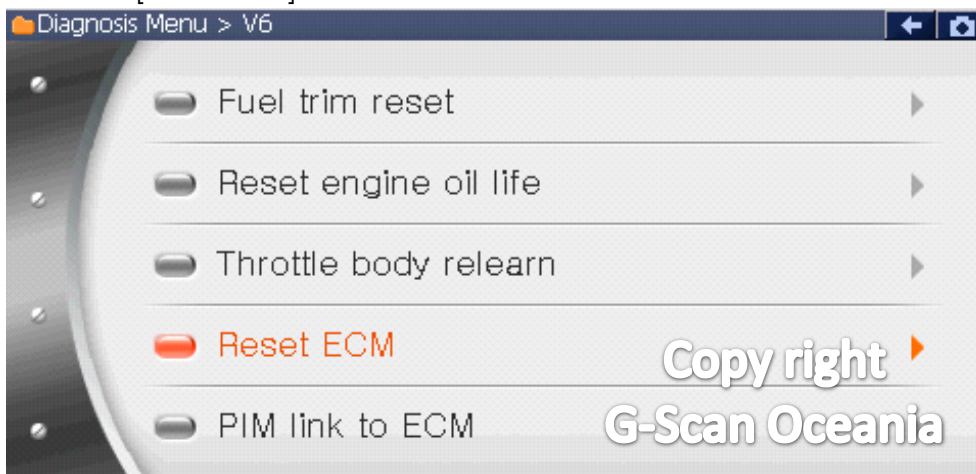


4. Notice

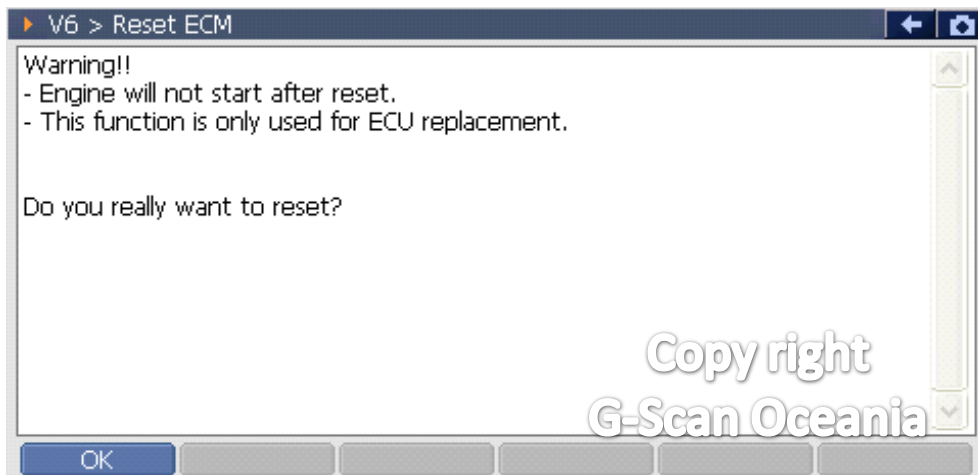

** This function is only used for module replacement.

** Engine will not start after the ECM is reset!! DTC's may appear relating to communication with other modules.

5. Input the security code.

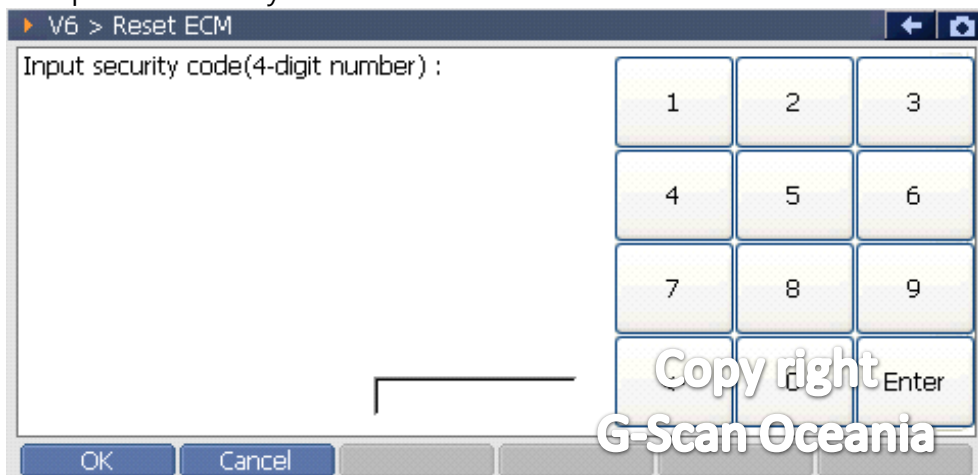


** You now must input the correct 4 digit security number.


6. In progress.



7. Turn ignition off

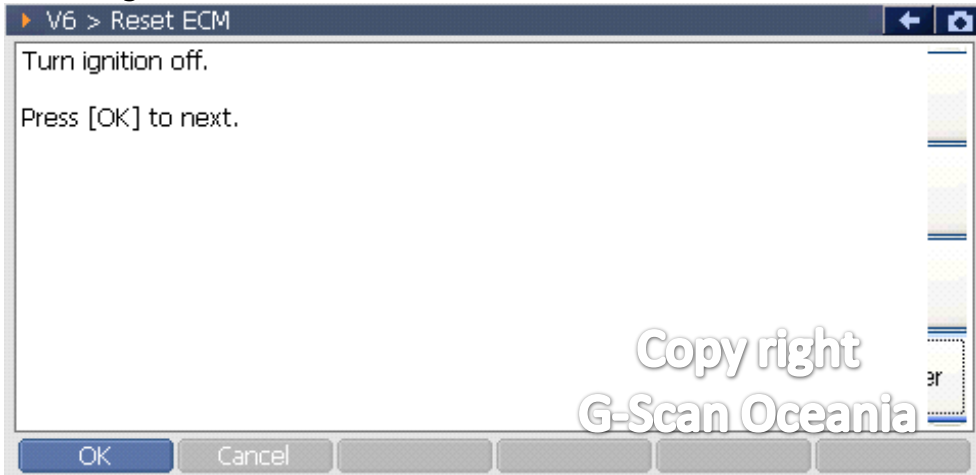

8. Turn ignition on

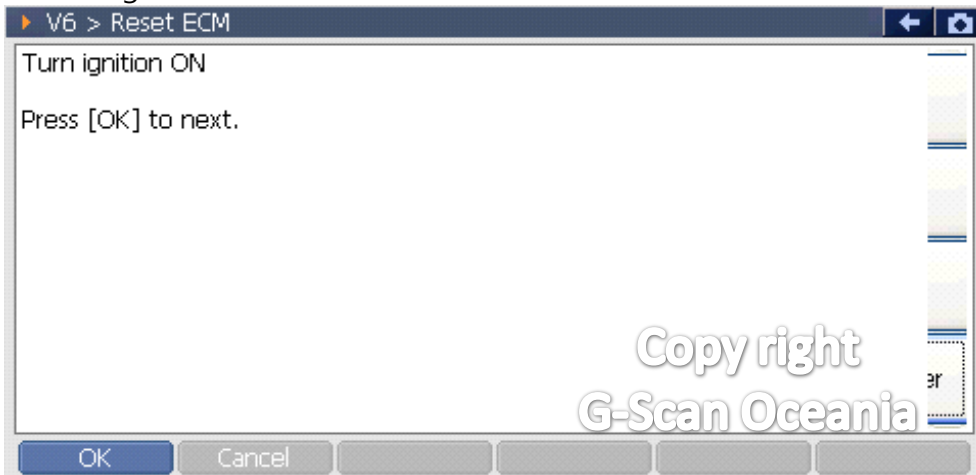

7. Complete.

** Engine will not start after completing this reset!! And DTC's may appear relating to communication with other modules.