




1. Select [Commodore]>[VZ]>[V6]

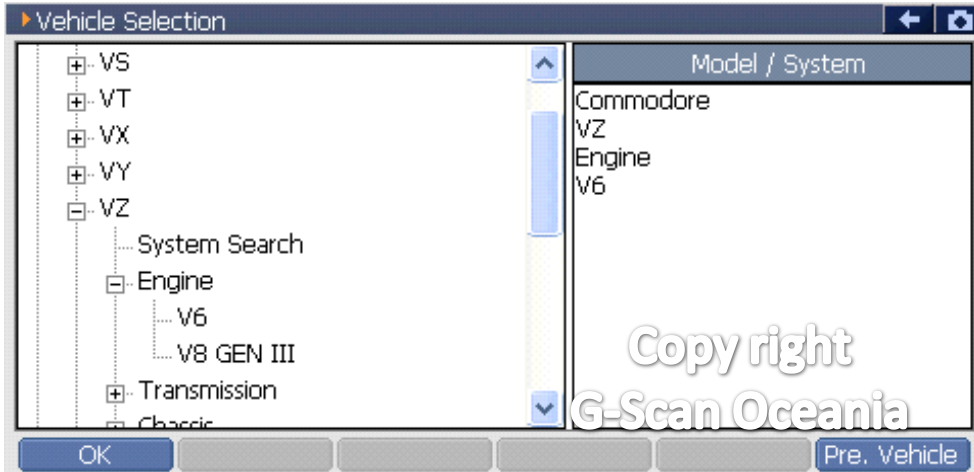


2. Select [Special function]

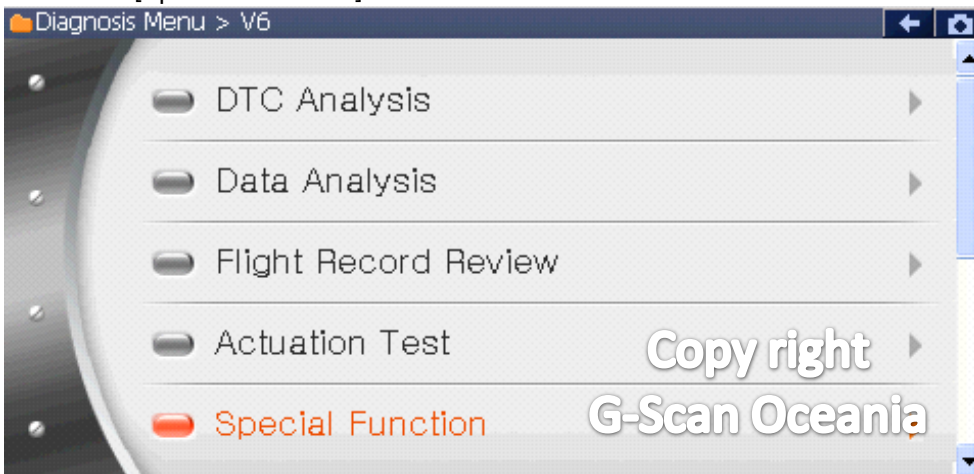


3. Select [PIM link to ECM]

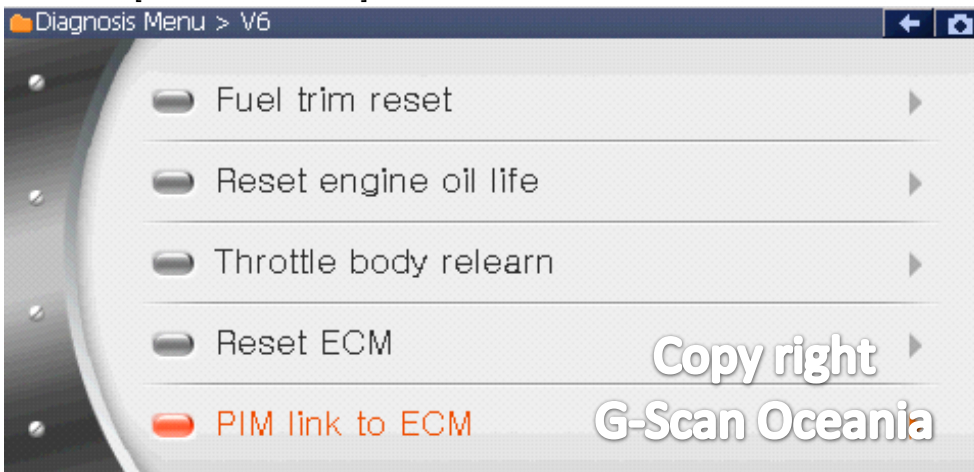

#### 4. Caution

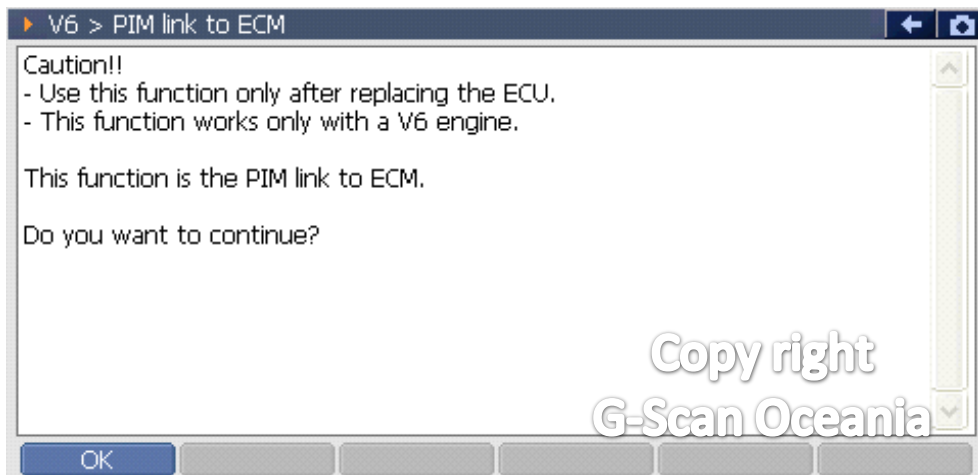

#### 5. Input the security code.

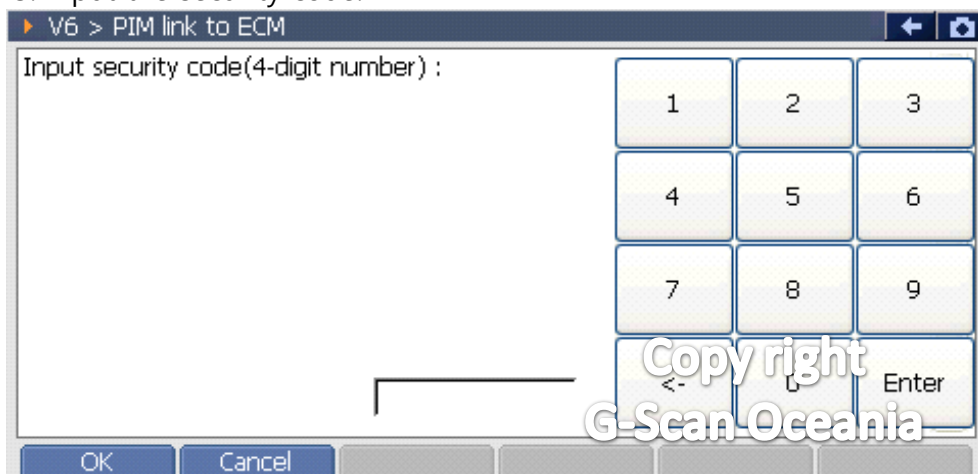


**\*\* You must input the correct 4 digit security number.**

#### 6. In progress.




**\*\* If it shows a message regarding a communication failure,  
Try turning ignition off -> on, and then recommunicating with the engine system.**

7. Turn ignition off

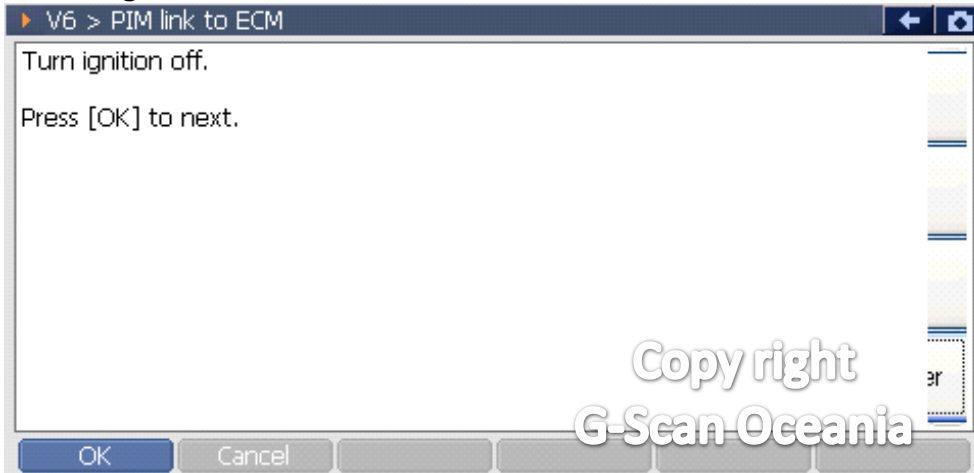

8. Turn ignition on

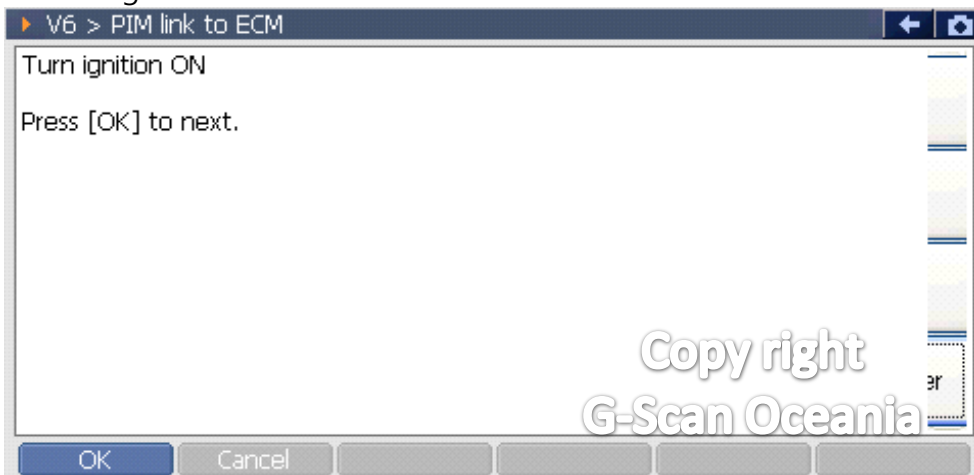

7. Complete.

\*\* Engine will now start again. And any remaining DTC's relating to communication with other modules can be erased.