



1. Select [Commodore]>[VZ]>[PIM]

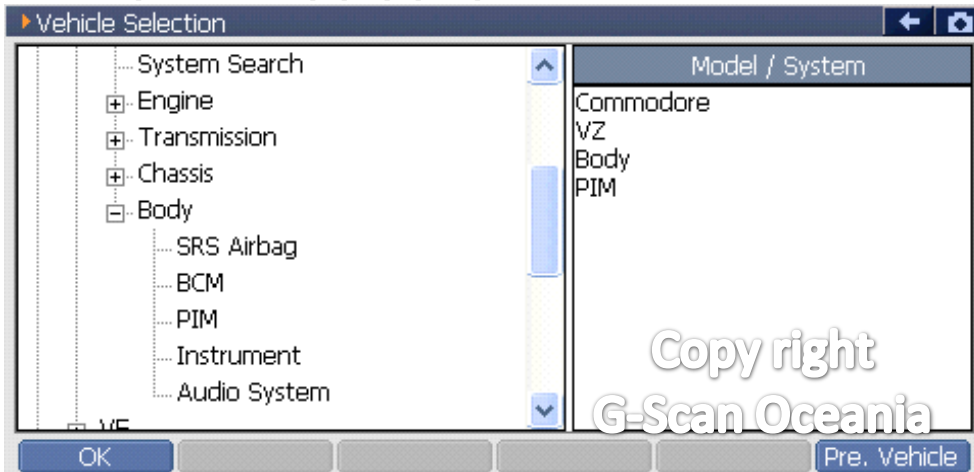


2. Select [Special function]

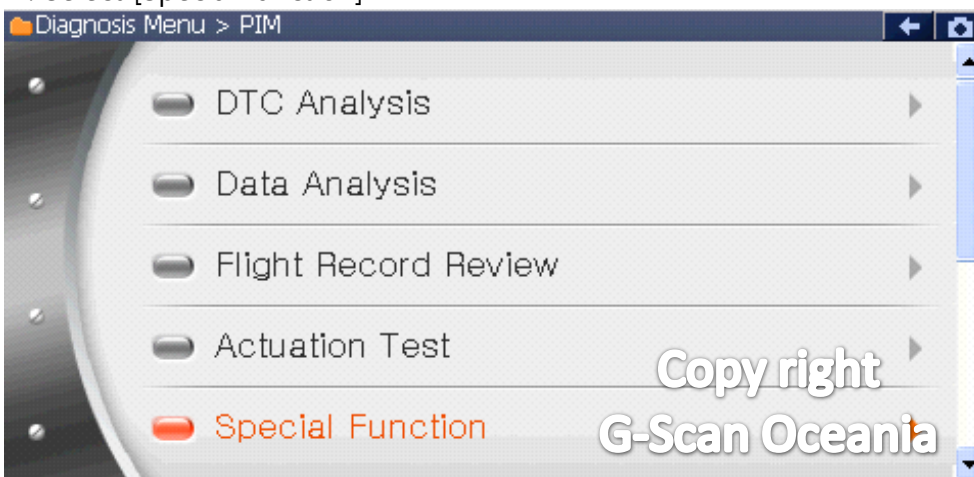


3. Select [PIM link to ECM]



4. Caution.

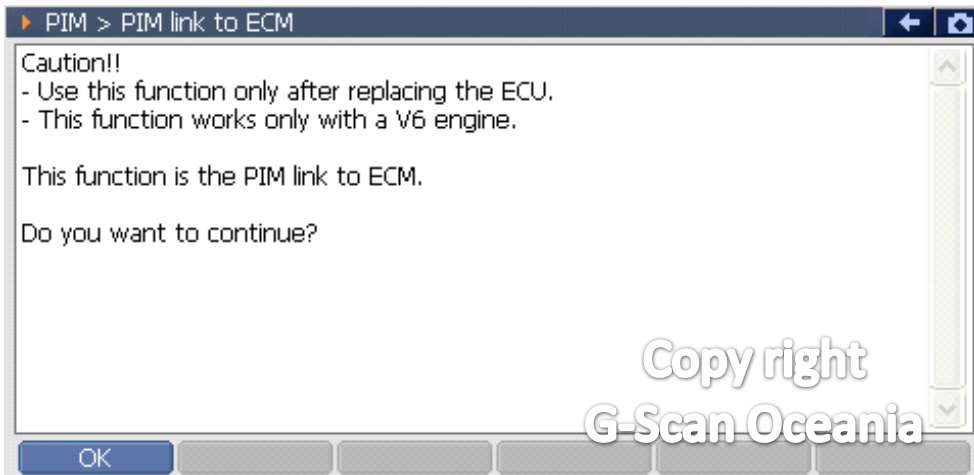

5. Input the security code.

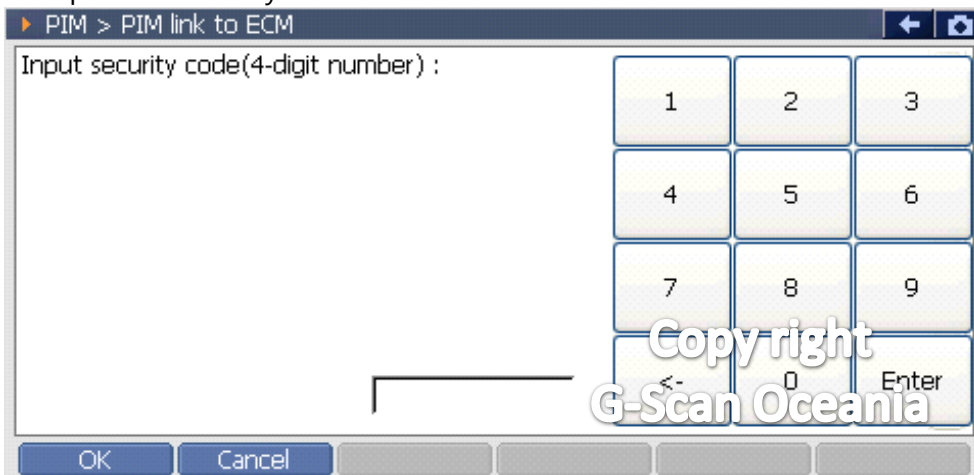


**** You must input the correct security number.**

6. In progress.




**** If it shows a message regarding a communication failure,
Try turning ignition off -> on, and then recommunicating with the PIM system.**

7. Turn ignition off

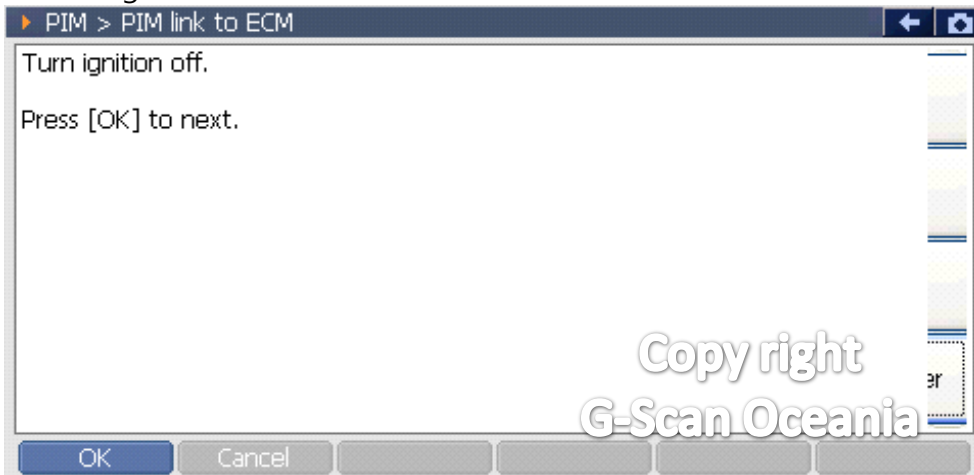

8. Turn ignition on

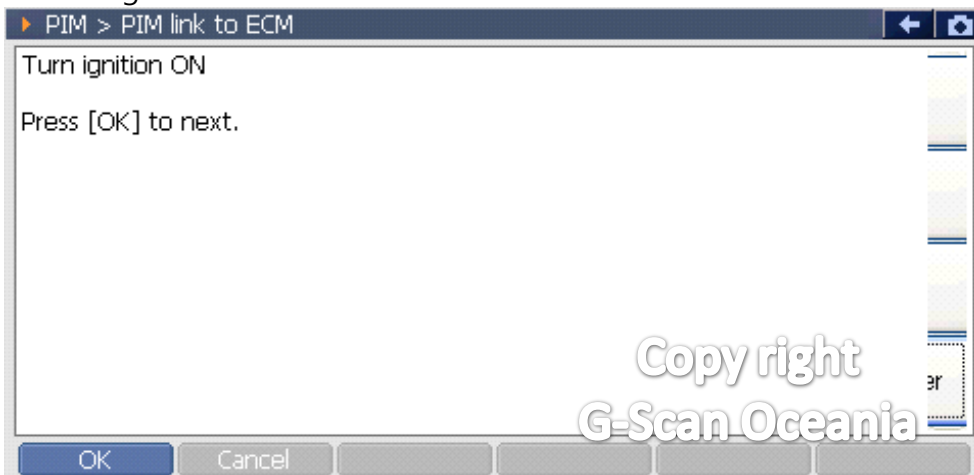

7. Complete.

** PCM link is now complete. Now the DTC/s relating to the immobiliser can be erased.