

- \*\* Before performing Recognition Camera Axis Adjust, perform Recognition Camera/Target Position Memory first.
- 1. Select Lane Departure Alert system

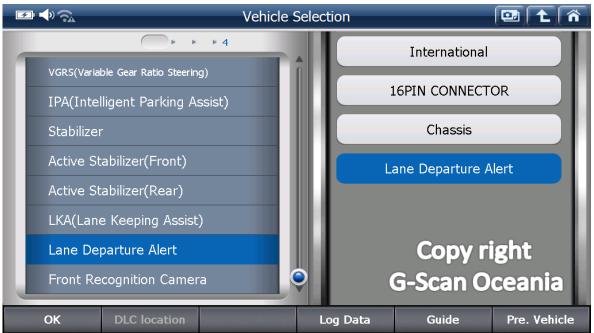


2. Select Special Function

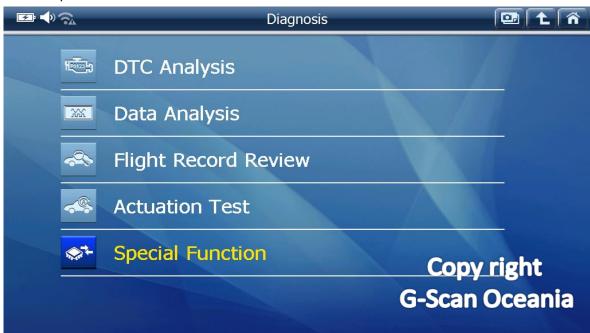


3. Select Recognition Camera/Target Position Memory




## 4. Notice

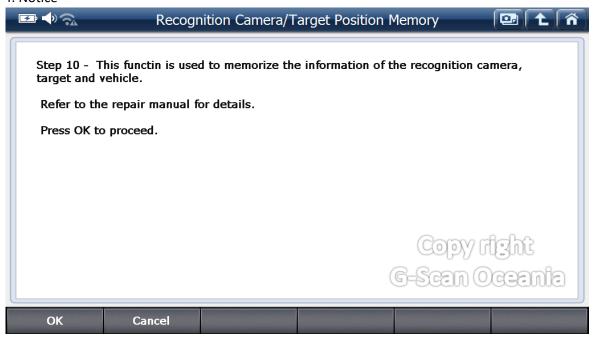

#### 5. Notice

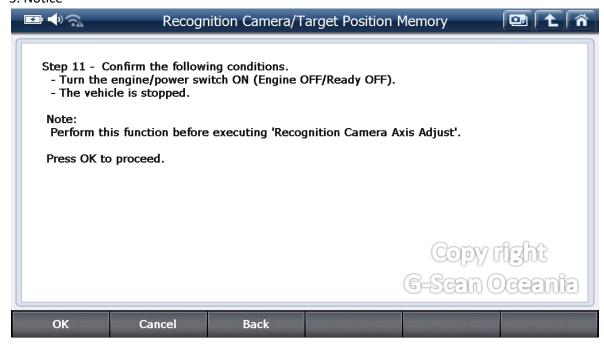


## 6. Input information

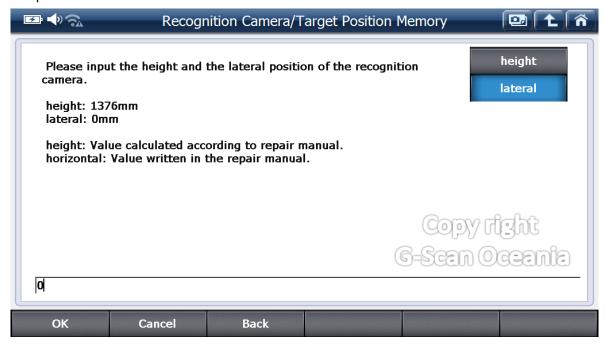


\*\* Sample value is for 2015 Sienta. Please refer to each manual of model for this value.

## 7. Input

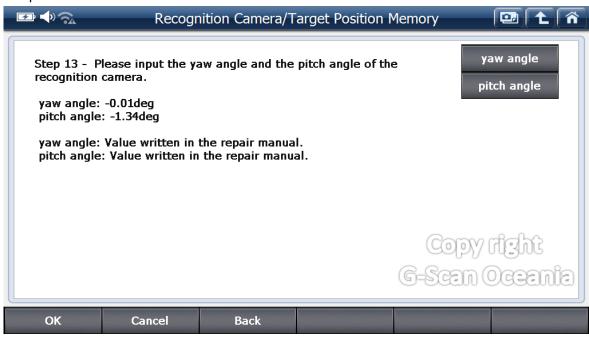


\*\* Sample value is for 2015 Sienta. Please refer to each manual of model for this value.

## 8. Input

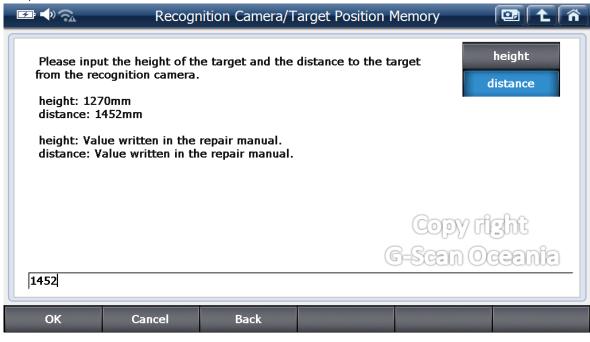


\*\* Sample value is for 2015 Sienta. Please refer to each manual of model for this value.

# 9. Input

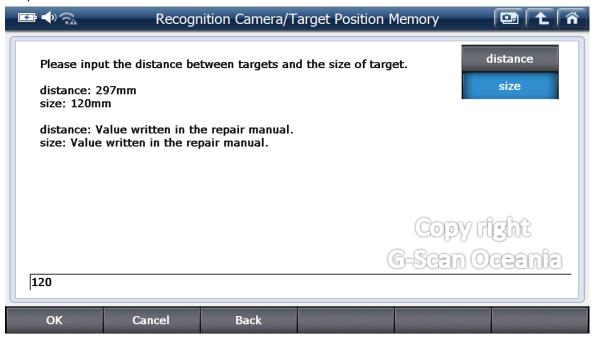


\*\* Sample value is for 2015 Sienta. Please refer to each manual of model for this value.

## 10. Input

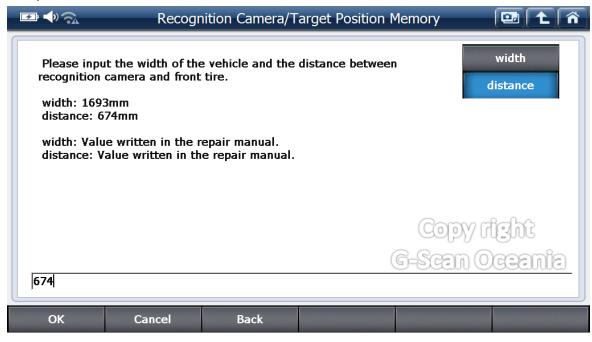

\*\* Sample value is for 2015 Sienta. Please refer to each manual of model for this value.

# 11 .Input

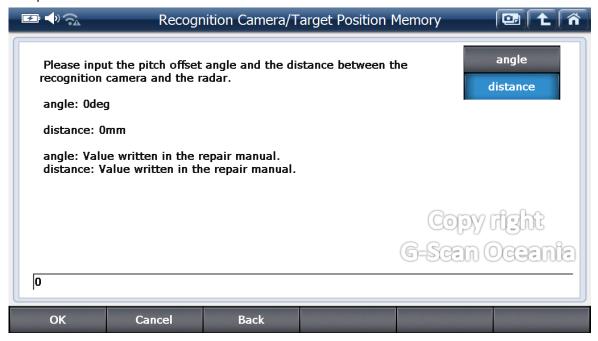

\*\* Sample value is for 2015 Sienta. Please refer to each manual of model for this value.

# 12. Complete

