HONDA RADAR AIMING

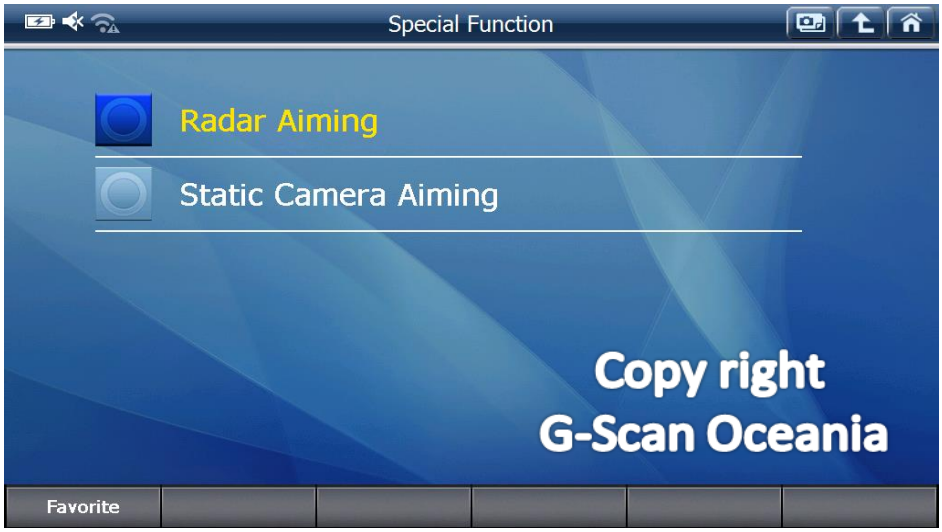

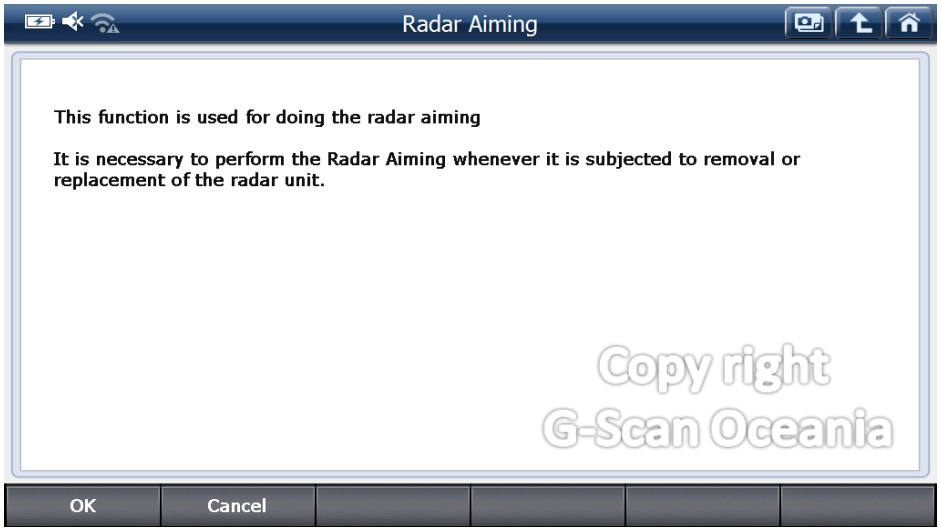

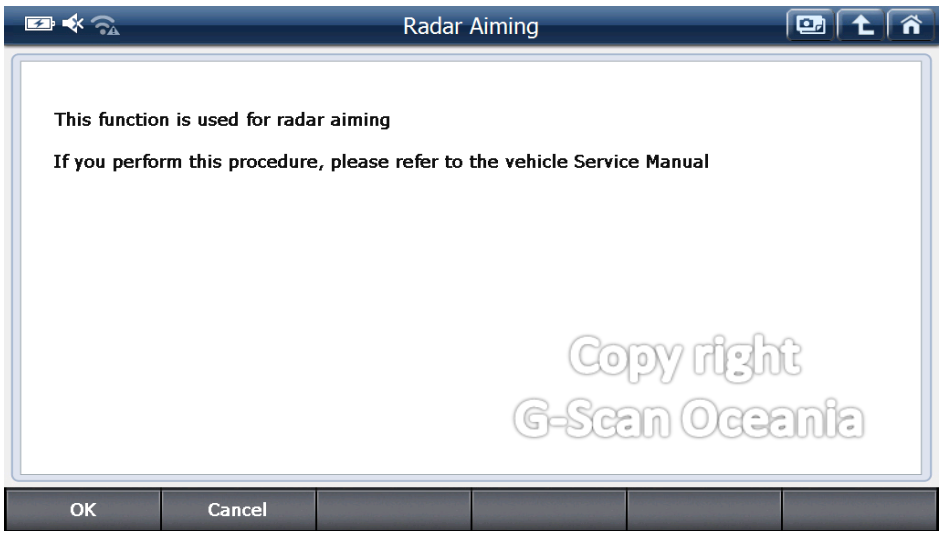
Radar Aiming
This function is used for radar aiming
If you perform this procedure, please refer to the vehicle Service Manual
Copy right
G-Scan Oceania
OK
Cancel

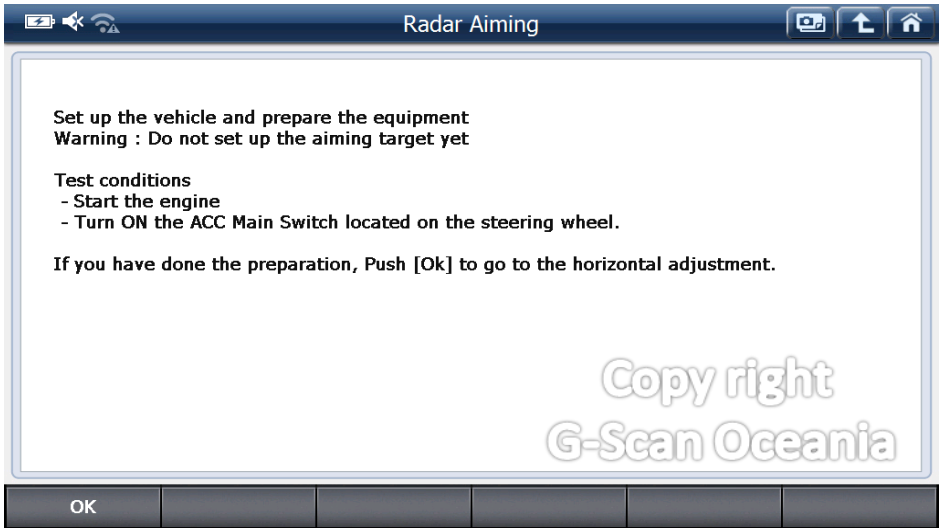
Radar Aiming
Set up the vehicle and prepare the equipment
Warning : Do not set up the aiming target yet
Test conditions
- Start the engine
- Turn ON the ACC Main Switch located on the steering wheel.
If you have done the preparation, Push [Ok] to go to the horizontal adjustment.
Copy right
G-Scan Oceania
OK

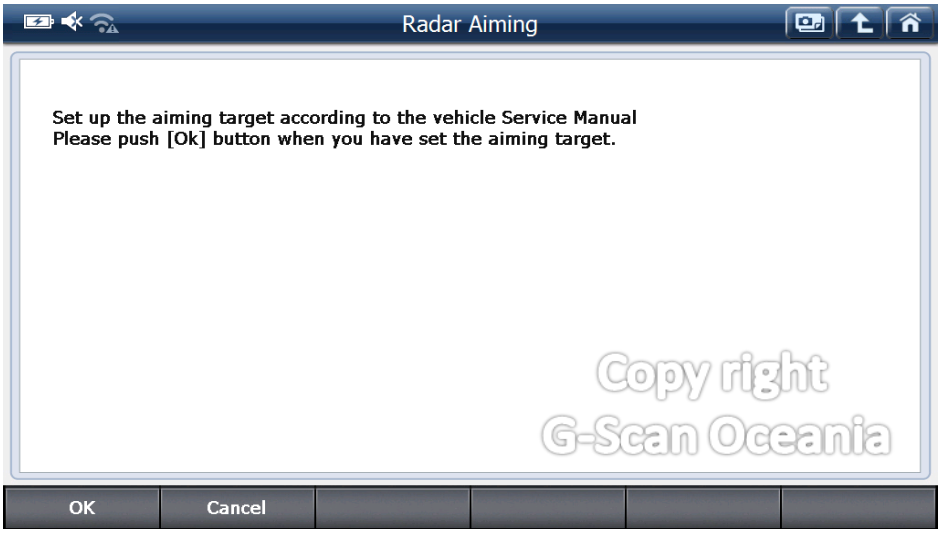
Radar Aiming
Set up the aiming target according to the vehicle Service Manual
Please push [Ok] button when you have set the aiming target.
Copy right
G-Scan Oceania
OK
Cancel

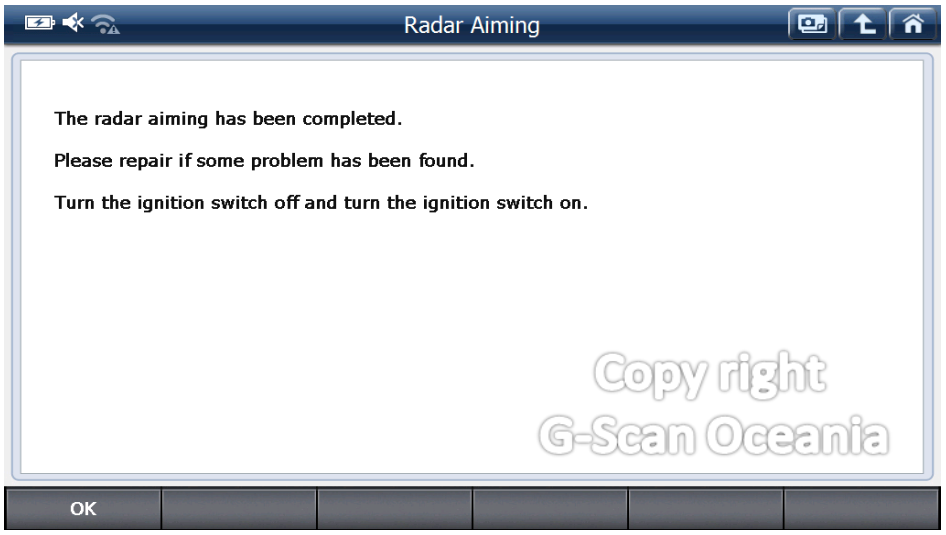
Radar Aiming
The radar aiming has been completed.
Please repair if some problem has been found.
Turn the ignition switch off and turn the ignition switch on.
Copy right
G-Scan Oceania
OK