HONDA STATIC CAMERA AIMING

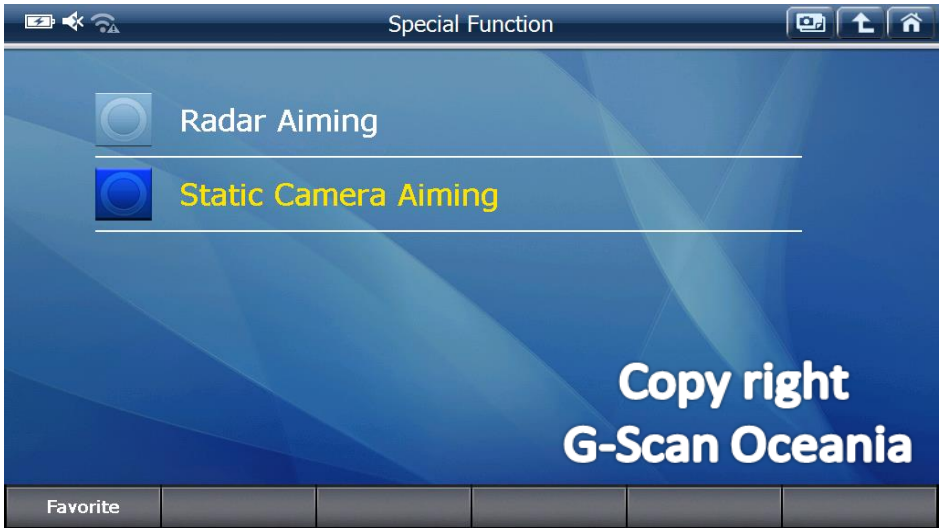

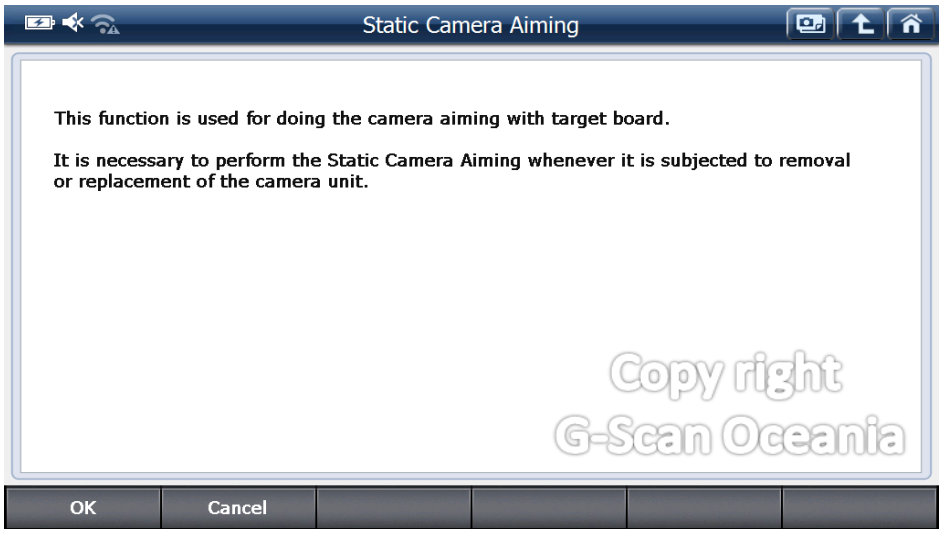

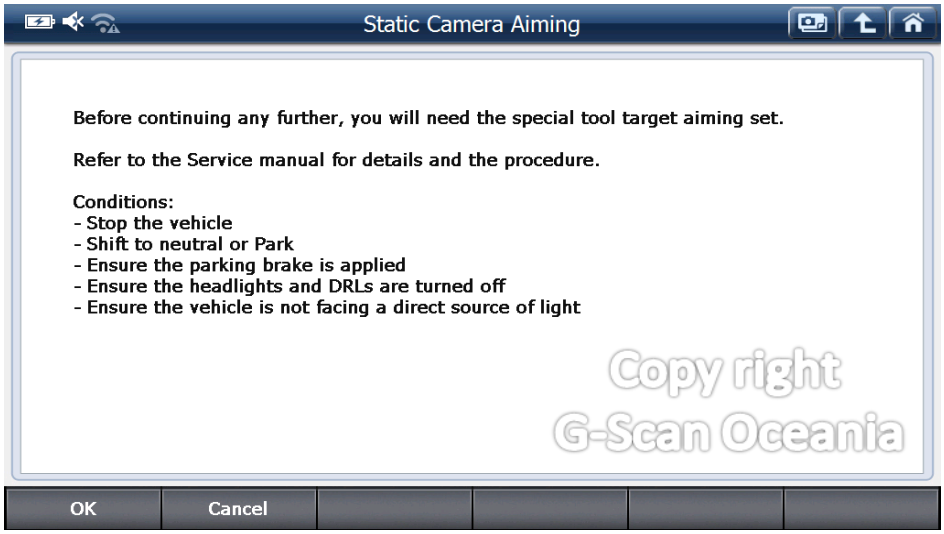

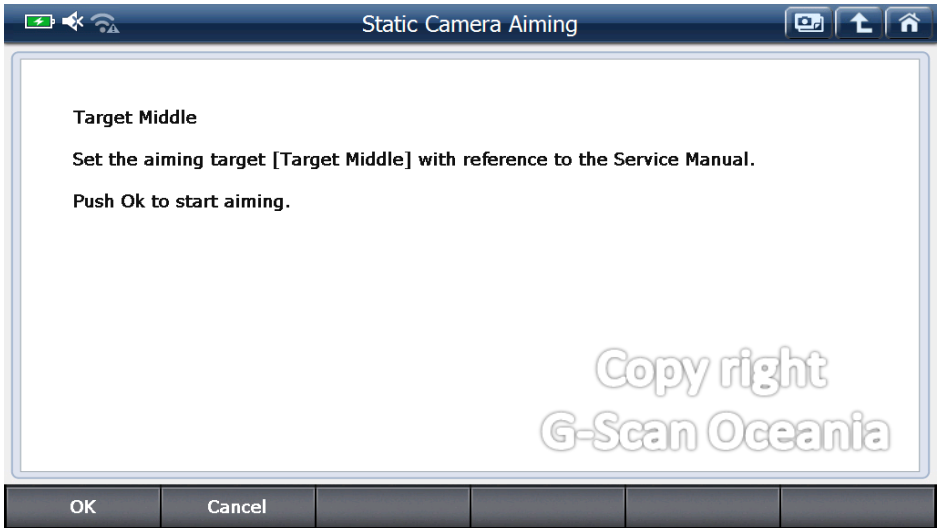
Static Camera Aiming
Target Middle
Set the aiming target [Target Middle] with reference to the Service Manual.
Push Ok to start aiming.
Copy right
G-Scan Oceania
OK
Cancel

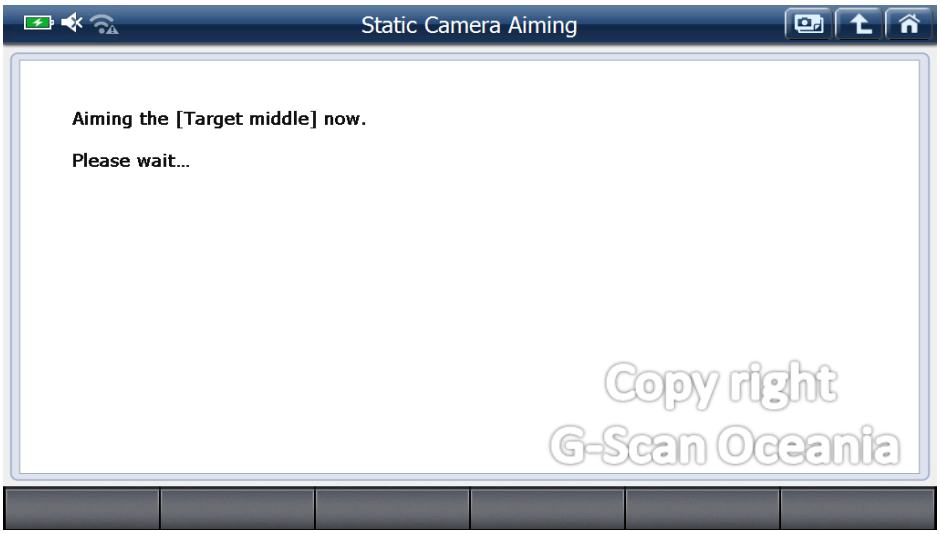
Static Camera Aiming
Aiming the [Target middle] now.
Please wait...
Copy right
G-Scan Oceania

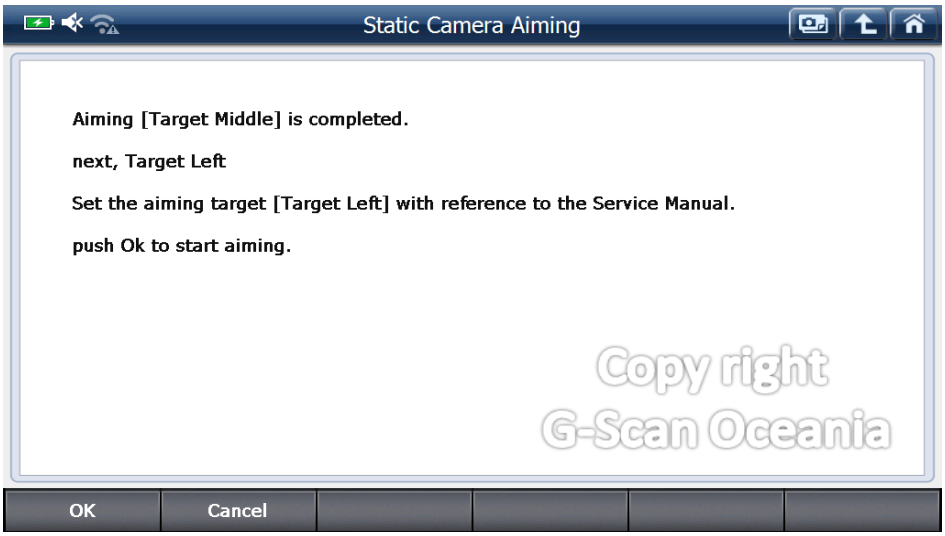
Static Camera Aiming
Aiming [Target Middle] is completed.
next, Target Left
Set the aiming target [Target Left] with reference to the Service Manual.
push Ok to start aiming.
Copy right
G-Scan Oceania
OK
Cancel

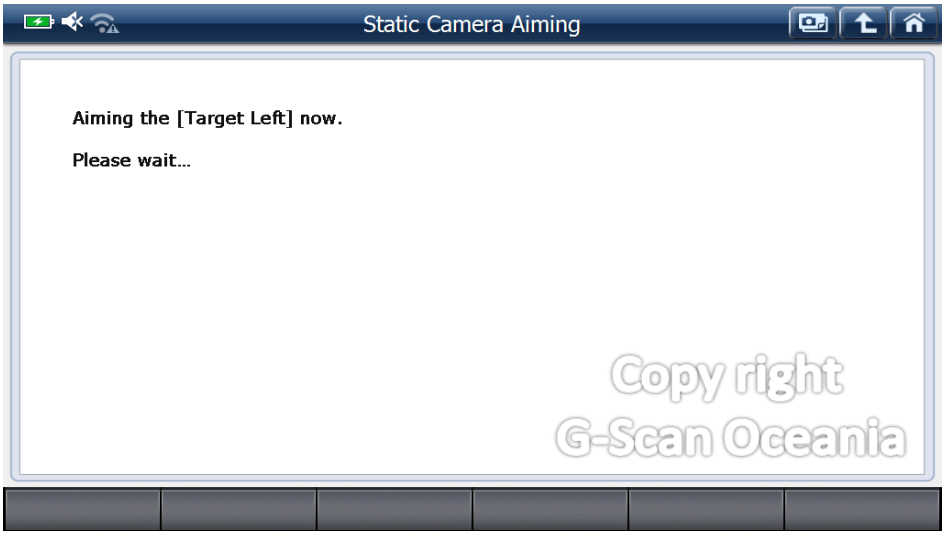
Static Camera Aiming
Aiming the [Target Left] now.
Please wait...
Copy right
G-Scan Oceania

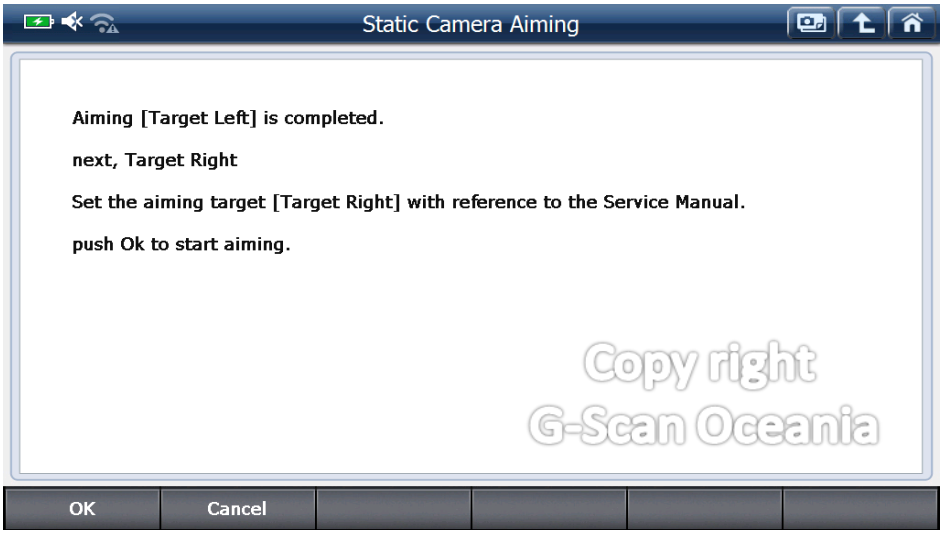
Static Camera Aiming
Aiming [Target Left] is completed.
next, Target Right
Set the aiming target [Target Right] with reference to the Service Manual.
push Ok to start aiming.
Copy right
G-Scan Oceania
OK
Cancel

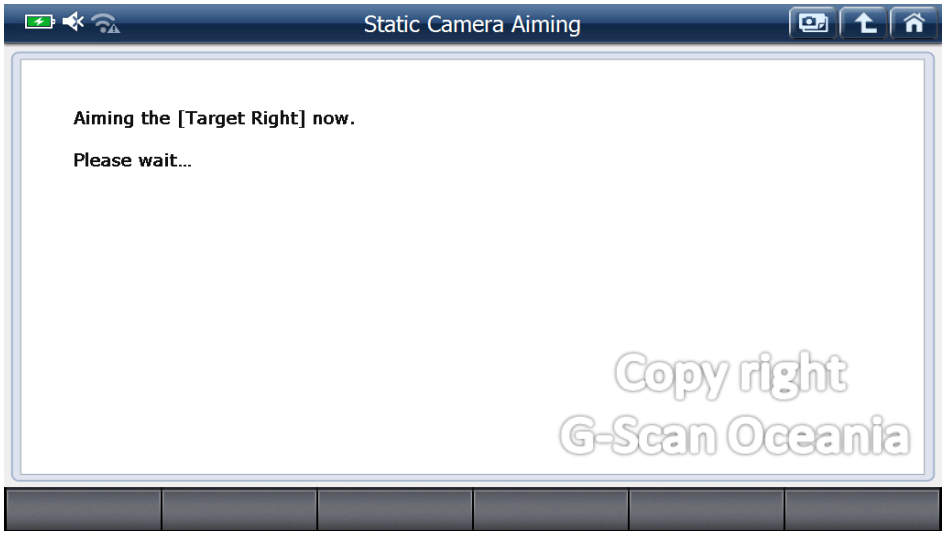
Static Camera Aiming
Aiming the [Target Right] now.
Please wait...
Copy right
G-Scan Oceania

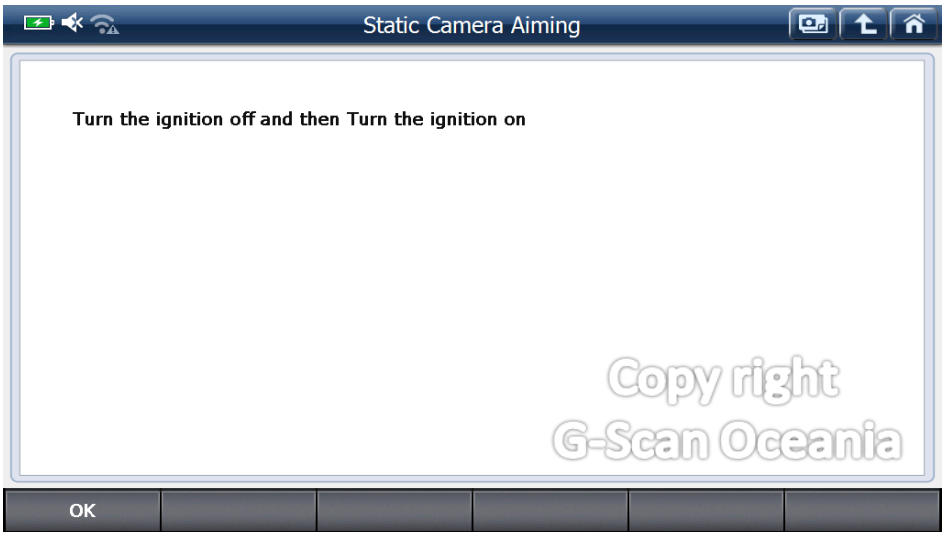
Static Camera Aiming
Turn the ignition off and then Turn the ignition on
Copy right
G-Scan Oceania
OK

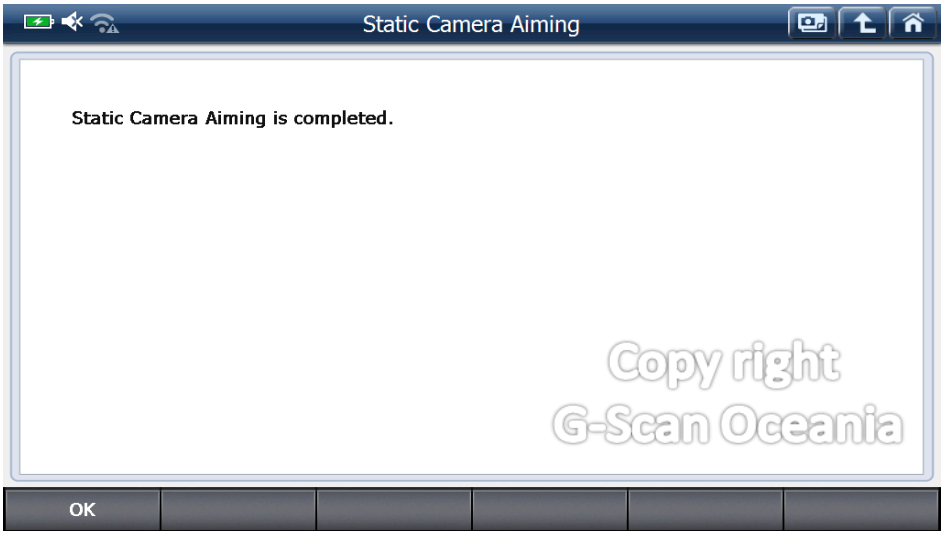
Static Camera Aiming
Static Camera Aiming is completed.
Copy right
G-Scan Oceania
OK