




1. Select General>ALL>16 pin connector>00->AT

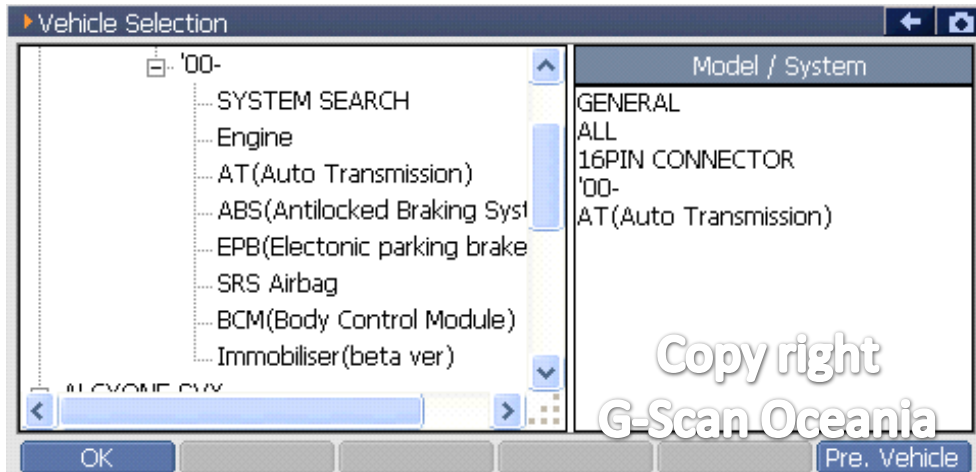


2. Select [Special function]

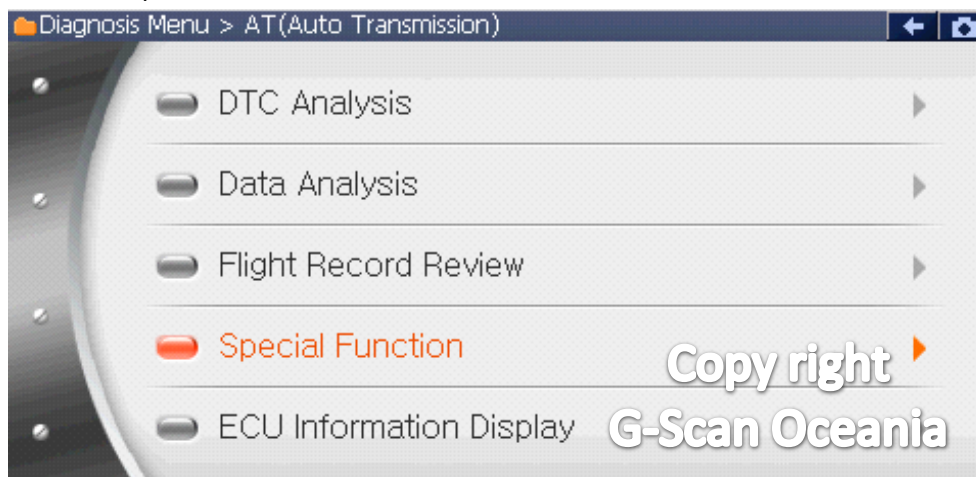


3. Select [AT learning mode]

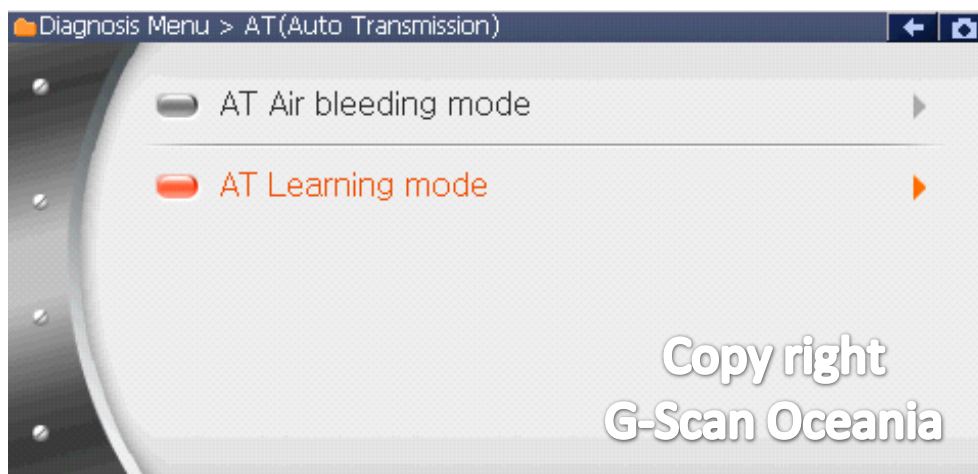


4. Preconditions1

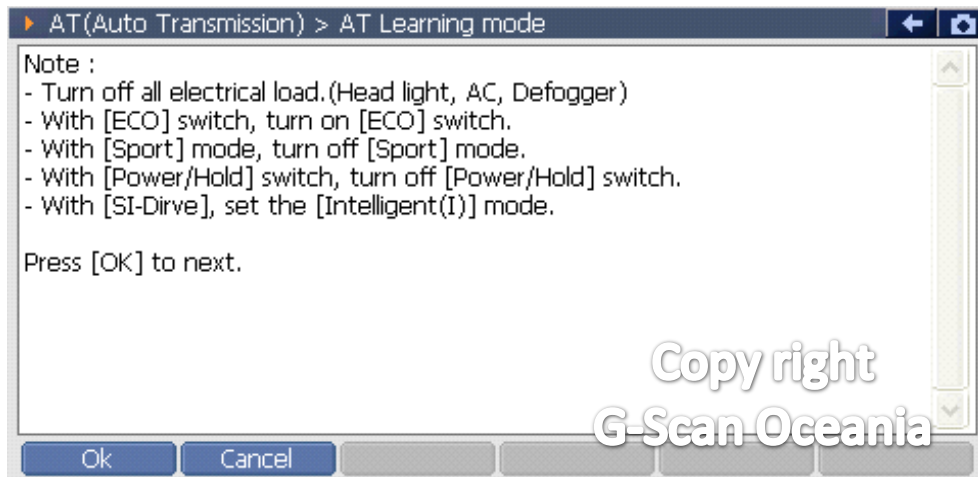


5. Pre conditions2

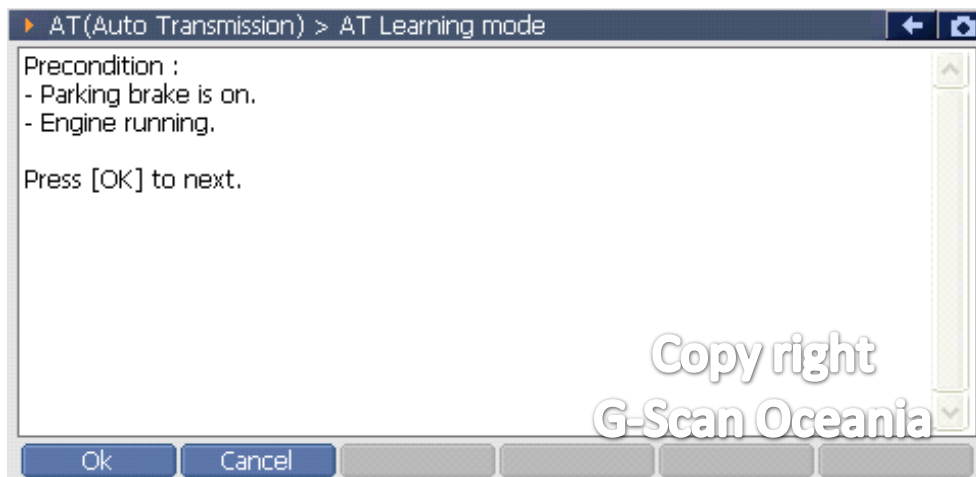


6. Procedure Step1

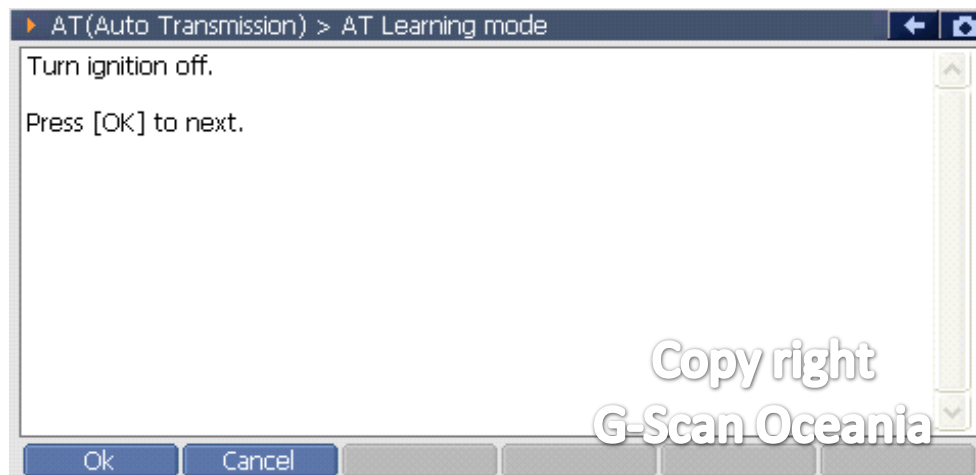

7. Procedure Step2

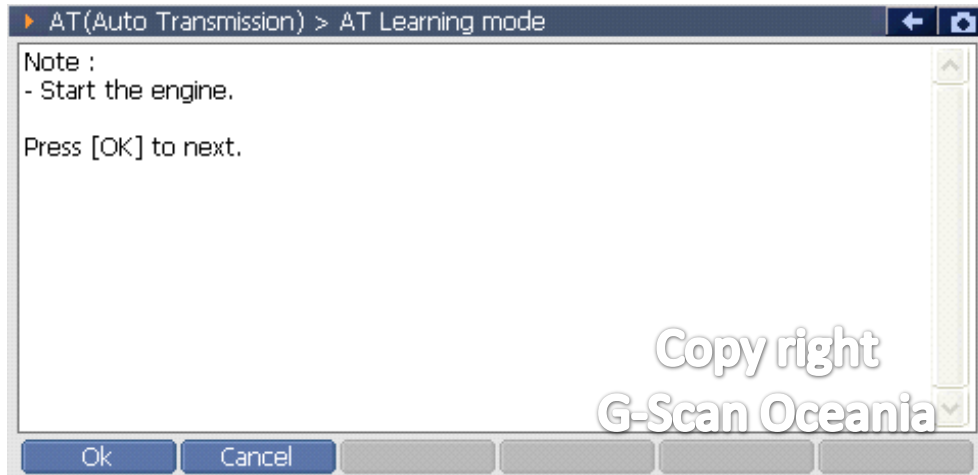


8. Procedure Step3

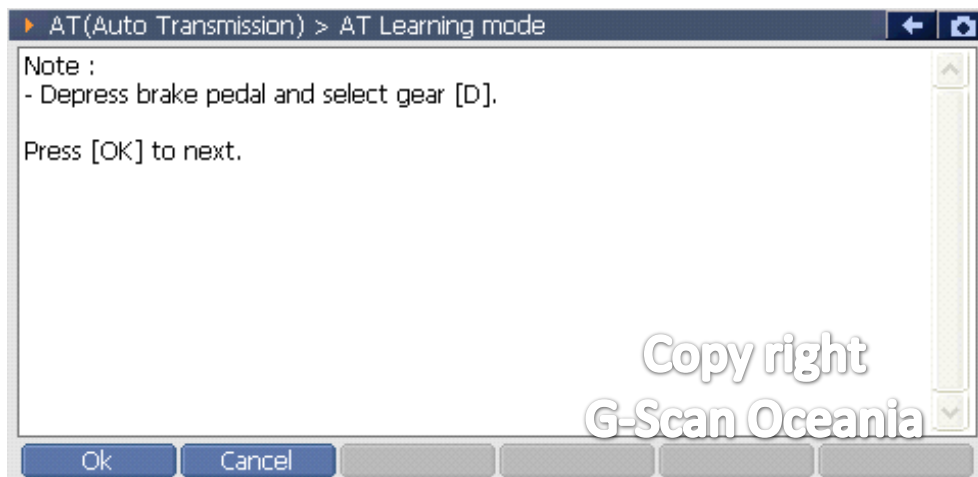

- G-scan will start the bleeding mode. If there appears to be any failure after this screen, please try this function again.

- Some vehicles show an incorrect reaction to this function depending on the vehicle's conditions(e.g. ATF temperature out of range).

9. Procedure Step4

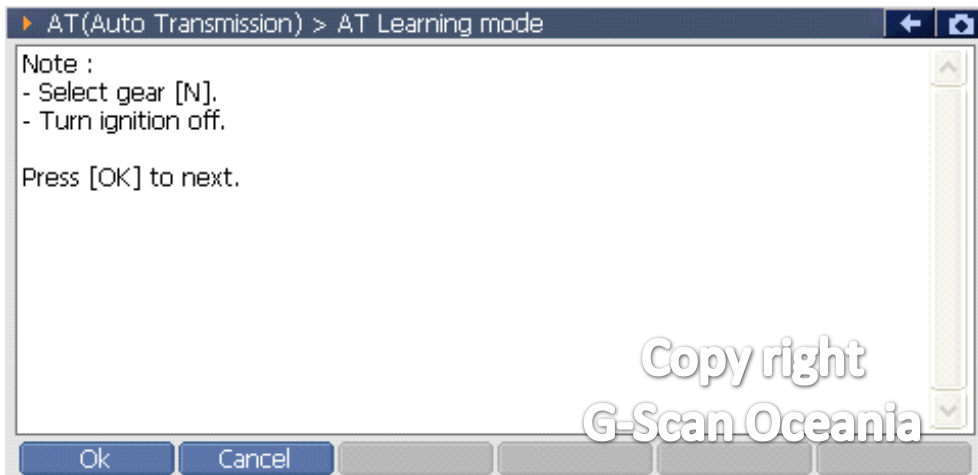

10. Procedure Step5

