



1. Select the VE Commodore V6 engine




2. Select the Special function

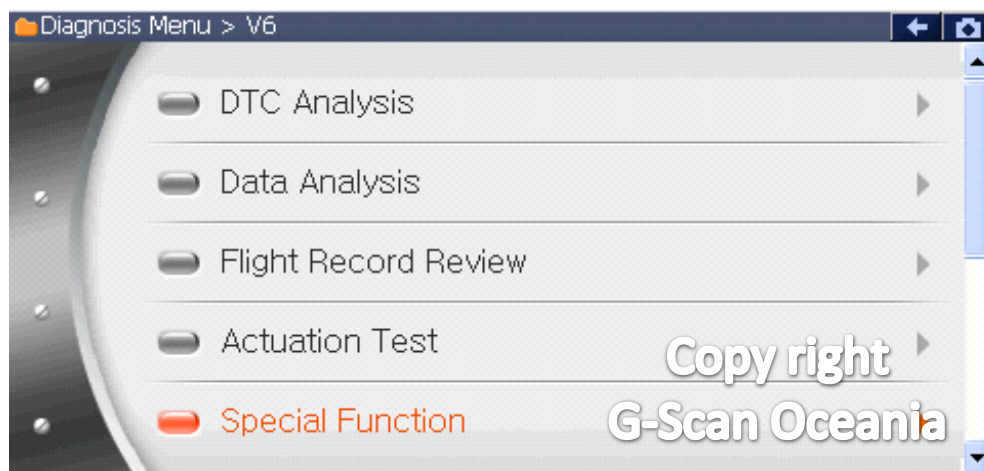


3. Select the Program immobilizer function

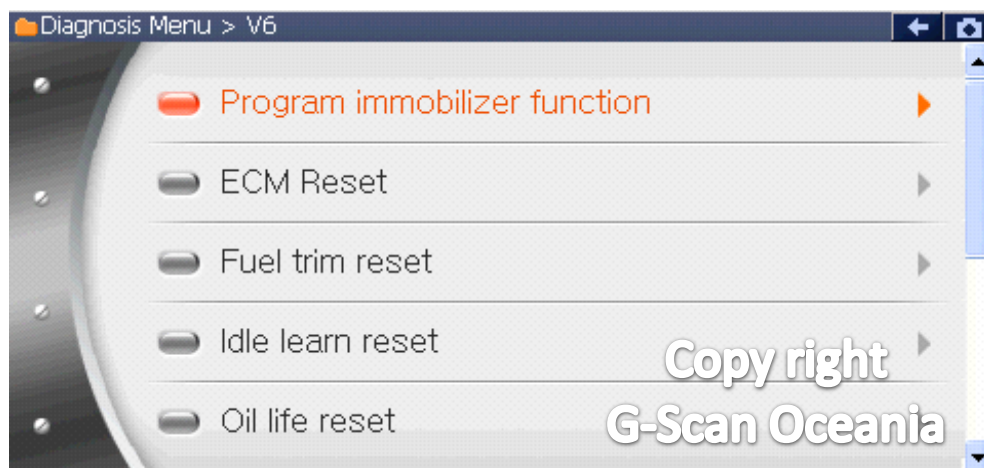

4. Notice

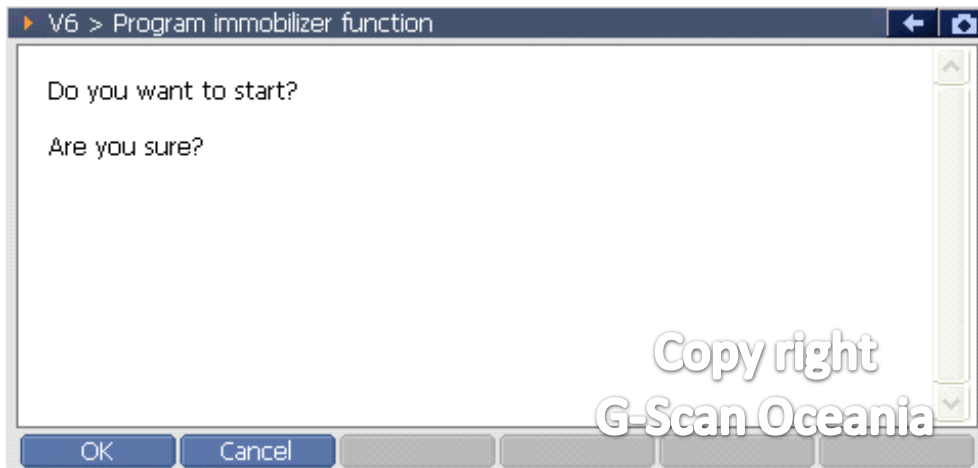


5. Input security code

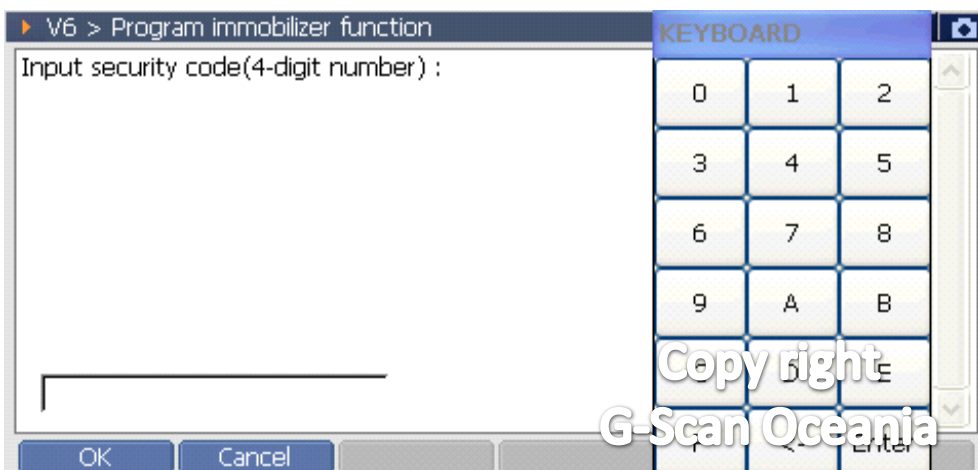

**** After this step, the G-scan shows the remaining time. This will take 10 min.**

6. Ignition off

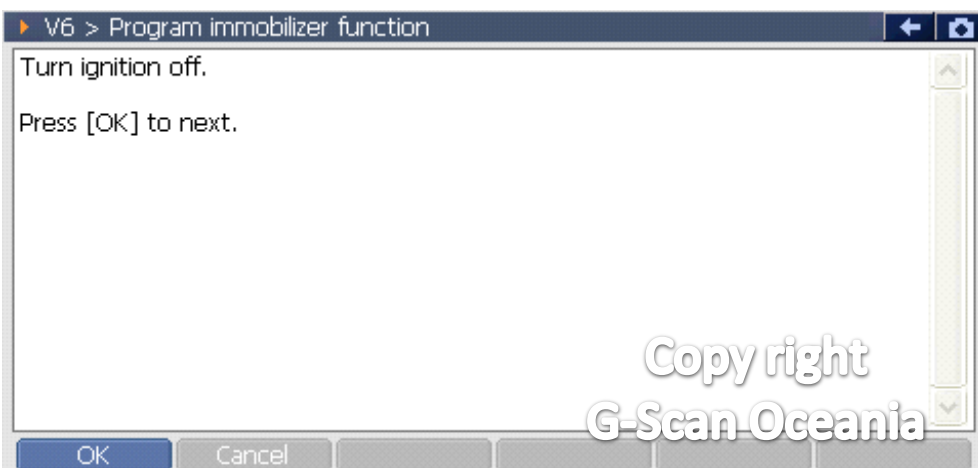

7. Ignition on

