



Select to [Benz] > [V-Class/Transporter] > [ Sprinter 2006 - Present[W906]]  
> [Diesel engine] > [CDI4]

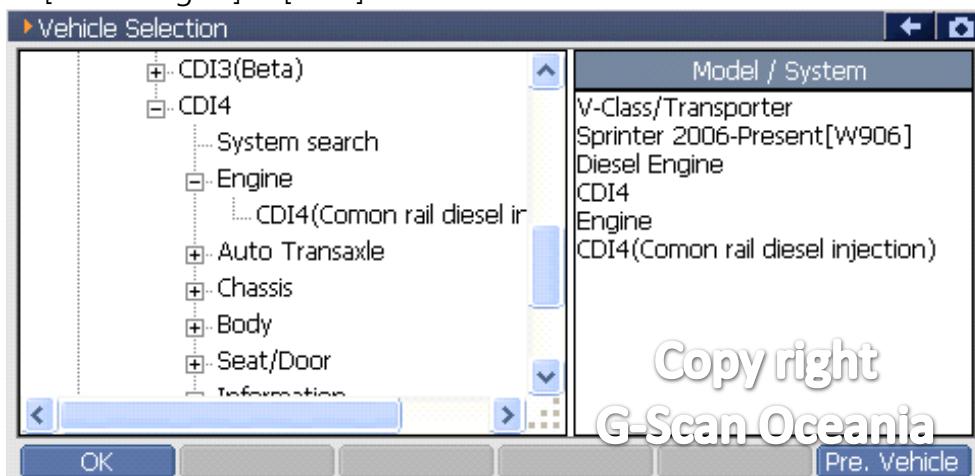

Select to [Special function]



Select to [Pressure regulator valve initialization]

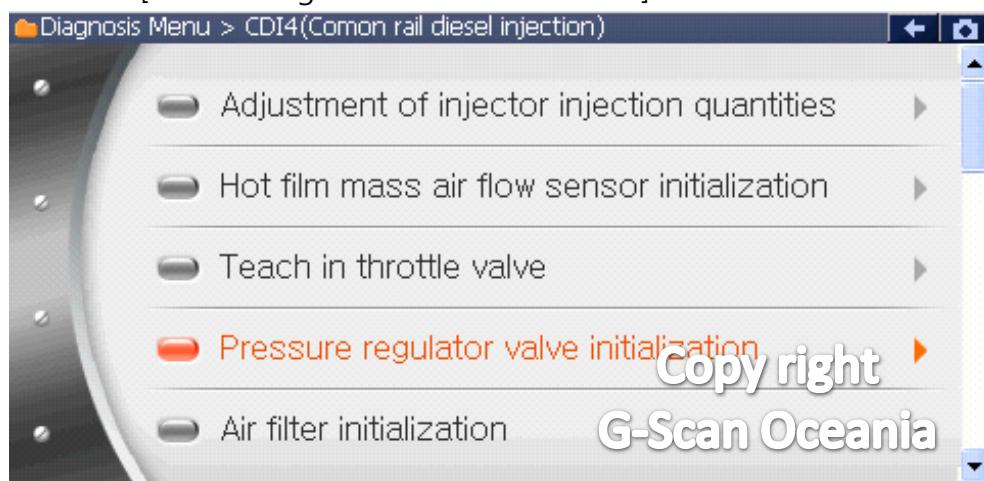

Note 1

▶ CDI4(Comon rail diesel injection) > Pressure regulator valve initialization | ← | ↘

Step 1 - Note :  
- Initialization is necessary after exchahnging component [Rail pressure regulator].

Preconditions :  
- Switch on ignition.  
- Engine stop.

Press [OK] to next.

**Copy right  
G-Scan Oceania**

OK Exit

Note 2

▶ CDI4(Comon rail diesel injection) > Pressure regulator valve initialization | ← | ↘

Step 10 - Turn ignition off.

Press [OK] to next.

**Copy right  
G-Scan Oceania**

Ok Exit

Note 3

▶ CDI4(Comon rail diesel injection) > Pressure regulator valve initialization | ← | ↘

Step 12 - Turn ignition ON

Press [OK] to next.

**Copy right  
G-Scan Oceania**

Ok Exit