


Before programming keys on a Ssangyong C3i ECM, Variant coding may be required as below.

1. Select the ECM menu selection > QUICK SEARCH(TEST) > QUICK SEARCH(TEST) > ECM


2. Select the [Special function]



3. Select the [Variant Coding]

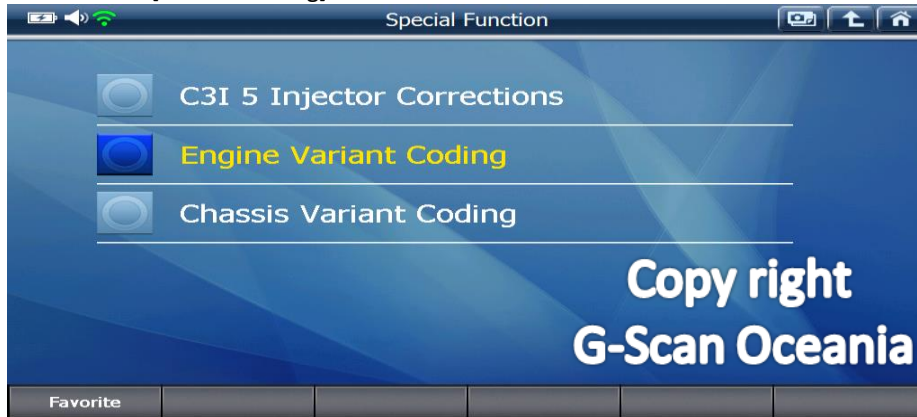

4. Change Item using Touch screen function

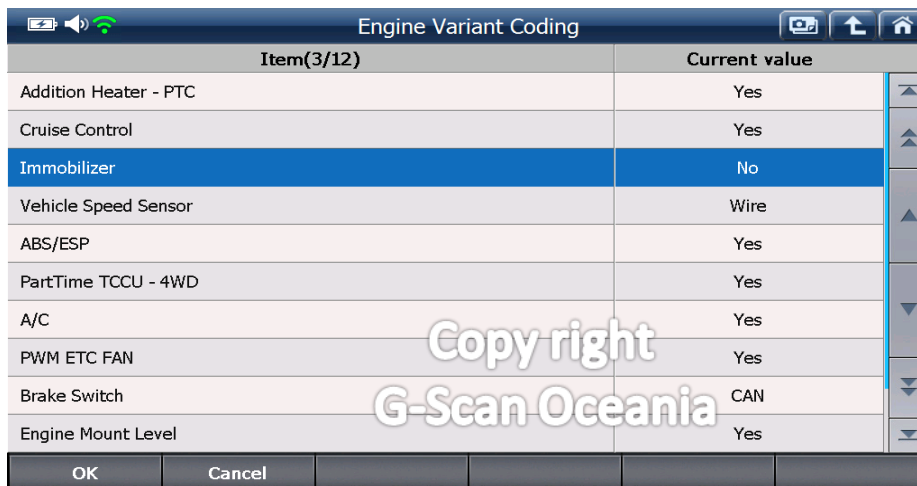

Engine Variant Coding	
Item(3/12)	Current value
Addition Heater - PTC	Yes
Cruise Control	Yes
Immobilizer	Yes
Vehicle Speed Sensor	Wire
ABS/ESP	Yes
PartTime TCCU - 4WD	Yes
A/C	Yes
PWM ETC FAN	Yes
Brake Switch	CAN
Engine Mount Level	Yes
OK Cancel	

5. Input the Date

Engine Variant Coding

Input On The Date(Year/Month/Day)

Year(20xx) : 17

Month(1-12) : 3

Day(1-31) : 14

1

2

3

4

5

6

7

8

9

<-


0

Enter

OK

Cancel

6. Please Wait

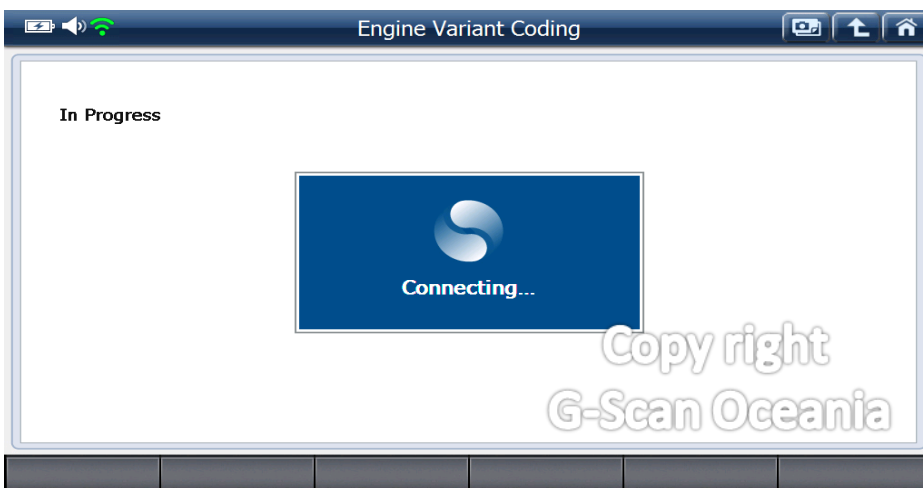

7. Complete

