



** After this function, "Must to do" [Calibration HVAC doors] function and wait 3 minutes.


1. Select the VE Commodore > Body > HVAC system.

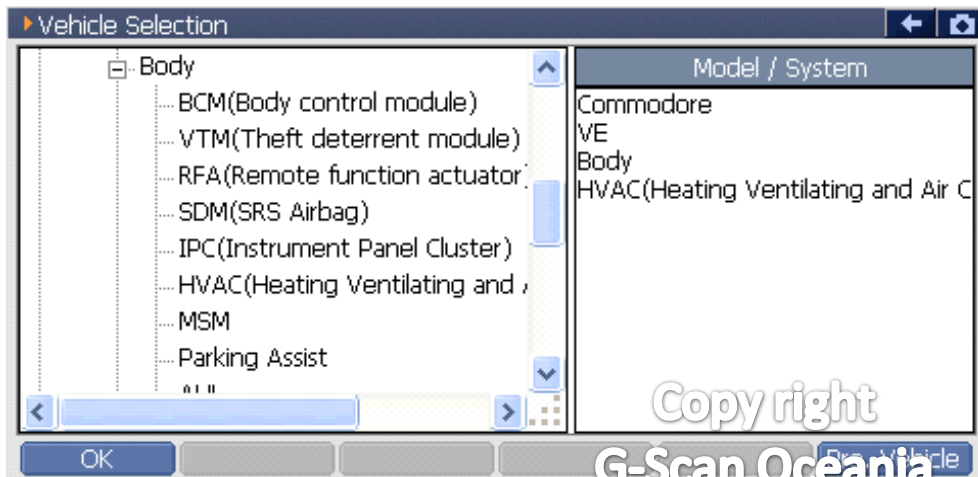


2. Select the [Special function]

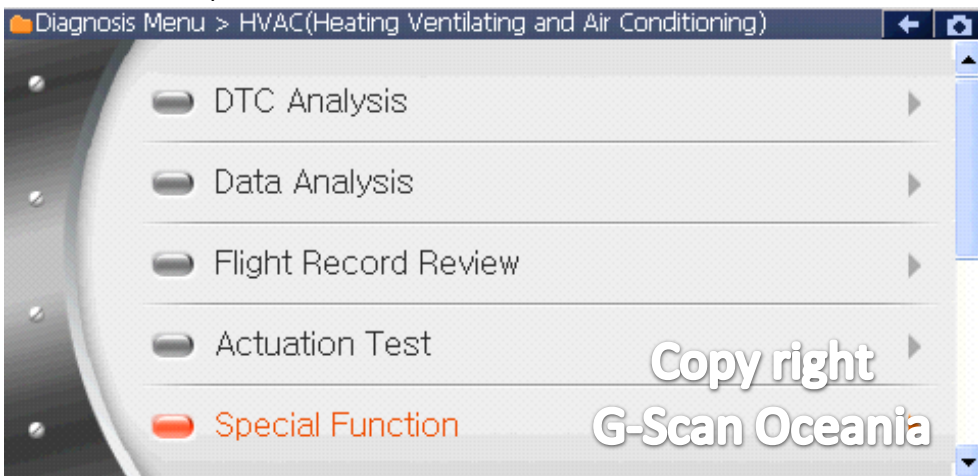


3. Select the [Module installation]

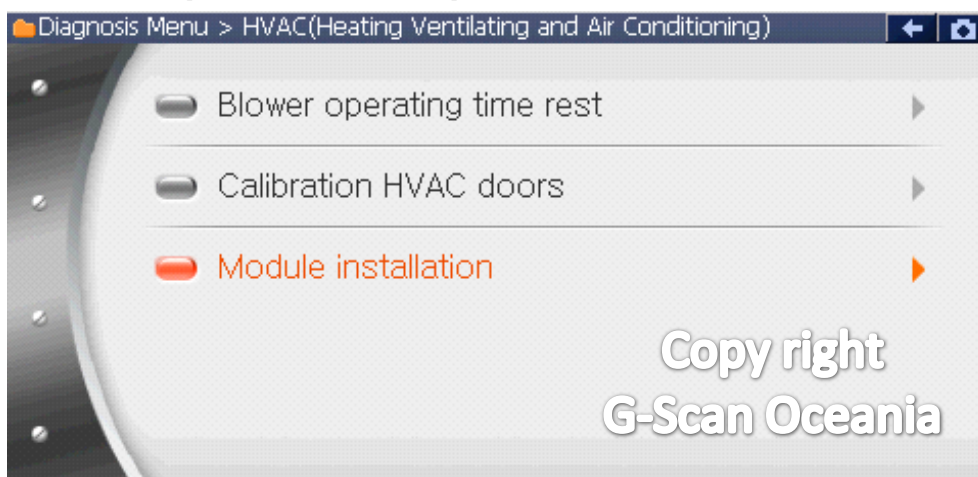


4. Notice.

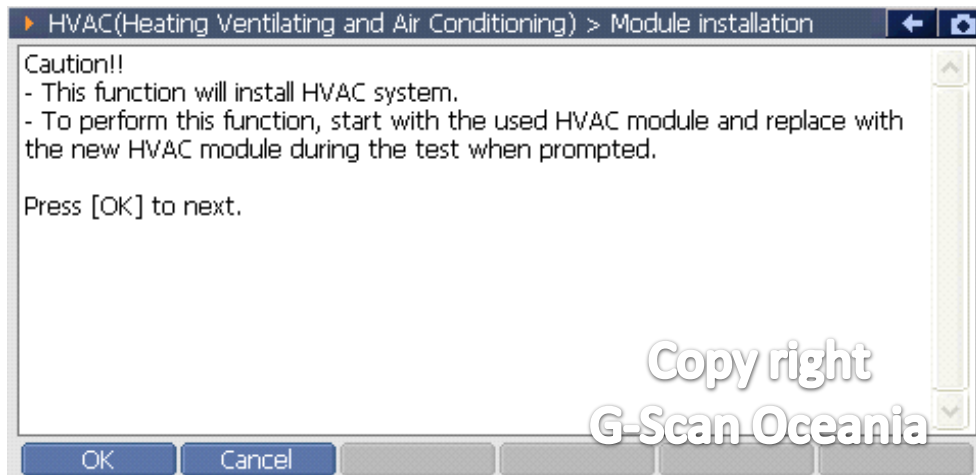


7. Ignition off.

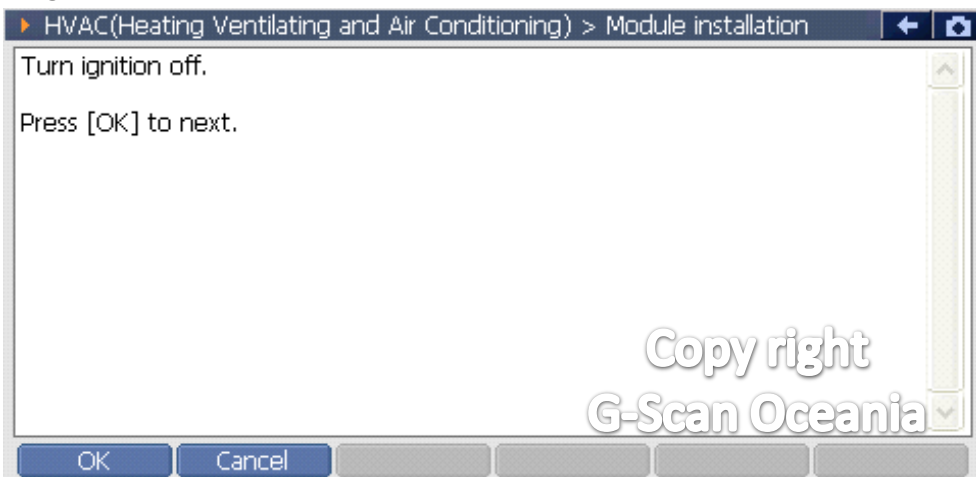


8. Install new ECU.

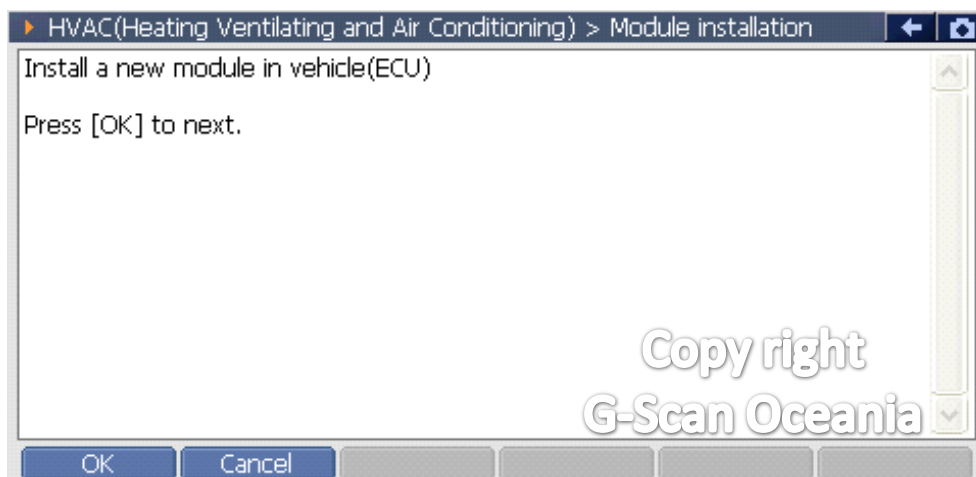

9. Ignition ON

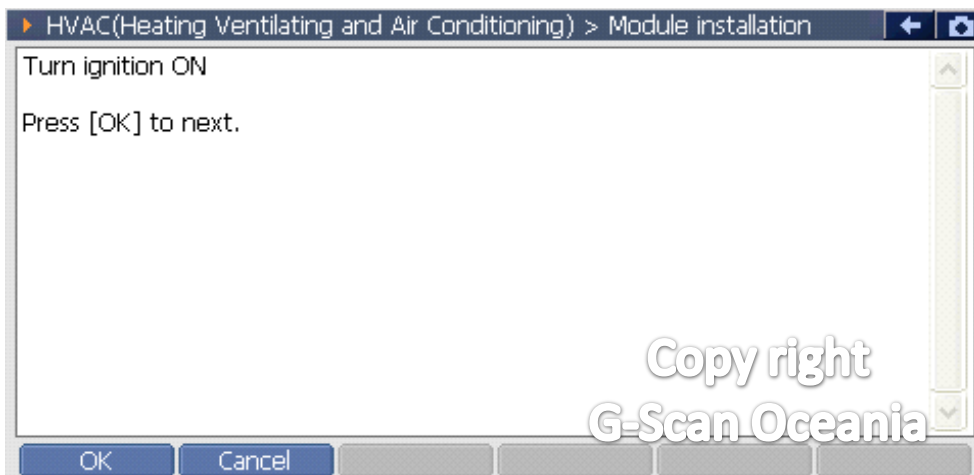

10. Complete.

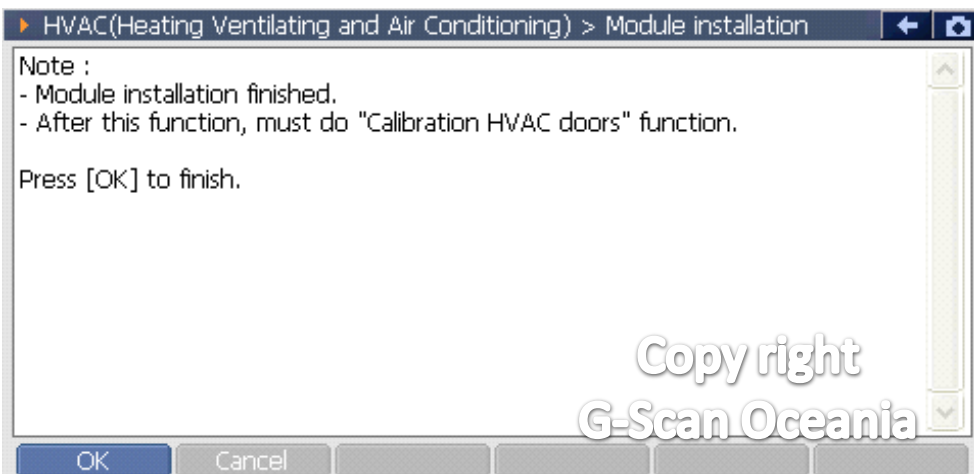

** After this function, must do "Blower operation time reset" function.