




Select to [Benz] > [V-Class/Transporter] > [Sprinter 2006 - Present[W906]]
> [Diesel engine] > [CDI4]

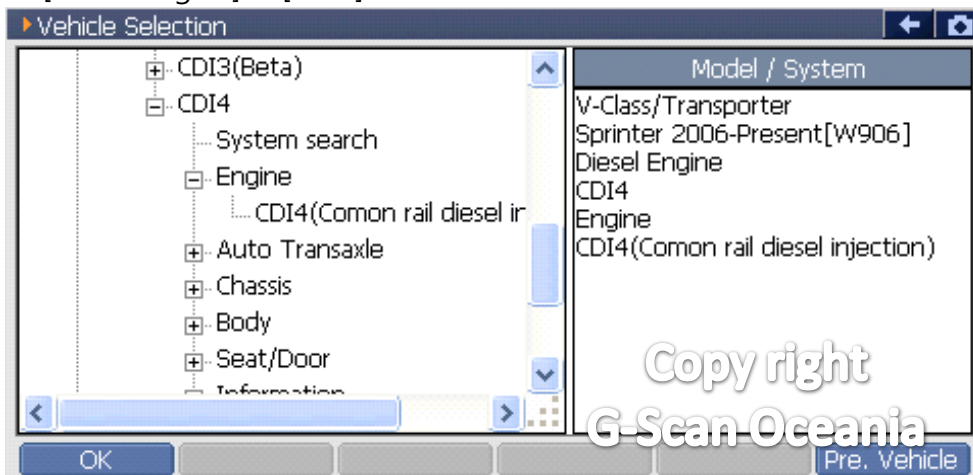

Select to [Special function]

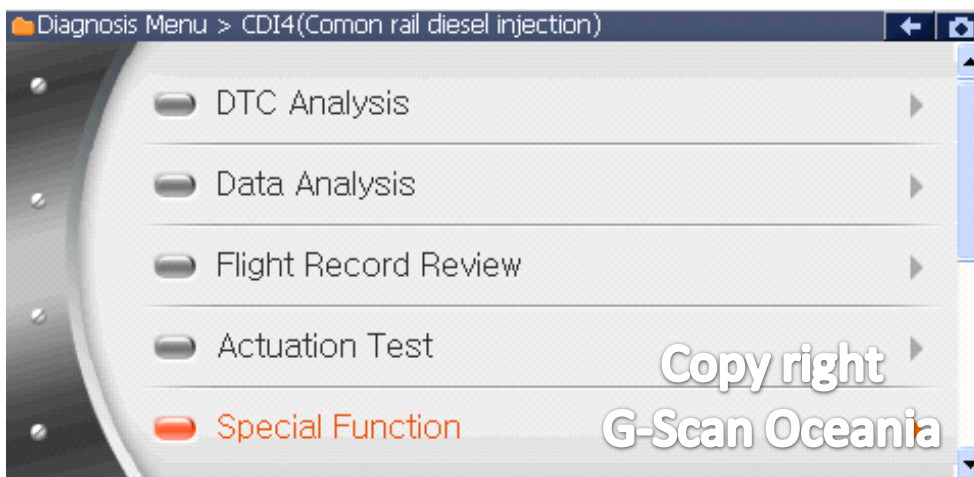


Select to [Hot film mass air flow sensor initialization]

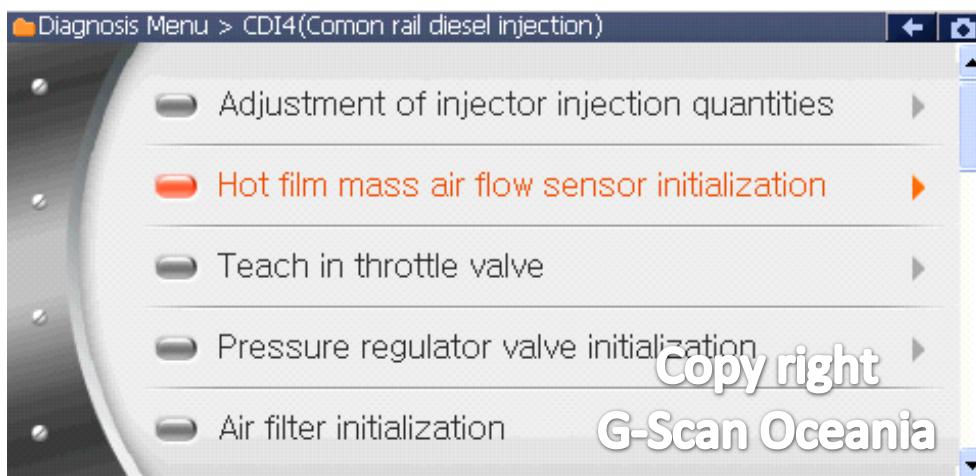

Note 1



Note 2

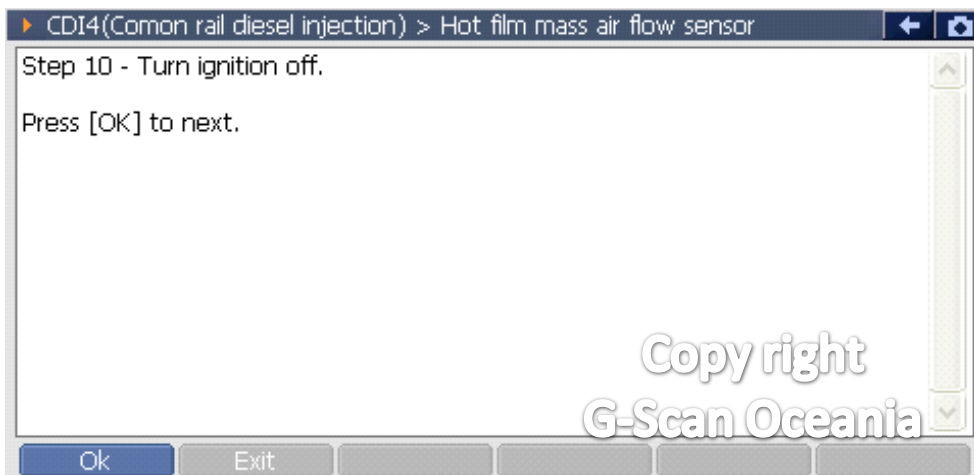

Note 3

