

Caution!! After FG falcon key programming is performed, you must then perform [Parameter reset] to complete the process and be able to start the car!!


Caution!! Before performing Erase and Reprogram keys function, it is important to know that you will need security access codes to complete the Parameter Reset function.

Caution!! If you Erase and reprogram the keys, and cannot complete the Parameter reset function for failure to use correct Incode, the vehicle will remain in a lock down situation.


WARNING!! DO NOT ERASE AND PROGRAM KEYS IF YOU DO NOT HAVE ACCESS TO OBTAIN A CORRECT INCODE TO COMPLETE THE PARAMETER RESET FUNCTION. THE CAR WILL NOT START UNTIL PARAMETER RESET IS COMPLETE.

Caution!! The number of keys programmed must be more than 2. It is possible to program just one key, however if this is done the BEM module will have a DTC code present about the number of keys.


1. Select the FG falcon>BEM

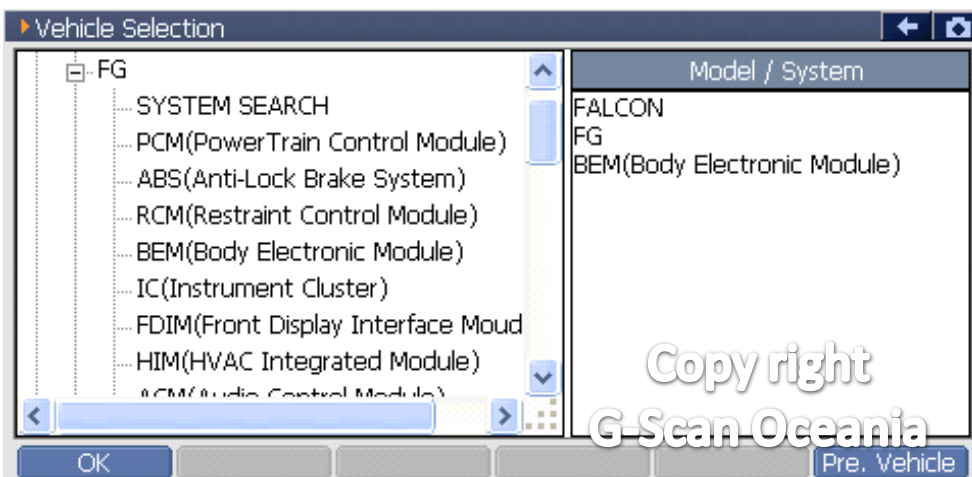


2. Select special function

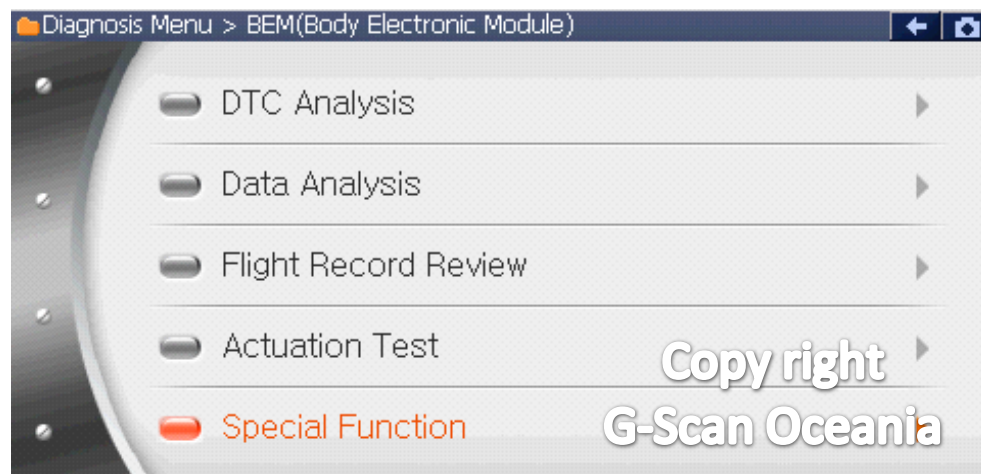


3. Select Erase and program keys.

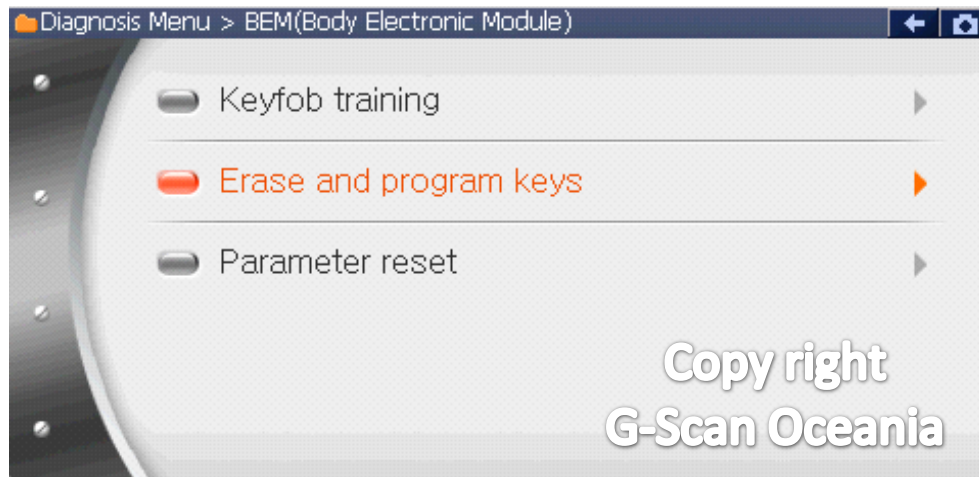


4. Turn ignition on.

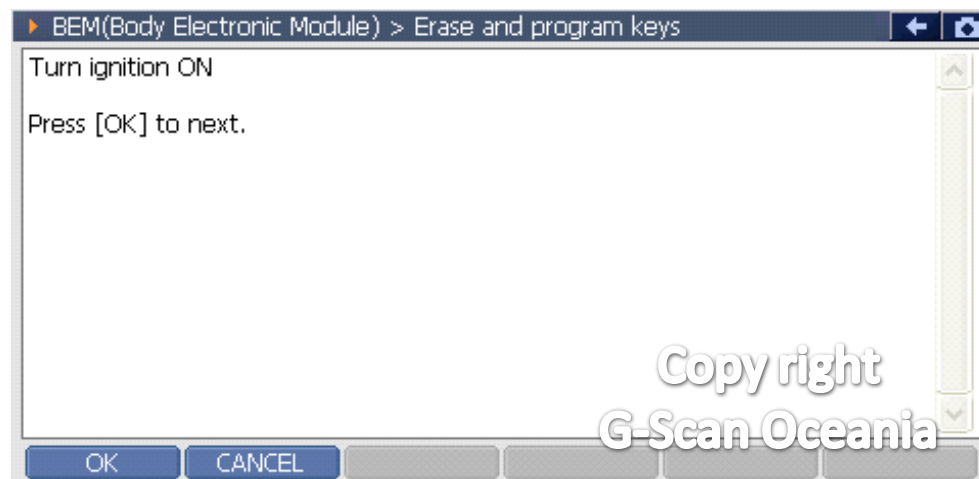

5. Turn ignition to accessories.

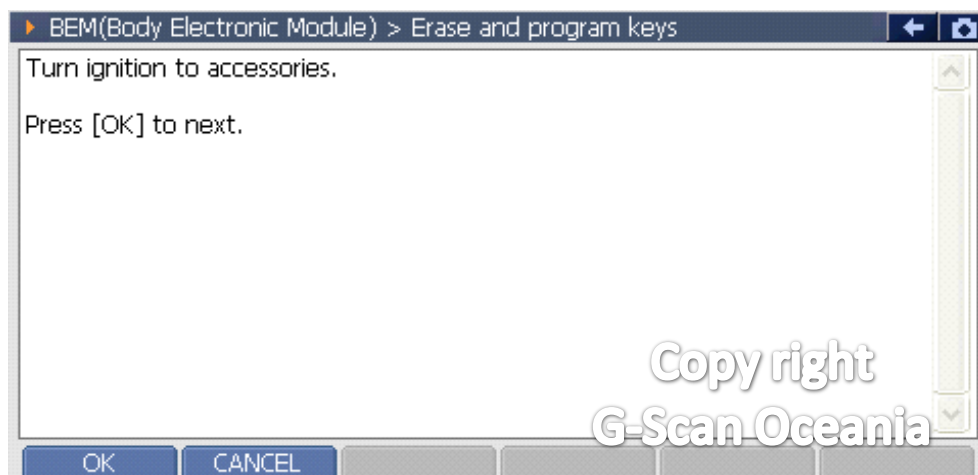


6. Notice.

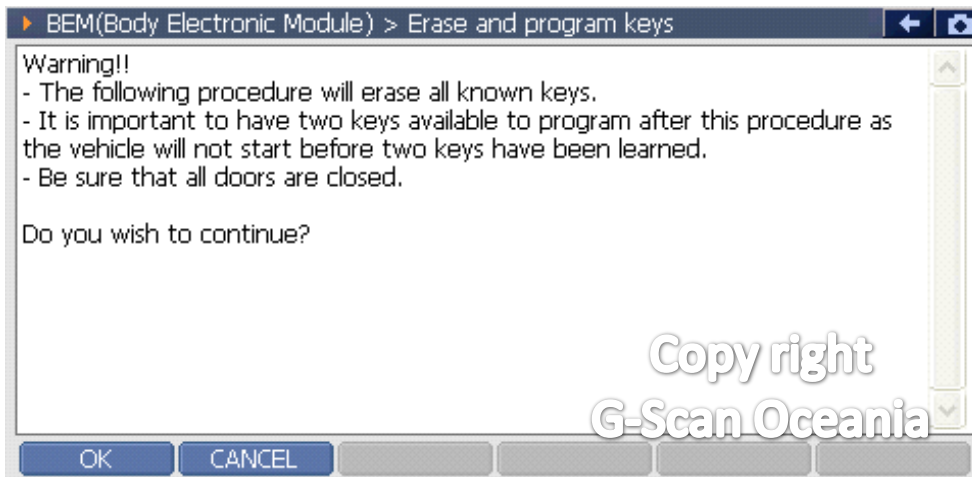

** After this step, G-scan will show the number of keys currently programmed.

7. Key programming instruction.

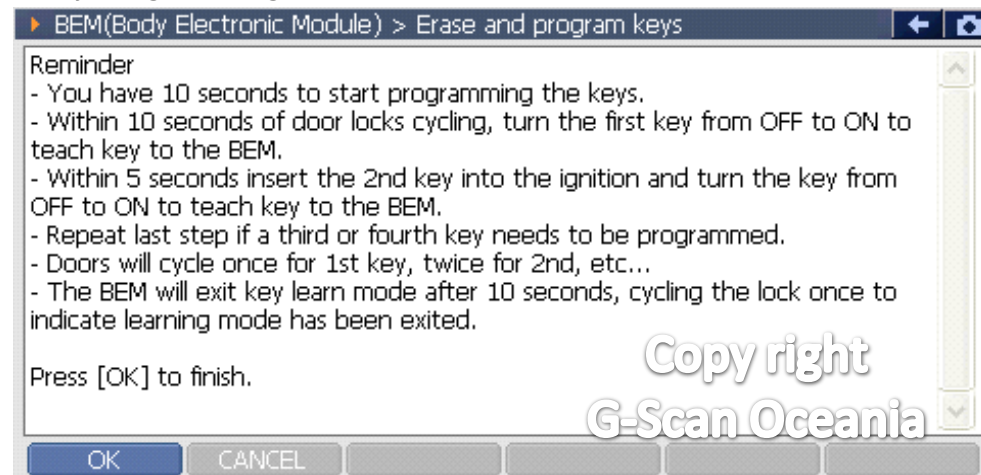

** After this step, G-scan will show the number of keys programmed.

Caution!! After this function, you must then perform [Parameter reset].