1. Select Immobilizer(New Colorado/D-MAX)

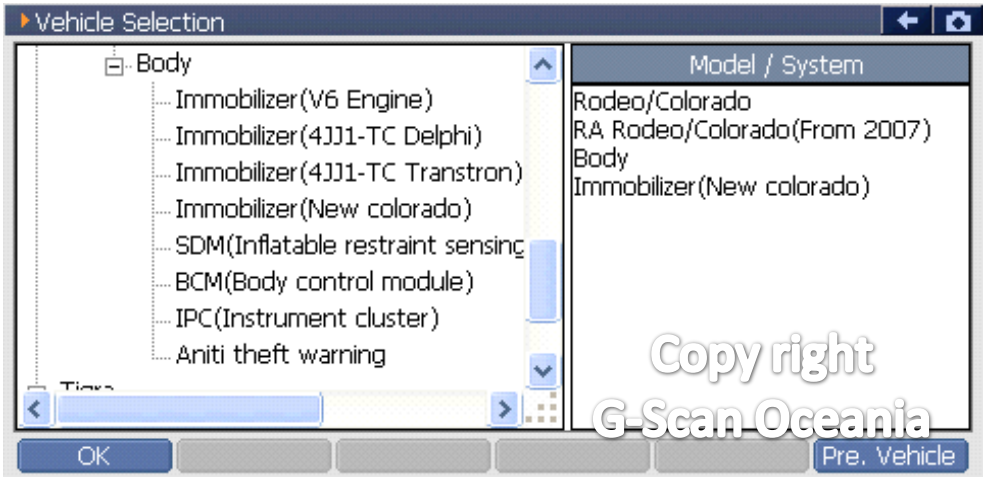

2. Select special function

3. Select Key programming

4. Notice

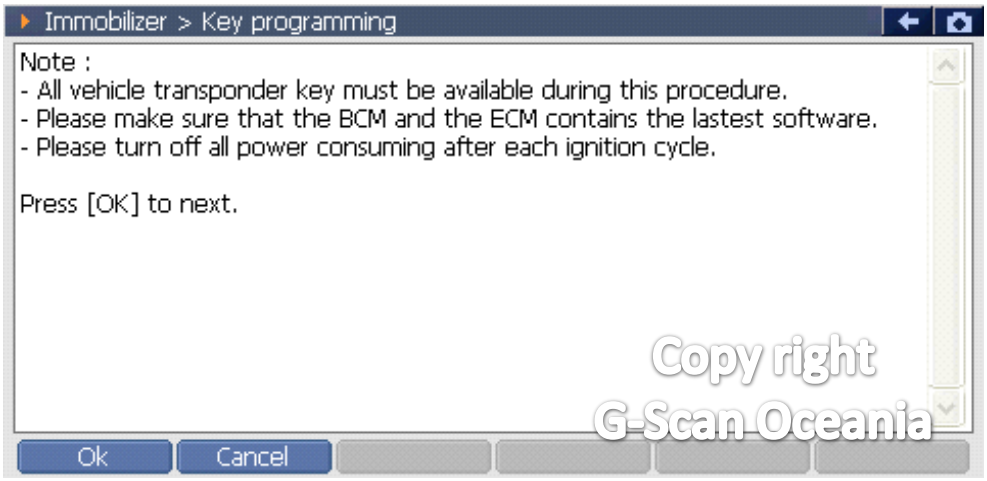

5. Notice

** After this step, G-scan will shown the input security PIN screen.

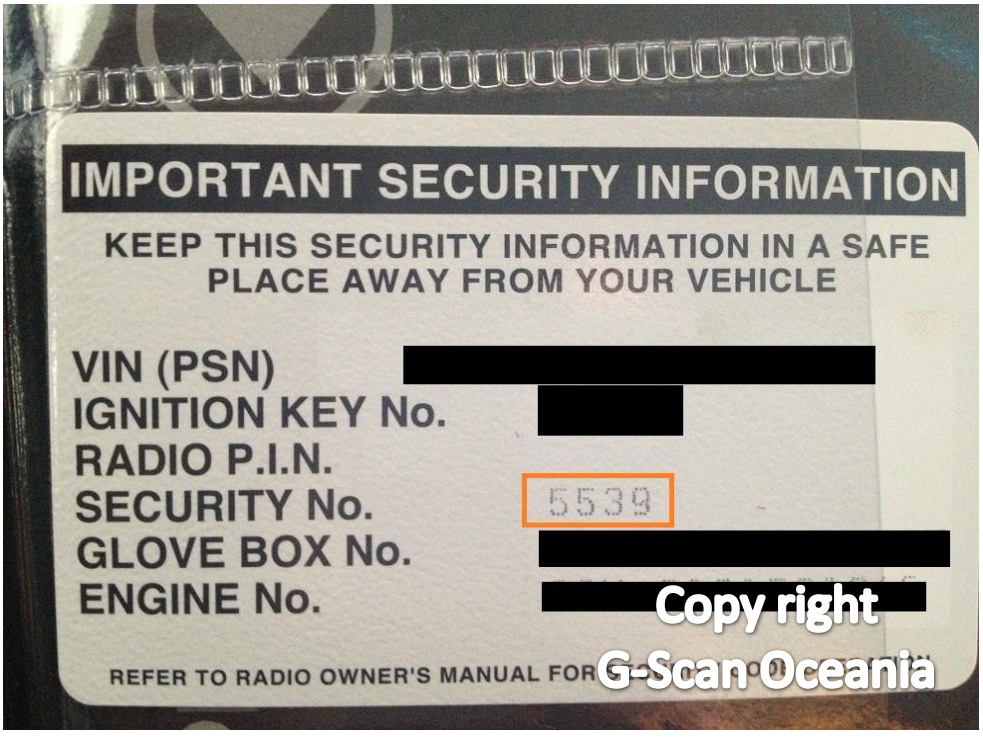

6. Notice

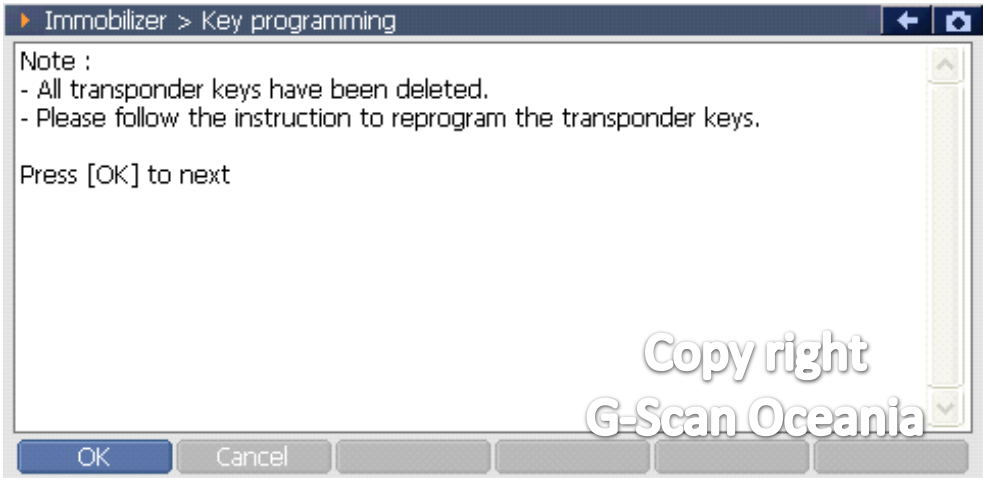

7. Notice

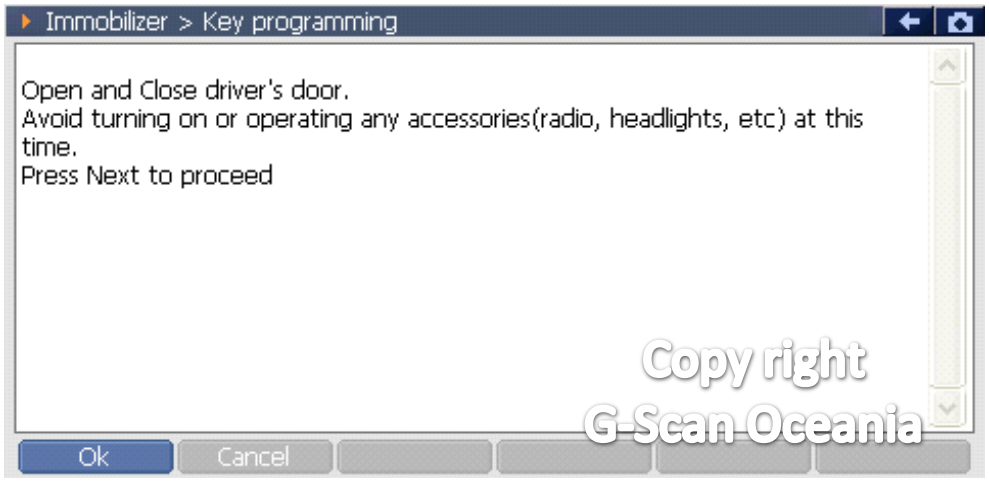

8. Notice

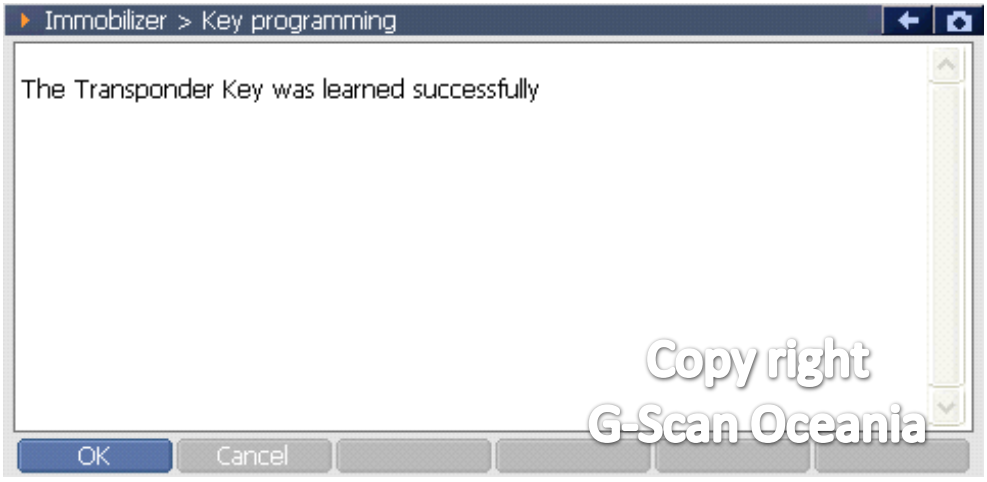

9. Notice

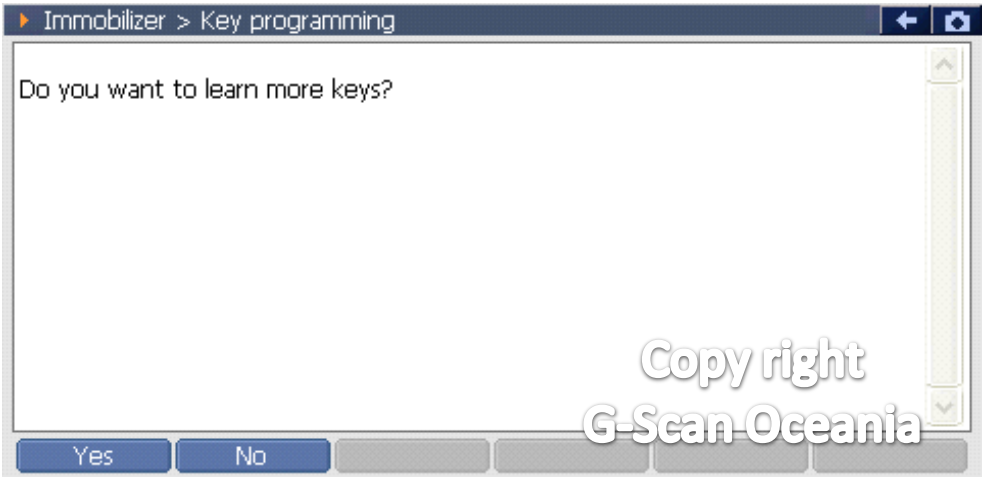

** If you want to learn another keys, press [YES] and follow the procedure.

10. Notice

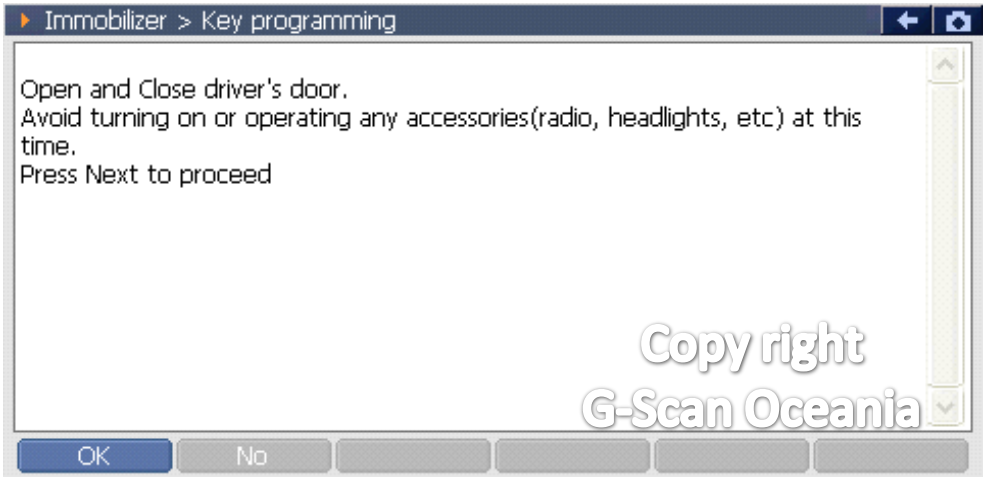
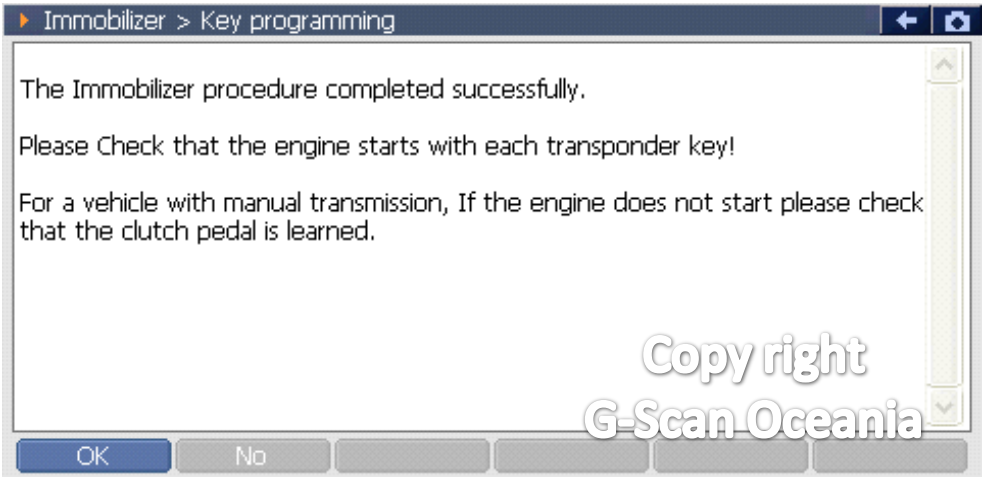
11. Complete.