

Trade Show

AMR 2016

EXHIBITION DATES : MARCH 03 - MARCH 06, 2016

New China International Exhibition Center (NCIEC), Beijing, China

Booth Number: E2A21

2016 TAIPEI AMPA

2016 TAIPEI AMPA EXHIBITION DATES : APRIL 06 - APRIL 09, 2016

TWTC Nangang Exhibition Center, Taipei, Taiwan

Booth Number: M0912

2016 Automechanika Dubai

EXHIBITION DATES : MAY 08 - MAY 10, 2016

Dubai International Convention and Exhibition Centre

Booth Number: Coming soon

We look forward to greeting you there!

Latest Versions(Dec, 2015)

2015-12-09

VASS	V2015.12 / V2014.12SP3	USEN/TWCH/JPJP/MXSP
------	------------------------	---------------------

2015-12-02

SUBARU	V2015.10SP1 / V2014.12SP3 /	USEN/TWCH/JPJP
--------	-----------------------------	----------------

	V2013.12SP6 / V2012.12SP7	
--	---------------------------	--

HONDA/ACURA	V2015.10	USEN/TWCH/JPJP
-------------	----------	----------------

HOLDEN	V2015.10	USEN
--------	----------	------

SYSTEM	V3.04	USEN/TWCH/JPJP
--------	-------	----------------

2015-11-27

BMW Diag F Series	V2015.11 / V2014.12SP3	USEN/TWCH/JPJP/KRKR
-------------------	------------------------	---------------------

2015-11-24

VASS	V2015.10 / V2014.12SP2	USEN/TWCH/JPJP/MXSP
------	------------------------	---------------------

2015-11-15

ISUZU Truck	V2015.10SP1 / V2014.12SP1 /	
-------------	-----------------------------	--

	V2013.12SP1	
--	-------------	--

2015-11-09

LUXGEN	V2015.10 / V2012.12	TWCH
--------	---------------------	------

2015-11-06

PROTON	V2015.10 / V2013.12SP5	USEN/TWCH
--------	------------------------	-----------

JAGUAR	V2015.10	USEN/TWCH/JPJP
--------	----------	----------------

LANDROVER	V2015.10	USEN/TWCH/JPJP
-----------	----------	----------------

TOYOTA/LEXUS	V2015.10 / V2014.12SP2	USEN/TWCH/JPJP
--------------	------------------------	----------------

2015-10-15

FIAT	V2015.09	USEN/TWCH/JPJP
------	----------	----------------

SUBARU	V2015.10 / V2014.12SP2	USEN/TWCH/JPJP
ISUZU Truck	V2015.10 / V2014.12/V2013.12	USEN/TWCH
GM	V2015.10	USEN/TWCH
2015-10-13		
BMW F-CIP	V2015.10 / V2014.12SP3 / V2013.12SP6	USEN/TWCH
MB Coding	V2015.10 / V2014.12SP1	USEN/TWCH
FUSO	V2015.09 / V2014.12 / V2013.12SP2	USEN/TWCH
2015-10-07		
BMW Programming	V2015.09/V2014.12SP2/V2013.12SP6	USEN/TWCH
BMW Encoding Database	V2015.09	
KIA	V2015.08 / V2014.12	USEN/TWCH
PERODUA	V2015.09/V2012.12SP3	USEN
MINI	V2015.09/V2014.12SP1	USEN/TWCH/JPJP/KRKR
iSCAN-II MIN	V7.00	USEN/TWCH/JPJP/KRKR
RENAULT	V2015.09/V2014.12SP1	USEN/TWCH/JPJP

Yearly Update Project (YUP) Software

Software release monthly for:

iScanIIwt /VeDiSII EURO PRO YUP 2015

iScanIIwt /VeDiSII ASIAN PRO YUP 2015

Please get the updates from website.

Technical Guidance

TOYOTA Customize Functions

1. When to perform this function

TOYOTA/LEXUS Vehicle will record user's custom setting items through the body ECU, such as Central locking, Wireless control, Smart key, tailgate and etc.

When the vehicle power disconnected (such as replace battery), the original record of Customize settings will revert to the default, you can use this function to modify the setting items.

2. Function Introduction

Wireless Door Lock: to set Customized functions on Wireless Door Lock, such as Hazard Answer Back, Panic Function, Auto Lock Time and etc.

Door Lock: to set Customized functions on Door Lock, such as Auto Lock, Auto Lock/ Shift, Auto Unlock/Shift and etc.

Warning: to set Customized functions on Warning, such as Driver Side Seatbelt Warning Buzzer, Light Reminder and etc.

How to perform this function utilizing iScan-IIwt or VeDiS-II:

Demo model: 2010~2015 TOYOTA

1. Select Vehicle Diagnostic -> ASIAN



2 Component Test System
(External Modules)
3 IMS²
(Interface Module Simulation
System)
80 OBD-II Standard Compliant
Diagnostics
81 J2534(passthru)
82 e-iSCAN Interface Mode

2 **ASIAN**
3 USA
4 AUSTRALIA

2. Select JAPAN-> TOYOTA

3

ASAIN

1 **JAPAN**
2 KOREA
3 MALAYSIA

4

JAPAN

1 MAZDA
2 DAIHATSU 2014.08 USEN
3 SUZUKI 2014.11 USEN
4 MITSUBISHI 2015.02 USEN
5 ISUZU 2015.05 USEN
6 NISSAN/INFINITI 2015.07 USEN
7 HONDA/ACURA 2015.10 USEN
8 **TOYOTA/LEXUS 2015.10 USEN**
9 SUBARU 2015.10SP1 USEN

3. Select TOYOTA -> OBD II

5

TOYOTA

1 **TOYOTA/LEXUS**
2 AVANZA/RUSH

6

TOYOTA

1 **OBD II**
2 NON-OBD II

4. Select Customize -> Wireless Door Lock

7

Function Menu

1 Diagnosis
2 Work Support
3 Smart Key Register/Erase
4 **Customize**



8

CUSTOMIZE

1 **Wireless Door Lock**
2 Door Lock
7 Warning
2 Work Support
10 Slide Roof

- 14 Unit conversion
- 16 Smart Key/Access
- 17 Compass Calibration
- 18 PSD & PBD operation
- 19 TVSS(Toyota Vehicle Security System)
- 21 Others

5. Select 1. Wireless Operation Switch

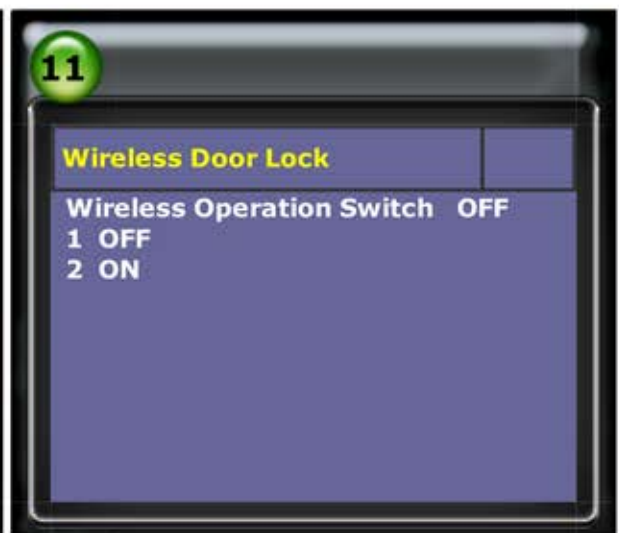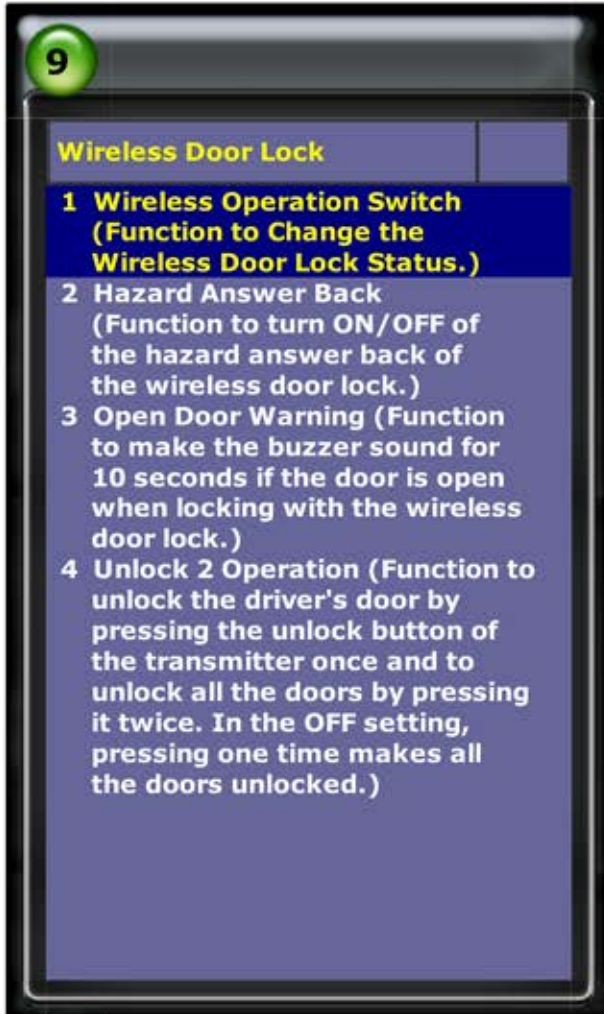

6. Select 2. Hazard Answer Back

12

Wireless Door Lock

- 1 Wireless Operation Switch
(Function to Change the
Wireless Door Lock Status.)
- 2 **Hazard Answer Back**
(Function to turn ON/OFF of
the hazard answer back of
the wireless door lock.)
- 3 Open Door Warning (Function
to make the buzzer sound for
10 seconds if the door is open
when locking with the wireless
door lock.)
- 4 Unlock 2 Operation (Function to
unlock the driver's door by
pressing the unlock button of
the transmitter once and to
unlock all the doors by pressing
it twice. In the OFF setting,
pressing one time makes all
the doors unlocked.)

13

Wireless Door Lock

Hazard Answer Back ON

1 OFF
2 ON

14

Wireless Door Lock

Hazard Answer Back OFF

1 OFF
2 ON

7. Select 3. Open Door Warning

15

Wireless Door Lock

- 1 Wireless Operation Switch
(Function to Change the
Wireless Door Lock Status.)
- 2 Hazard Answer Back
(Function to turn ON/OFF of
the hazard answer back of
the wireless door lock.)

3 Open Door Warning (Function to make the buzzer sound for 10 seconds if the door is open when locking with the wireless door lock.)

4 Unlock 2 Operation (Function to unlock the driver's door by pressing the unlock button of the transmitter once and to unlock all the doors by pressing it twice. In the OFF setting, pressing one time makes all the doors unlocked.)

16

Wireless Door Lock

Open Door Warning **ON**

1 OFF

2 ON

17

Wireless Door Lock

Open Door Warning **OFF**

1 OFF

2 ON

8. Select 4. Unlock 2 Operation

18

Wireless Door Lock

1 Wireless Operation Switch (Function to Change the Wireless Door Lock Status.)

2 Hazard Answer Back (Function to turn ON/OFF of the hazard answer back of the wireless door lock.)

3 Open Door Warning (Function to make the buzzer sound for 10 seconds if the door is open when locking with the wireless door lock.)

4 Unlock 2 Operation (Function to unlock the driver's door by pressing the unlock button of the transmitter once and to unlock all the doors by pressing it twice. In the OFF setting, pressing one time makes all

the doors unlocked.)

19

Wireless Door Lock

Unlock 2 Operation ON

1 OFF

2 ON

20

Wireless Door Lock

Unlock 2 Operation OFF

1 OFF

2 ON

9. Select 5. Panic Function

21

Wireless Door Lock

5 Panic Function (When set to 'ON', this function enables activation of the Theft Deterrent System by pressing the Panic Button for 1.5 seconds. The Lock Button is used when the Panic Button is not available.)

6 Auto Lock Time (This is an item to change the duration of time from unlocking the door(s) with wireless key to re-locking the door(s) automatically.)

7 Wireless Auto Lock (Function of automatically locking doors after unlocking doors with wireless key.)

8 Wireless Buzzer Resp (Function to change the Keyless Entry Buzzer.)

9 Wireless Buzzer Volume (Function to Adjust the Volume of the Wireless Buzzer.)

22

Wireless Door Lock

23

Wireless Door Lock

Panic Function ON
1 OFF
2 ON

Panic Function OFF
1 OFF
2 ON

10. Select 6. Auto Lock Time

24

Wireless Door Lock

5 Panic Function (When set to 'ON', this function enables activation of the Theft Deterrent System by pressing the Panic Button for 1.5 seconds.

The Lock Button is used when the Panic Button is not available.)

6 Auto Lock Time (This is an item to change the duration of time from unlocking the door(s) with wireless key to re-locking the door(s) automatically.)

7 Wireless Auto Lock (Function of automatically locking doors after unlocking doors with wireless key.)

8 Wireless Buzzer Resp (Function to change the Keyless Entry Buzzer.)

9 Wireless Buzzer Volume (Function to Adjust the Volume of the Wireless Buzzer.)

11. Select Auto Lock Time: 30 S/60 S/120 S

25

Wireless Door Lock

Auto Lock Time 30 S

- 1 30 S
- 2 60 S
- 3 120 S

26

Wireless Door Lock

Auto Lock Time 60 S

- 1 30 S
- 2 60 S
- 3 120 S

12. Select 7. Wireless Auto Lock

27

Wireless Door Lock

5 Panic Function (When set to 'ON', this function enables activation of the Theft Deterrent System by pressing the Panic Button for 1.5 seconds.

The Lock Button is used when the Panic Button is not available.)

6 Auto Lock Time (This is an item to change the duration of time from unlocking the door(s) with wireless key to re-locking the door(s) automatically.)

7 Wireless Auto Lock (Function of automatically locking doors after unlocking doors with wireless key.)

8 Wireless Buzzer Resp (Function to change the Keyless Entry Buzzer.)

9 Wireless Buzzer Volume (Function to Adjust the Volume of the Wireless Buzzer.)

28

Wireless Door Lock

Wireless Auto Lock ON

1 OFF

2 ON

29

Wireless Door Lock

Wireless Auto Lock OFF

1 OFF

2 ON

13. Select 8. Wireless Buzzer Resp

30

Wireless Door Lock

5 Panic Function (When set to 'ON', this function enables activation of the Theft Deterrent System by pressing the Panic Button for 1.5 seconds.

The Lock Button is used when the Panic Button is not available.)

- 6 Auto Lock Time (This is an item to change the duration of time from unlocking the door(s) with wireless key to re-locking the door(s) automatically.)
- 7 Wireless Auto Lock (Function of automatically locking doors after unlocking doors with wireless key.)
- 8 Wireless Buzzer Resp (Function to change the Keyless Entry Buzzer.)**
- 9 Wireless Buzzer Volume (Function to Adjust the Volume of the Wireless Buzzer.)

31

Wireless Door Lock	
Wireless Buzzer Resp	ON
1 OFF	
2 ON	

32

Wireless Door Lock	
Wireless Buzzer Resp	OFF
1 OFF	
2 ON	

14. Select 9. Wireless Buzzer Volume


33

Wireless Door Lock	
5 Panic Function (When set to 'ON', this function enables activation of the Theft Deterrent System by pressing the Panic Button for 1.5 seconds. The Lock Button is used when the Panic Button is not available.)	
6 Auto Lock Time (This is an item to change the duration of time from unlocking the door(s) with wireless key to re-locking the door(s) automatically.)	
7 Wireless Auto Lock (Function of automatically locking doors after unlocking doors with wireless key.)	
8 Wireless Buzzer Resp (Function to change the Keyless Entry Buzzer.)	
9 Wireless Buzzer Volume (Function to Adjust the Volume of the Wireless Buzzer.)	


15. Wireless Buzzer Volume: Level 7-max/Level 0-min



16. Select Customize -> Door Lock

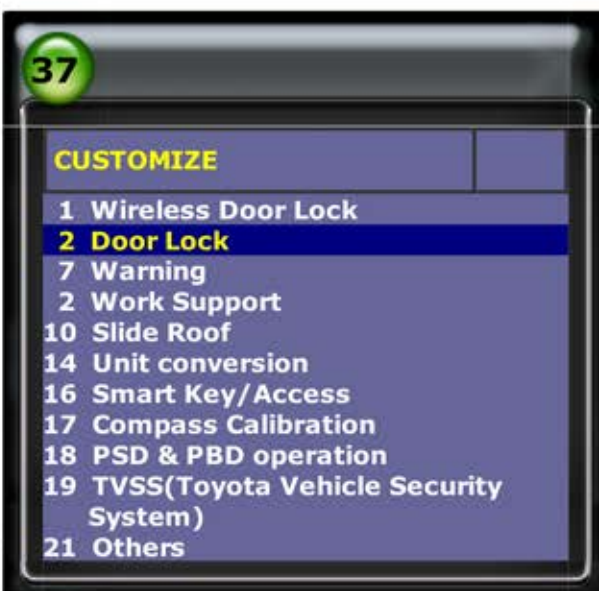

17. Select 1. D-Seat 2 Operation Unlock

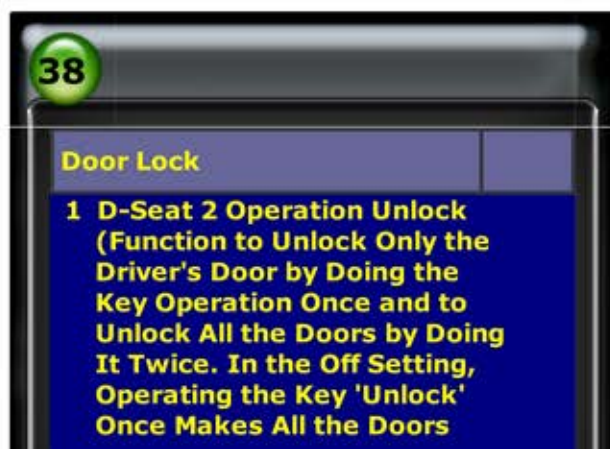

Unlocked.)

- 2 Auto Lock (Function to lock the door when the vehicle reaches to a certain speed.)
- 3 Auto Lock/ Shift (Function to lock the doors when shifting the lever from P range to the range other than P.)
- 4 Auto Unlock/Shift (Function to unlock the doors by shifting the lever to P range from other than P range when the ignition is ON.)
- 5 All Unlock/Open-Close (Function to unlock all the other doors rather than driver's door when the driver's door is opened within 10 seconds after the ignition was switched off.)

39

Door Lock

D-Seat 2 Operation Unlock ON
1 OFF
2 ON

40

Door Lock

D-Seat 2 Operation Unlock OFF
1 OFF
2 ON

18. Select 2. Auto Lock

41

Door Lock

- 1 D-Seat 2 Operation Unlock (Function to Unlock Only the Driver's Door by Doing the Key Operation Once and to Unlock All the Doors by Doing It Twice. In the Off Setting, Operating the Key 'Unlock' Once Makes All the Doors Unlocked.)
- 2 Auto Lock (Function to lock the door when the vehicle reaches to a certain speed.)
- 3 Auto Lock/ Shift (Function to lock the doors when shifting the lever from P range to the range other than P.)
- 4 Auto Unlock/Shift (Function to unlock the doors by shifting the

lever to P range from other than P range when the ignition is ON.)

- 5 All Unlock/Open-Close
(Function to unlock all the other doors rather than driver's door when the driver's door is opened within 10 seconds after the ignition was switched off.)

42

Door Lock

Auto Lock ON
1 OFF
2 ON

43

Door Lock

Auto Lock OFF
1 OFF
2 ON

19. Select 3. Auto Lock / Shift

44

Door Lock

- 1 D-Seat 2 Operation Unlock
(Function to Unlock Only the Driver's Door by Doing the Key Operation Once and to Unlock All the Doors by Doing It Twice. In the Off Setting, Operating the Key 'Unlock' Once Makes All the Doors Unlocked.)
- 2 Auto Lock (Function to lock the door when the vehicle reaches to a certain speed.)
- 3 Auto Lock/ Shift (Function to lock the doors when shifting the lever from P range to the range other than P.)**
- 4 Auto Unlock/Shift (Function to unlock the doors by shifting the lever to P range from other than P range when the ignition is ON.)
- 5 All Unlock/Open-Close
(Function to unlock all the other doors rather than driver's door when the driver's door is opened within 10 seconds after the ignition was switched off.)

45

Door Lock

Auto Lock/Shift ON

- 1 OFF
- 2 ON

46

Door Lock

Auto Lock/Shift OFF

- 1 OFF
- 2 ON

20. Select 4. Auto Unlock / Shift

47

Door Lock

- 1 D-Seat 2 Operation Unlock (Function to Unlock Only the Driver's Door by Doing the Key Operation Once and to Unlock All the Doors by Doing It Twice. In the Off Setting, Operating the Key 'Unlock' Once Makes All the Doors Unlocked.)
- 2 Auto Lock (Function to lock the door when the vehicle reaches to a certain speed.)
- 3 Auto Lock/ Shift (Function to lock the doors when shifting the lever from P range to the range other than P.)
- 4 Auto Unlock/Shift (Function to unlock the doors by shifting the lever to P range from other than P range when the ignition is ON.)**
- 5 All Unlock/Open-Close (Function to unlock all the other doors rather than driver's door when the driver's door is opened within 10 seconds after the ignition was switched off.)

48

Door Lock

49

Door Lock

Auto Unlock/Shift ON
1 OFF
2 ON

Auto Unlock/Shift OFF
1 OFF
2 ON

21. Select 5. All Unlock / Open-Close

50

Door Lock

- 1 D-Seat 2 Operation Unlock (Function to Unlock Only the Driver's Door by Doing the Key Operation Once and to Unlock All the Doors by Doing It Twice. In the Off Setting, Operating the Key 'Unlock' Once Makes All the Doors Unlocked.)
- 2 Auto Lock (Function to lock the door when the vehicle reaches to a certain speed.)
- 3 Auto Lock/ Shift (Function to lock the doors when shifting the lever from P range to the range other than P.)
- 4 Auto Unlock/Shift (Function to unlock the doors by shifting the lever to P range from other than P range when the ignition is ON.)
- 5 All Unlock/Open-Close (Function to unlock all the other doors rather than driver's door when the driver's door is opened within 10 seconds after the ignition was switched off.)**

51

Door Lock


Auto Unlock/Open-Close ON
1 OFF
2 ON

52

Door Lock

Auto Unlock/Open-Close OFF
1 OFF
2 ON



22. Select Customize -> Warning

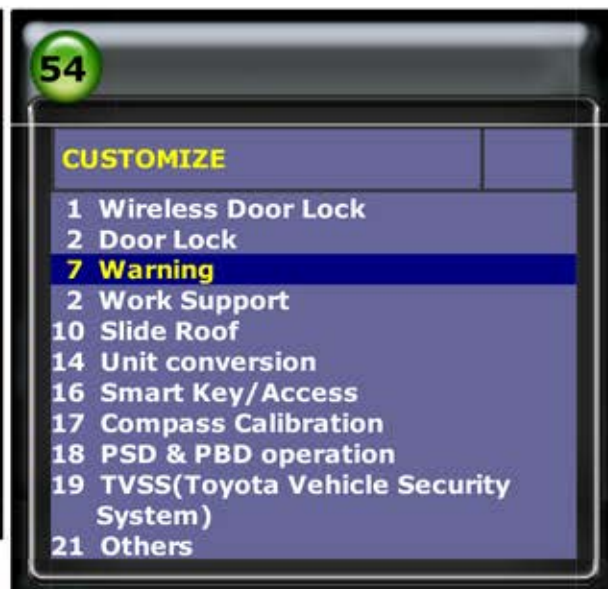

23. Select 1. Key Reminder Sound



24. Select frequency of the key reminder buzzer: Normal / Slow / Fast

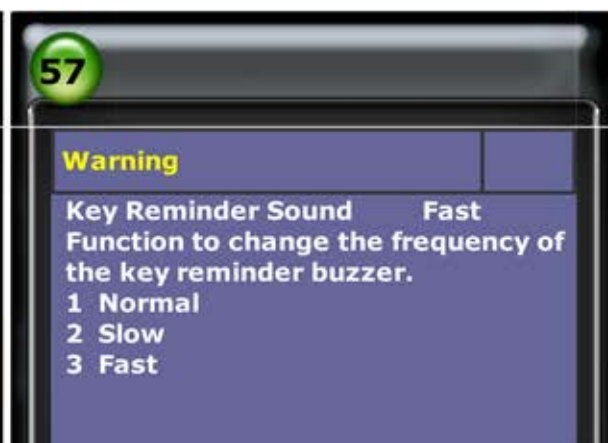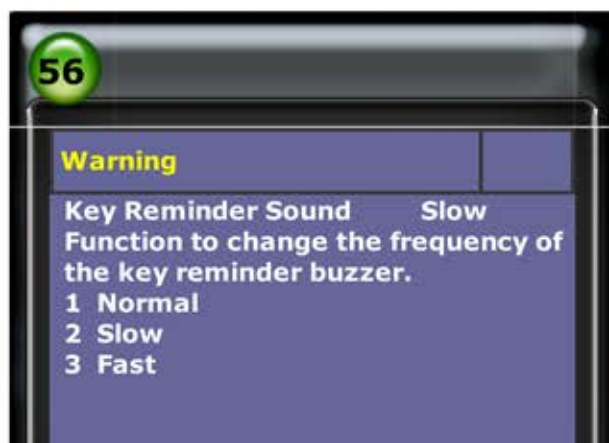

25. Select 2. Driver Side Seatbelt Warning Buzzer



26. Select 3. Light Reminder



Warning

Light Reminder
Function to turn ON/OFF of the light reminder buzzer.

- 1 ON
- 2 OFF

Note: Customized functions vary with different model types.